

SCC Inc.



www.scccombustion.com

Technical Instructions LME-1000

April 29, 2026

LME7... Burner Controls

Combustion Controls

Intentionally Left Blank

Section 1

Overview

Section 2

LME71 Wiring, Parameters,
and Phase Diagrams

Section 3

LME73 Wiring, Parameters,
and Phase Diagrams

Section 4

LME75 Wiring, Parameters,
and Phase Diagrams

Section 5

Commissioning

Section 6

PWM Blowers

Section 7

Troubleshooting

Section 8

Modbus

Section 9

ACS410

Appendix A

Application Guide

Section 1

Overview

Section 2

LME71 Wiring, Parameters,
and Phase Diagrams

Section 3

LME73 Wiring, Parameters,
and Phase Diagrams

Section 4

LME75 Wiring, Parameters,
and Phase Diagrams

Section 5

Commissioning

Section 6

PWM Blowers

Section 7

Troubleshooting

Section 8

Modbus

Section 9

ACS410

Appendix A

Application Guide

Introduction

The LME7 burner control is ideally suited for use in industrial thermal process applications. The LME7 is extremely flexible, and encompasses the following features:

- Accepts standard UV, self-check UV, or self-check IR scanners and/or flame rods
- Integral LED display
- Programmable purge times and safety times
- Programmable actuator positions for purge, ignition, and low fire
- Adjustable time overlap of spark ignition and pilot valve
- Adjustable time overlap of pilot and main gas valves
- Proof-of-closure (POC) switch monitoring
- Modbus RTU or BACnet MS/TP communication
- Optional gas valve proving function
- Password-protected access to OEM parameters
- Integrated actuator control
- Integrated PWM blower control



Figure 1-1: The Main Components of an LME7 System

LME7 System Builder

The LME7 burner control system is comprised of many components. Use the following pages to choose the components needed for your specific application.

Control Panel Components

Base Unit – Qty (1) Required

Choose one of the following LME7 base unit options. See page 11 for mounting information.



LME71.000A1	Flame safeguard, without actuator control, without self-check scanner capability, 110V
LME73.000A1	Flame safeguard, with actuator control, without self-check scanner capability, 110V
LME75.000A1	Flame safeguard, with actuator control, with self-check scanner capability, 110V

Program Module – Qty (1) Required

Choose one of the following PME7 program modules. The program module contains the program sequence used to operate the burner.



	Base Unit	Controls Actuator	Actuator Control Can Be Disabled	Controls PWM Blower	POC	Flame Rod	Non-Self-Checking UV Scanner	Self-Checking UV or IR Scanner	Valve Proving	Purge	Independent Ignition Position	Analog Input for Fire Rate
PME71.111A1	LME71.000A1				•	•	•			•		
PME71.112A1					•	•	•					
PME71.901A1				•	•	•	•		•	•		•
PME73.811A1	LME73.000A1	•			•	•	•		•	•		•
PME73.812A1		•			•	•	•			•	•	•
PME73.831A1		•				•	•		•	•	•	•
PME73.840A1		•	•			•	•	•		•	•	
PME75.811A1	LME75.000A1	•	•		•	•		•	•	•		•
PME75.812A1		•	•		•	•		•		•	•	•
PME75.831A1		•	•			•		•	•	•	•	•
PME75.901A1					•	•	•	•	•	•		

Plug Set – Qty (1) Required

The terminal plug set for the LME7 is sold separately. Each LME7 needs one plug set.

**AGG3.710**

Plug set containing all terminals for an LME7 system

LME7 Package - Optional

For convenience, the LME7 base unit, PME7 program module, and AGG3.710 plug set can be ordered as a package that is shipped pre-assembled.

**LME71.111A1PKG**

LME71.000A1 with PME71.111A1 program module and AGG3.710 plug set installed

LME71.112A1PKG

LME71.000A1 with PME71.112A1 program module and AGG3.710 plug set installed

LME71.901A1PKG

LME71.000A1 with PME71.901A1 program module and AGG3.710 plug set installed

LME73.811A1PKG

LME73.000A1 with PME73.811A1 program module and AGG3.710 plug set installed

LME73.812A1PKG

LME73.000A1 with PME73.812A1 program module and AGG3.710 plug set installed

LME73.840A1PKG

LME73.000A1 with PME73.840A1 program module and AGG3.710 plug set installed

LME75.811A1PKG

LME75.000A1 with PME75.811A1 program module and AGG3.710 plug set installed

LME75.812A1PKG

LME75.000A1 with PME75.812A1 program module and AGG3.710 plug set installed

LME75.831A1PKG

LME75.000A1 with PME75.831A1 program module and AGG3.710 plug set installed

LME75.901A1PKG

LME75.000A1 with PME75.901A1 program module and AGG3.710 plug set installed

Remote Display – Optional

Each LME7 can be equipped with a remote display that provides additional status information not shown by the integral LED display on the LME7. Either the remote display or the ACS410 software are required to change parameter settings on the LME7. See page 12 for mounting information and panel cutout dimensions.



AZL23.00A9

Backlit remote display

Remote Display Cable – Qty (1) Required if Using the AZL23.00A9 Remote Display

This cable is required when using an AZL23 display to connect the AZL23 to the LME7 base unit.



TDCCOMBO

Pre-made 7-foot cable and adapter for connecting the AZL23 display to the LME7 base unit

Interface Modules and Accessories – Optional

A separate interface module is required for Modbus or BACnet MS/TP communication with the LME7.



OCI460.10

Modbus RTU and Modbus TCP/IP interface module



AGG7.901

OCI460.10 complete plug set



OCI417.10

Modbus RTU and BACnet MS/TP interface module



TDC207

7-foot cable to connect OCI417.10 to LME7 base unit



AGA5-05M

OCI417.10 programming cable, USB type A to mini B



AGA15-24

24VDC, 15.2W power supply to power OCI417.10

Fuses - Optional

The LME7... base units do not have a built-in replaceable fuse. It is recommended to install an external fuse on the incoming power to the LME7.

**FUSE6.3A-SLOW**

5-pack of 6.3A, 250V, 5x20mm, slow blow fuses

Actuators and AccessoriesActuator – Qty (1) Optional with LME73 and LME75 Burner Controls

SQM4... and SQM5... series actuators are available for use with the LME73 and LME75 burner controls. For more information on SQM4... actuators, refer to Document No. N7817. For more information on SQM5... actuators, refer to Document No. 155-517P25.

**SQM4...**


45-160 in-lb torque, NEMA 4 standard, up to three adjustable switches, zero and span adjustment

**SQM5...**

90-400 in-lb torque, NEMA 4 optional, auto/manual toggle switch, six adjustable position switches, zero and span adjustment

Couplings – Optional

Zero-lash, flexible couplings are available for SQM... actuators. For more information, refer to Document No. CPBK-1500.

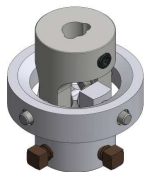**Cxx...**

Flexible couplings for SQM... actuators

Actuator Mounting Bracket Kits - Optional

Modular bracket kits are available to assist in mounting an SQM... actuator to a variety of valves or dampers. A coupling is necessary when using a modular bracket kit. For more information, refer to Document No. CPBK-2000.



BR-AS...

Modular bracket kits for mounting SQM... actuators to a variety of valves or dampers

Flame Scanners

Flame Scanners – Qty (1) Required Unless Using a Flame Rod

Four flame scanners are available for use with the LME7. For technical information about these flame scanners, refer to Document No. N7711 for the QRA4.U, Document No. N7719 for the QRI... flame scanners, and Document No. N7712 for the QRA75.A17.



QRA4.U

Ultraviolet (UV) flame scanner, non-self-checking, forward viewing, with 3/4" NPSM connection, for use with LME71 or LME73 base units



QRA75.A17

Ultraviolet (UV) flame scanner, self-checking, side viewing, for use with LME75 base units



QRI2A2.B180B

Infrared (IR) flame scanner, self-checking, forward viewing, for use with LME75 base units



QRI2B2.B180B

Infrared (IR) flame scanner, self-checking, side viewing, for use with LME75 base units

Flame Scanner Accessories

QRA75 Wiring Cable – Qty (1) Required per QRA75.A17 Flame Scanner

A pre-made 12-foot cable is required when using the QRA75.A17 flame scanner. For more information, refer to Document No. N7712.



AGM23U

Pre-made 12-foot cable for use with the QRA75.A17 flame scanner. Supplied with 1/2" NPSM conduit adapter

QRA75.A17 Accessories – Optional

Mounting accessories are available for the QRA75.A17 flame scanner. For more information, refer to Document No. N7712.



AGG16.U

Right angle adapter for mounting a QRA75 flame scanner. Comes with a 1" NPSM female thread connection



THERMAL-1X75

Thermal barrier for use with the QRA75 flame scanner along with accessory AGG16.U. Adapts a 1" NPSM thread to a female 3/4" NPT connection



AGG02

Heat insulating lens with spring washer and O-ring, for applications where the temperature at the scanner will exceed 176 °F. To be mounted inside thermal barrier THERMAL-1X75






AGG03

Magnifying lens with spring washer and O-ring for increased sensitivity, to be mounted inside thermal barrier THERMAL-1X75




QRI... Accessories – Optional

Mounting accessories are available for both the forward viewing and side viewing QRI... flame scanners. For more information, refer to Document No. N7719.

	AGG2.110	Kit for mounting forward viewing scanner QRI2A2.B180B on a flame tube. Comes with clamp, mounting sleeve, thermal barrier with 3/4" NPSM connection, and heat insulation glass
	AGG2.120	Pg9 thread to 1/2" NPSM conduit connection adapter for use with any QRI... flame scanner
	AGG90.U	Right angle adapter for mounting side viewing scanner QRI2B2.B180B on a flame tube. Comes with 3/4" NPSM female thread connection

Additional Flame Scanner Accessories – Optional

Additional accessories are available for flame scanners to prevent excessive heat from getting to the scanner. For more information, refer to Document No. N7711 and N7712.


	THERMAL-75X75	Thermal barrier for use with the QRA4.U flame scanner, and QRI2B2.B180B flame scanner when used with right angle adapter AGG90.U. Adapts a 3/4" NPSM thread to a female 3/4" NPT connection. Rated for scanner tube temperatures up to 250 °F
	AGG02-SR	Heat insulating lens with spring washer and O-ring, for applications where the temperature at the scanner will exceed 176 °F. To be mounted inside thermal barrier THERMAL-75X75
	THERMAL-75X75-SR	Fully assembled THERMAL-75X75 thermal barrier with AGG02-SR heat insulating lens for use with the QRA4... flame scanners, and QRI... flame scanners when used with right angle adapter AGG90.U

ACS410 Software for Laptop

The ACS410 software for the LME7 offers many features including parameter backups, startup reports, and trending. The software may be downloaded at www.scccombustion.com.

ACS410 Cables – Qty (1) Required if Using the ACS410 Software


To use the ACS410 software, cables are necessary to connect the LME7 to a PC.

	OCI410.20	User-level PC interface module and cable. Permits access to user level parameters only without the ability to perform parameter backups
	OCI410.30	Service-level PC interface module and cable. Permits access to user and service level parameters only without the ability to perform parameter backups
	OCI410.40	OEM-level PC interface module and cable. Permits access to all parameters and the ability to perform parameter backups

Enclosures

Enclosures - Optional

A small NEMA 1 enclosure is available for use with any LME7... base unit. Three ½" conduit knockouts are available on both the top and the bottom of the enclosure.

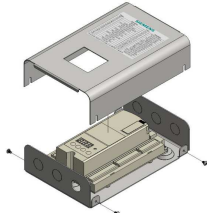	LME7-ENC-KT	NEMA 1 enclosure for any LME7... base unit
---	--------------------	--

Training Equipment

Manuals - Optional

Technical manuals are available to help OEMs and field technicians program and use the various features of the LME7.



LME7 BOOK

A hard copy of the LME7 technical instructions
LME-1000

Mounting

LME7 Controller

The LME7 must be mounted inside an enclosure that will protect it from dirt and moisture. The unit should be mounted with three #8 screws (not provided). The panel, which the unit sits on, should be drilled and tapped to accommodate these screws.

During the mounting process, consideration should be given to the various plugs and wires that must be attached to the LME7. Electrical connections are made via plugs that are located in the face of the unit with wires coming out to the top, left side, and right side of the unit. A space of at least one inch is recommended above, to the left, and to the right of the LME7. The recommended total space to leave for the LME7 is 8" x 6.75" x 3" because the overall dimensions of the LME7 are 7.09" x 4.72" x 2.07".

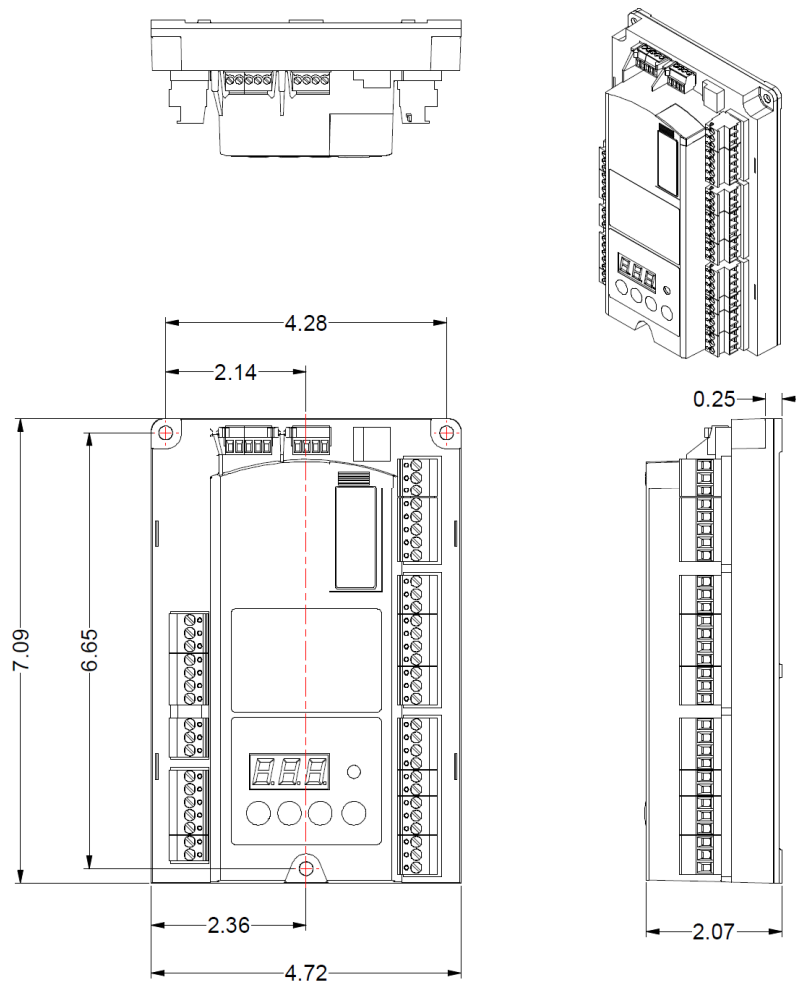


Figure 1-2: LME7 Dimensions (inches)

AZL23 Display

The AZL23 is designed to be mounted in a rectangular cutout through the face / door of an electrical enclosure. It has one screw on the top and another on the bottom that engage small plastic tabs which will swing out when the screw is tightened clockwise; the screw can be loosened to retract the tab and increase clearance before tightening. The tab will pinch the sheet metal of the enclosure door between itself and the AZL23 gasket. This facilitates easy removal and replacement of the AZL23 since it is designed to be taken out of the enclosure face and held in the hands for setup and commissioning.

The AZL23 connects to the LME7 at terminal X56 with cable **TDCCOMBO**. The AZL23 has an IP54 rating when mounted in an electrical enclosure.

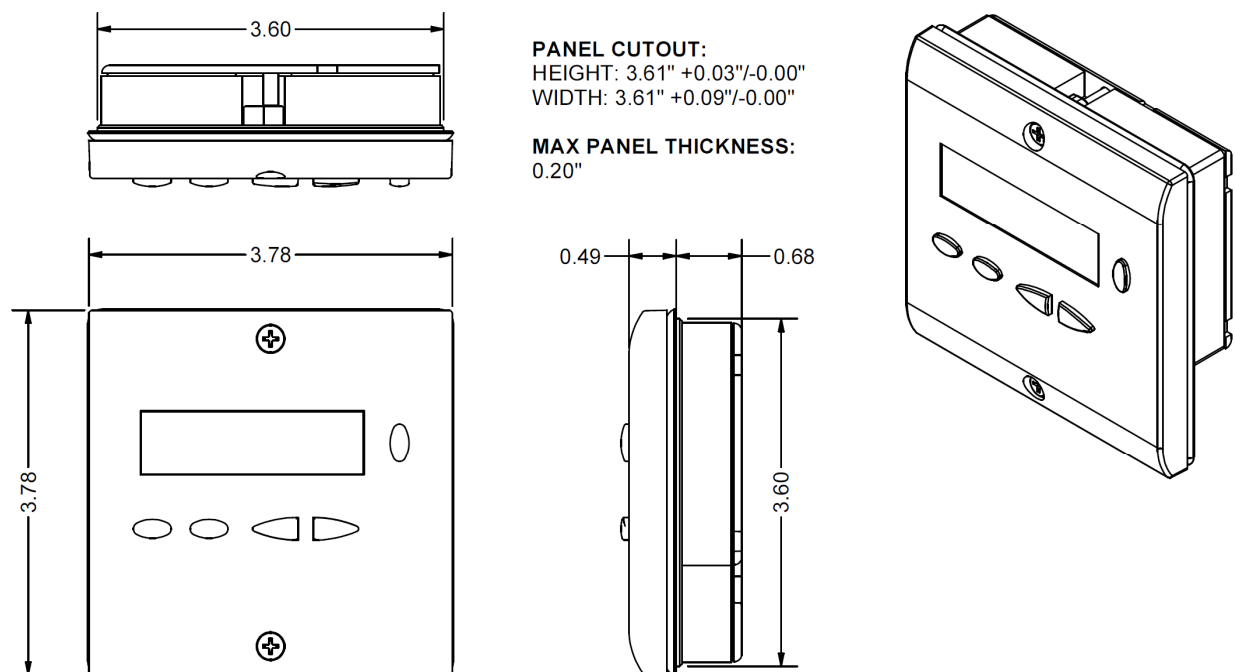


Figure 1-3: AZL23 Dimensions (inches)

Important Safety Notes

- The LME7 is a safety device. Under no circumstances should the unit be modified or opened. SCC Inc. will not assume responsibility for damage resulting from unauthorized modification of the unit.
- All activities (mounting, installation, service work, etc.) must be performed by qualified staff.
- Before performing any work in the connection area of the LME7, disconnect the unit from the main supply (all-polar disconnection).
- Protection against electrical shock hazard on the LME7 and all other connected electrical components must be ensured through good wiring and grounding practices.
- Fall or shock can adversely affect the safety functions of an LME7. Such units must not be put into operation, even if they do not exhibit any apparent damage.
- Condensation and the entry of water into the unit must be avoided.

Approvals

The LME7 has the following standards and approvals:



Applied directives:

- Low-voltage directive 2014/35/EC
- Directive for pressure devices 2014/68/EC
- Gas Appliances Regulation (EU) 2016/426
- Electromagnetic compatibility EMC (immunity) *) 2014/30/EC

*) The compliance with EMC emission requirements must be checked after the burner control is installed in equipment

Compliance with the regulations of the applied directives is verified by the adherence to the following standards / regulations:

- Automatic burner control systems for burners and appliances burning gaseous or liquid fuels DIN EN 298
- Safety and control devices for gas burners and gas burning appliances DIN EN 13611
- Automatic electrical controls for household and similar use Part 2-5: Special requirements on automatic electric burner control and monitoring systems DIN EN 60730-2-5
- Safety and control devices for gas burners and gas burning appliances - Valve proving systems for automatic shut-off valves DIN EN 1643

The relevant valid edition of the standards can be found in the declaration of conformity!

Note on DIN EN 60335-2-102

Household and similar electrical appliances - Safety - Part 2-102: Particular requirements for gas, oil and solid-fuel burning appliances having electrical connections. The electrical connections of the LME7 and the PME7 comply with the requirements of EN 60335-2-102.



EAC Conformity mark (Eurasian Conformity mark)



ISO 9001:2015
ISO 14001:2015
OHSAS 18001:2007



China RoHS
Hazardous substances table:
<http://www.siemens.com/download?A6V10883536>



Only AC 120 V versions



Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Section 1

Overview

Section 2

**LME71 Wiring,
Parameters, and
Phase Diagrams**

Section 3

LME73 Wiring, Parameters,
and Phase Diagrams

Section 4

LME75 Wiring, Parameters,
and Phase Diagrams

Section 5

Commissioning

Section 6

PWM Blowers

Section 7

Troubleshooting

Section 8

Modbus

Section 9

ACS410

Appendix A

Application Guide


LME71 Wiring Diagrams

The following pages show the terminal ratings and wiring diagrams for the different PME71... program modules used with the LME71... burner control.

LME71 Terminals				
Terminal	Type	Function	Parameter	Rating
X2-01.1	PE	Protective Earth ground	Not configurable	---
X2-01.2	Neutral	Neutral		---
X2-01.3	Fixed Output	Blower motor starter		2A, 120VAC
X2-02.1	PE	Protective Earth ground		---
X2-02.2	Neutral	Neutral		---
X2-02.3	Line	POC switch power		2A, 120VAC
X2-02.4	Programmable Input	POC switch	237 - POC Switch	1.5mA, 120VAC
X2-03.1	Input	Remote reset	Not configurable	1.5mA, 120VAC
X2-03.2	Neutral	Neutral		---
X2-03.3	Fixed Output	Alarm		1A, 120VAC
X3-02.1	Programmable Input	Air pressure switch	224 - Time Air Pressure Switch 235 - Air Pressure Switch	1.5mA, 120VAC
X3-02.2	Line	Line	Not configurable	500mA, 120VAC
X3-04.1	Fixed Input	Safety loop (safety limits)		5A, 120VAC
X3-04.2	Line	Safety loop power		2A, 120VAC
X3-04.3	PE	Incoming power - Protective Earth		---
X3-04.4	Neutral	Incoming power - Neutral		---
X3-04.5	Line	Incoming power - Line		5A, 120VAC
X4-02.1	PE	Protective Earth ground		---
X4-02.2	Neutral	Neutral		---
X4-02.3	Programmable Output	Ignition transformer		226 - Pre-ignition Time 257 - Trial for Ignition
X5-01.1	PE	Protective Earth ground	Not configurable	---
X5-01.2	Fixed Input	Gas pressure switches		1.5mA, 120VAC
X5-01.3	Line	Line		500mA, 120VAC
X5-03.1	Fixed Input	Burner switch	654 - Analog Input	1.5mA, 120VAC
X5-03.2	Programmable Input	Decrease fire rate		
X5-03.3	Programmable Input	Increase fire rate		
X5-03.4	Line	Line	Not configurable	500mA, 120VAC
X6-03.1	PE	Protective Earth ground		---
X6-03.2	Neutral	Neutral		---
X6-03.3	Fixed Output	Safety valve		1.5A, 120VAC
X7-01.1	PE	Protective Earth ground		---
X7-01.2	Neutral	Neutral		---
X7-01.3	Programmable Output	Pilot valve	230 - Pilot/Main Stabilization Time 231 - Pilot and Main Overlap Time	1A, 120VAC

LME71 Terminals				
Terminal	Type	Function	Parameter	Rating
X7-04.1	PE	Protective Earth ground	Not configurable	---
X7-04.2	Neutral	Neutral		---
X7-04.3	Programmable Output	Main fuel valve(s)	230 - Pilot/Main Stabilization Time	2A, 120VAC
X7-04.4	Programmable Output	Main valve indication light	231 - Pilot and Main Overlap Time	
X9-04.1	PE	Protective Earth ground	Not configurable	---
X9-04.2	Programmable Input	Valve proving pressure switch	241 - Valve Proving Activation 242 - VP Evacuation Time 243 - VP Upstream Test 244 - VP Fill Time 245 - VP Downstream Test	1.5mA, 120VAC
X9-04.3	Line	Line	Not configurable	500mA, 120VAC
X10-05.1	Burner Ground	Burner ground for flame rod		---
X10-05.2	Programmable Input	Ionization probe signal (flame rod)	254 - FFRT	Max 30µA
X10-05.3		QRB signal (EU only)	954 - Flame signal AZL	Max 60µA
X10-05.4	Ground	QRB ground (EU only)	Not configurable	---
X10-05.5	Line	Line		500mA, 120VAC
X10-06.1	Programmable Input	QRA signal	254 - FFRT 954 - Flame signal AZL	Max 700µA
X10-06.2	Ground	QRA ground	Not configurable	---
X65.1	Programmable Input	Analog input (+) for load control	654 - Analog Input	0-10VDC
X65.2		Analog input (-) for load control		0/4-20mA, 500Ω 0-135Ω
X66.1	Not Used	Not used	Not configurable	---
X66.2				---
X66.3				---
X76.1	Fixed Output	Power supply		10mA, 24VDC
X76.2	Programmable Output	PWM speed control signal (to blower)	519 - Maximum Blower Speed 644 - Feedback Pulse / Rev	10mA, 24VDC
X76.3	Programmable Input	PWM speed feedback (from blower)	650 - Tolerance Band	0.5mA, 12-24VDC
X76.4	Ground	Power supply ground	Not configurable	---

PME71.111A1 – Pilot or direct spark; with purge; no actuator control; no valve proving

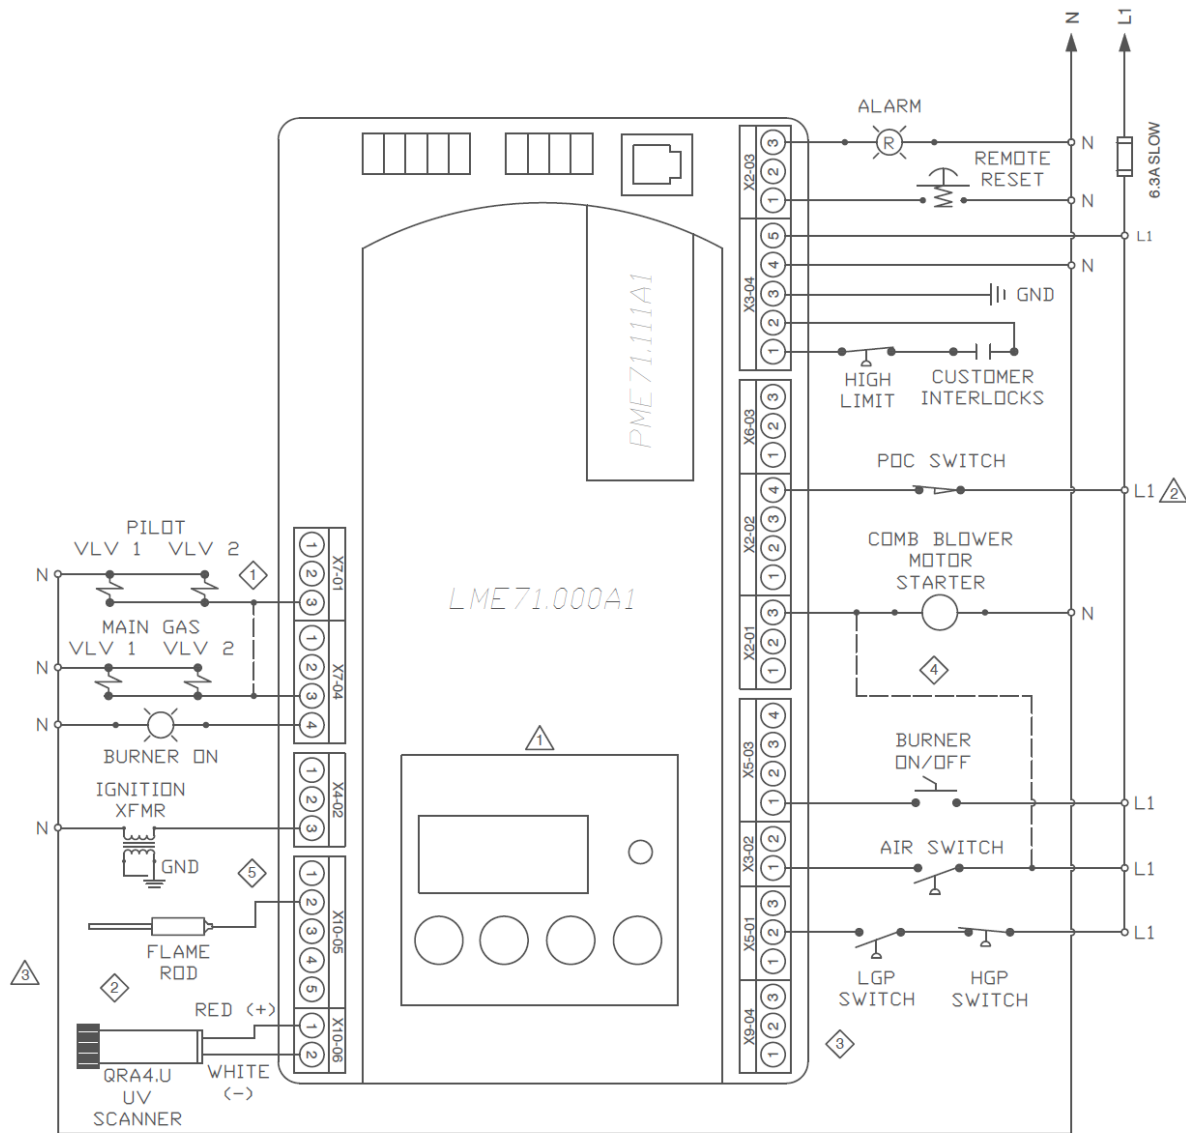


Parameters:

- ⚠ P140: Display Mode
- ⚠ P237: POC Switch
- ⚠ P254: Flame Failure Response Time
- P954: Flame Signal AZL

NOTES:

- ① Add a jumper between X7-01.3 and X7-04.3 for direct spark ignition.
- ② Connect either a flame rod or UV scanner (QRA4.U), not both.
- ③ Do not connect wires to any unused terminals.
- ④ When the LME7 isn't controlling the combustion air blower, wire the combustion air switch between X2-01.3 & X3-02.1. Be sure to remove X2-01.3 to N, and X3-02.1 to L1.
- ⑤ When using a flame rod, terminal X10-05.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

PME71.112A1 – Pilot or direct spark; no purge; no actuator control; no valve proving

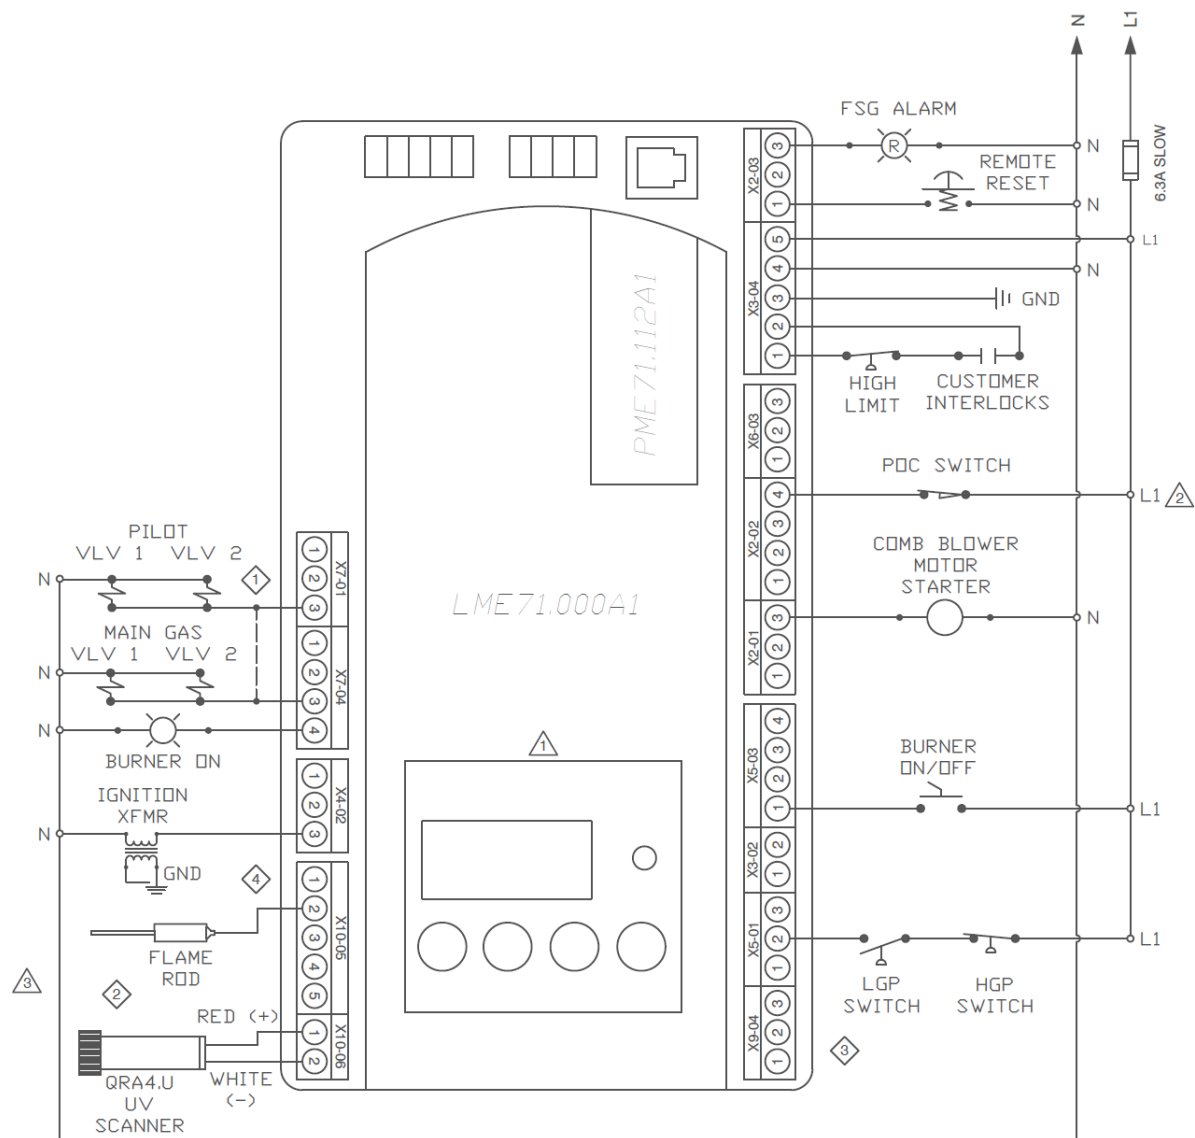


Parameters:

- ⚠ P140: Display Mode
- ⚠ P237: POC Switch
- ⚠ P254: Flame Failure Response Time
- P954: Flame Signal AZL

NOTES:

- ① Add a jumper between X7-01.3 and X7-04.3 for direct spark ignition.
- ② Connect either a flame rod or UV scanner (QRA4.U), not both.
- ③ Do not connect wires to any unused terminals.
- ④ When using a flame rod, terminal X10-05.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

PME71.901A1 – PWM blower control; direct spark only; valve proving; no actuator control

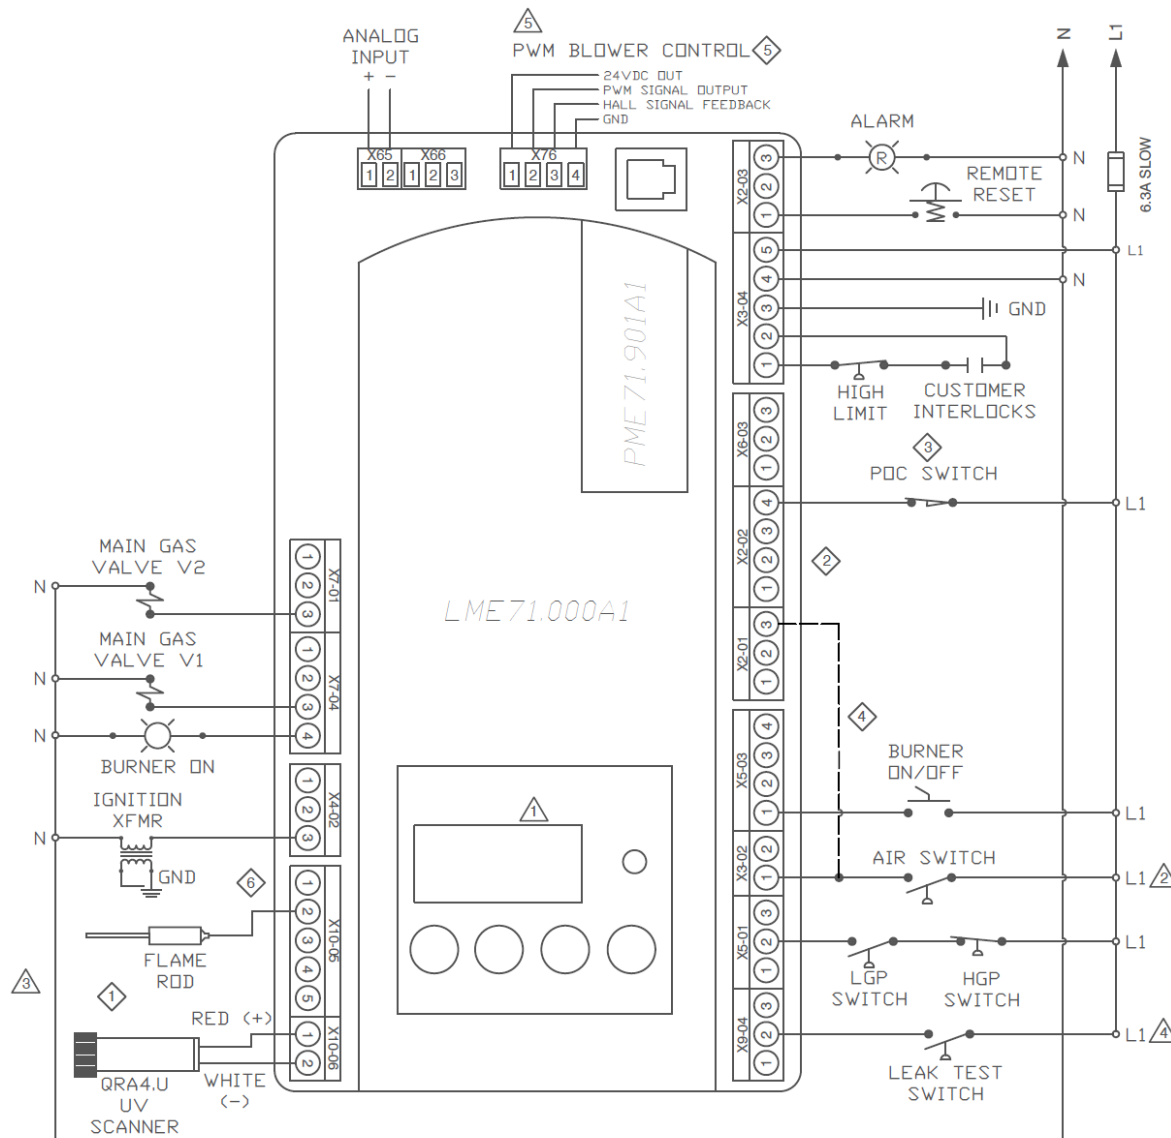

Parameters:

- Ⓐ P140: Display Mode
- Ⓑ P235: Air Switch
- Ⓒ P954: Flame Signal AZL
- Ⓓ P241: Valve Proving Activation
- Ⓔ P559: Speed Control Mode

NOTES:

- Ⓐ Connect either a flame rod or UV scanner (QRA4.U), not both.
- Ⓑ Do not connect wires to any unused terminals.
- Ⓒ When no POC switch is being used, place a jumper from L1 to X2-02.4.
- Ⓓ When no air switch is being used, set parameter 235 = 0 or install a jumper between X2-01.3 and X3-02.1. Be sure to remove X3-02.1 to L1.
- Ⓔ Main power to the PWM blower should not be sourced from the LME7.
- Ⓕ When using a flame rod, terminal X10-05.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.
- Ⓖ For 0-135 Ohm input, wire W to X65.1 and R & B to X65.2.

LME71 Parameter List

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME71. 111A1	PME71. 112A1	PME71. 901A1
		PW Level	Default	Range	Description			
000 Level: Parameter Backup / Restore / Change Passwords								
041	Service Level PW	O	7173	Any 4 characters	The service level password can be changed here. It must be exactly 4 characters in length. Enter the current password, then enter the new password twice to change it (c = current, n = new, r = repeat).	•	•	•
042	OEM Level PW		L7unI	Any 5 characters	The OEM level password can be changed here. It must be exactly 5 characters in length. Enter the current password, then enter the new password twice to change it (c = current, n = new, r = repeat).	•	•	•
060	Backup / Restore	S	Backup - 0 Restore - 0	0-1	Used to perform parameter backups and restores. Backup: Transfer LME7 parameters to PME7. Restore: Transfer PME7 parameters to LME7. Set parameter to 1 and press the info button to begin the backup or restore. Once a parameter backup is successful, the screen will display "bAC End". Once a parameter restore is successful, the screen will display "rSt End".	•	•	•
100 Level: General Information / Display Mode								
101	LME7 Part Number	ACS410	Read only		Displays the part number of the LME7 burner control being used.	•	•	•
102	Production Date	Info			Date that the LME7 was produced in the DD.MM.YY format.	•	•	•
103	Serial Number				Serial number of the LME7.	•	•	•
113	Burner ID	Info	Not set	0-99999999	The burner ID can be viewed through the AZL23 but can only be set using the ACS410 software with the OCI410.40 OEM cable. The burner ID must be all digits (no letters), from 1-8 digits in length. Typically the burner serial number is used. This serves as an identifier for the parameter set. The burner ID must be set in order to perform a parameter backup to a PC using the ACS410 software. Parameter backups to the PME7 program module can be made without setting the burner ID.	•	•	•
119	LME7 Part Number OEM	ACS410	Read only		Displays the OEM part number of the LME7 burner control being used. Will be the same as parameter 101.	•	•	•
120	PME7 Part Number				Displays the part number of the PME7 program module being used.	•	•	•
140	Display Mode	S	111 - 1 112 - 1 901 - 4	1-4	Sets what will be displayed by the LME7 integral display. 1 = phase 2 = flame signal (QRA... flame scanner or flame rod) 3 = do not use this setting 4 = load	•	•	•
164	Startups	Info	Reset only		Displays the total number of startups. To reset this value, press and hold the info button until the value begins to flash, then let go. The value will automatically change to 0. Press the info button again to confirm the reset.	•	•	•
166	Total Startups		Read only		Displays the total number of startups. Not resettable.	•	•	•
170	Number of Relay Cycles		Read only		Displays the number of cycles on different internal relays in the LME7. Index 00 = K12 relay cycles Index 01 = K11 relay cycles Index 02 = K2 relay cycles Index 03 = K1 relay cycles	•	•	•
171	Max Relay Cycles		Read only		Displays the maximum number of relay cycles allowed on the internal relays of the LME7.	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME71.111A1	PME71.112A1	PME71.901A1
		PW Level	Default	Range	Description			
200 Level: Burner Control								
224	Time Air Pressure Switch	S/O	13.818 sec	0-13.818 sec	Once the LME7 reaches phase 22 for the second time (between phases 24 and 30), this sets the length of time the LME7 will wait for air pressure switch input X3-02.1 to become energized before a lockout occurs due to lack of air pressure. As soon as the switch is made, the sequence progresses.			•
225	Prepurge Time		111 - 29.106 sec 901 - 19.404 sec	0-1237 sec	Sets the prepurge time (length of phase 30). The LME7 has a base prepurge time of 2.1 seconds. This setting adds seconds to the base time.	•		•
226	Pre-Ignition Time		3.087 sec	1.029-37.485 sec	The period of time that the ignition transformer (output X4-02.3) is energized before the main valves are opened. Sets the length of phase 38.			•
230	Pilot / Main Stabilization Time		111 - 3.234 sec 112 - 3.234 sec 901 - 15.582 sec	3.234-74.97 sec	On PME71.111A1 and PME71.112A1, this setting defines the pilot stabilizing period if a pilot is used. During this period, only the pilot valve is open. The spark is de-energized. On PME71.901A1, this setting defines the main stabilizing period. During this time, only the main valves are open. The spark is de-energized. Sets the length of phase 44.	•	•	•
231	Pilot and Main Overlap Time		9.996 sec	0-74.97 sec	When a fuel train with a pilot is used, this setting defines the overlap of the pilot (output X7-01.3) and the main fuel valves (output X7-04.4). After this time expires, the pilot is de-energized. Sets the length of phase 50.	•	•	
234	Postpurge Time		111 - 19.404 sec 901 - 4.851 sec	0-1237 sec	Sets the postpurge time (length of phase 74).	•		•
235	Air Pressure Switch		0	0-1	This setting activates or deactivates the air pressure switch input X3-02.1. 0 = deactivated 1 = activated			•
237	POC Switch	S	1	0-2	This setting defines the function of POC switch input X2-02.4. 0 = deactivated 1 = activated (verify POC switch is closed on startup and shutdown) 2 = activated (verify POC switch is closed on startup and shutdown, and open during operation)	•	•	
239	Forced Intermittent	S/O	0	0-1	When activated, this forces the LME7 to shut the burner down every 24 hours of uninterrupted operation. The burner will automatically restart afterwards. The purpose of the shutdown is to check and cycle safety devices. The PME71.901A1 will recycle every 24 hours. 0 = deactivated 1 = activated	•	•	
240 or 240.00	Repetition Flame During Operation		0	0-2	This sets the number of times a flame failure must occur during operation before causing a lockout. 0 = no repetitions 1 = no repetitions 2 = 1 repetition	•	•	•
240.01	Repetition Flame During Main Trial for Ignition		0	0-4	This sets the number of times a flame failure must occur during main trial for ignition before causing a lockout. 0 = no repetitions 1 = no repetitions 2 = 1 repetition 3 = 2 repetitions 4 = 3 repetitions			•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME71.111A1	PME71.112A1	PME71.901A1
		PW Level	Default	Range	Description			
241.00	Valve Proving Activation	S/O	0	0-1	This setting determines if gas valve proving (leak testing) will be performed. Gas valve proving can be performed on startup, shutdown, or both depending on the settings of parameters 241.01 and 241.02. 0 = deactivated 1 = activated			•
241.01	Valve Proving Setup 1		1	0-1	Determines at which point during the burner's sequence that valve proving will be performed. Used in conjunction with parameter 241.02. 0 = valve proving on startup 1 = valve proving on shutdown			•
241.02	Valve Proving Setup 2		0	0-1	Determines at which point during the burner's sequence that valve proving will be performed. Used in conjunction with parameter 241.01. 0 = valve proving according to parameter 241.01 1 = valve proving on startup and shutdown			•
242	VP Evacuation Time		2.646 sec	0-2.646 sec	If valve proving is performed, this specifies the length of time that the downstream valve (V2) is energized (output X7-01.3). This will evacuate any gas that might exist between the gas valves. Sets the length of phase 80.			•
243	VP Upstream Test		10.290 sec	1.029-37.485 sec	If valve proving is performed, this specifies the length of time that both the upstream and downstream valves are closed. If the pressure between the valves rises during this period (enough to open the NC valve proving pressure switch), then the upstream valve is leaking and the LME7 will lockout. A longer time period will produce a more sensitive test. Sets the length of phase 81.			•
244	VP Fill Time		2.646 sec	0-2.646 sec	If valve proving is performed, this specifies the length of time that the upstream valve (V1) is energized (output X7-04.4). This will fill the volume between the main gas valves to line pressure. Sets the length of phase 82.			•
245	VP Downstream Test		10.290 sec	1.029-37.485 sec	If valve proving is performed, this specifies the length of time that both the upstream and downstream valves are closed. If the pressure between the valves falls during this period (enough to close the NC valve proving pressure switch), then the downstream valve is leaking and the LME7 will lockout. A longer time period will produce a more sensitive test. Sets the length of phase 83.			•
247	Intermittent Pilot		0	0-1	Sets the type of pilot being used. If set to 1, the pilot valve will remain open from phase 40 to the end of main operation (oP1). 0 = interrupted pilot 1 = intermittent pilot	•	•	
254	Flame Failure Response Time (FFRT)		1	0-1	Sets the flame failure response time (FFRT). The FFRT is the maximum length of time that the flame signal can go away before a lockout occurs. This setting also doubles as the length of time the signal from the air pressure switch can go away before a lockout occurs. On PME71.901A1, the FFRT is fixed at 1 second. 0 = 1 second 1 = 3 seconds	•	•	
257	Trial for Ignition		111 - 4.116 sec 112 - 4.116 sec 901 - 2.205 sec	0-13.23 sec	On PME71.111A1 and PME71.112A1, this setting defines the overlap of the spark (output X4-02.3) and the pilot valve (output X7-01.3) if a pilot is used. On PME71.901A1, this setting defines the overlap of the spark (output X4-02.3) and the main valves. After this time expires, the spark is de-energized. The LME7 has a base time of 0.3 seconds. This setting adds seconds to the base time. Sets the length of phase 40.	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME71. 111A1	PME71. 112A1	PME71. 901A1
		PW Level	Default	Range	Description			
400 Level: Blower Speeds								
P0 403.00	Ignition Speed	S	3000 RPM	800-9000 RPM	Sets the PWM blower speed during ignition. See Section 6 (PWM Blowers) for more information on setting this value.			•
P1 403.01	Low Fire Speed		1200 RPM	400-9000 RPM	Sets the PWM blower speed at low fire. See Section 6 (PWM Blowers) for more information on setting this value.			•
P2 403.02	High Fire Speed		5700 RPM	800-9000 RPM	Sets the PWM blower speed at high fire. See Section 6 (PWM Blowers) for more information on setting this value.			•
500 Level: Special Positions / Modulation Ramps / Blower Speed Limits								
503.00	Standby Blower Speed	S	0 RPM	0-9000 RPM	Sets the PWM blower speed when the burner is in standby (off).			•
503.01	Prepurge / Postpurge Blower Speed		5700 RPM	800-9000 RPM	Sets the PWM blower speed during prepurge and postpurge.			•
516.00	Minimum Ignition Speed	S/O	800 RPM	800-9000 RPM	Sets the minimum allowable PWM blower speed during ignition (P0). This should be set to the minimum blower speed at which the burner can still be safely ignited.			•
516.01	Maximum Ignition Speed		9000 RPM	800-9000 RPM	Sets the maximum allowable PWM blower speed during ignition (P0). This should be set to the maximum blower speed at which the burner can still be safely ignited.			•
517.00	Minimum Low Fire Speed		400 RPM	400-9000 RPM	Sets the minimum allowable PWM blower speed when the burner is at low fire (P1). This should be set to the minimum blower speed at which the burner can still be safely operated at low fire.			•
517.01	Maximum Low Fire Speed		9000 RPM	800-9000 RPM	Sets the maximum allowable PWM blower speed when the burner is at low fire (P1). This should be set to the maximum blower speed at which the burner can still be safely operated at low fire.			•
518.00	Minimum High Fire Speed		800 RPM	800-9000 RPM	Sets the minimum allowable PWM blower speed when the burner is at high fire (P2). This should be set to the minimum blower speed at which the burner can still be safely operated at high fire.			•
518.01	Maximum High Fire Speed		9000 RPM	800-9000 RPM	Sets the maximum allowable PWM blower speed when the burner is at high fire (P2). This should be set to the maximum blower speed at which the burner can still be safely operated at high fire.			•
519	Maximum Blower Speed		5830 RPM	3000-9000 RPM	Sets the maximum blower speed according to the PWM blower manufacturer. This value is used to calculate blower speed percentages.			•
522	Ramp Up PWM Blower		14.994 sec	2.058-74.97 sec	This sets the speed that the PWM blower ramps up. This setting is active during operation as well as driving to special positions (standby, prepurge, ignition, postpurge). Large blowers typically require a longer ramp up.			•
523	Ramp Down PWM Blower		14.994 sec	2.058-74.97 sec	This sets the speed that the PWM blower ramps down. This setting is active during operation as well as driving to special positions (standby, prepurge, ignition, postpurge). Large blowers typically require a longer ramp down.			•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME71.111A1	PME71.112A1	PME71.901A1
		PW Level	Default	Range	Description			
558	UDS Mode	S/O	Read only		This parameter is for Siemens use only. 0 = PC tool mode 1 = PWM mode 2 = actuator mode 3 = internally 4 = internally 5 = internally			•
559	Speed Control Mode		1	0-2	This setting activates or deactivates the internal PID control in the LME7. If using a PWM blower that has its own internal speed control, this should be deactivated. 0 = deactivated 1 = activated 2 = test mode			•
560	Ratio Control Mode		Read only		Defines the device being controlled by the LME7 that is used to influence the amount of air to the burner. This value is set by Siemens and cannot be modified. On PME71.901A1, this value should always be set to 1. 0 = none 1 = PWM blower 2 = actuator			•
600 Level: PWM Blower Configuration								
644	Feedback Pulse / Rev	S/O	3	2-5	This sets the expected number of pulses per revolution being output from the PWM blower. This information should be provided by the blower manufacturer.			•
646	Settling Time		2.058 sec	1.029-2.058 sec	The blower speed must lie within tolerance band 1 for this length of time before the target speed is considered reached.			•
650.00	Tolerance Band 1		+/- 1%	+/- 1-5%	Sets an inner tolerance band for blower speed control. Percentages are based on the maximum blower speed (parameter 519). If the actual blower speed falls outside tolerance band 1 for longer than the time set by parameter 660, a lockout occurs.			•
650.01	Tolerance Band 2		+/- 3%	+/- 1-10%	Sets an outer tolerance band for blower speed control. Percentages are based on the maximum blower speed (parameter 519). If the actual blower speed falls outside tolerance band 2, a lockout occurs immediately.			•
654	Analog Input	S	1	0-5	Sets the type of input signal being connected to terminal X65 or X5-03. This input signal is used to determine the blower speed during operation. 0 = 3-position 1 = 0-10 VDC 2 = 0-135 Ohm 3 = 0-20 mA 4 = 4-20 mA with lockout when input is less than 4 mA 5 = 4-20 mA without lockout when input is less than 4 mA			•
658.00	PWM Startup	S/O	25%	1-100%	Sets the minimum PWM signal that the blower needs to receive in order to start the blower from standstill. This information should be provided by the blower manufacturer.			•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME71.111A1	PME71.112A1	PME71.901A1
		PW Level	Default	Range	Description			
658.01	Minimum PWM Signal	S/O	0%	0-20%	Sets a minimum PWM signal that the LME7 will transmit to the PWM blower.			•
658.02	Maximum PWM Signal		100%	80-100%	Sets a maximum PWM signal that the LME7 will transmit to the PWM blower.			•
659.00	Min Ramp Up	S	Read only		For Siemens use only. Sets the minimum allowable value for the ramp up time (parameter 522).			•
659.01	Max Ramp Up				For Siemens use only. Sets the maximum allowable value for the ramp up time (parameter 522).			•
659.02	Min Ramp Down				For Siemens use only. Sets the minimum allowable value for the ramp down time (parameter 523).			•
659.03	Max Ramp Down				For Siemens use only. Sets the maximum allowable value for the ramp down time (parameter 523).			•
660	Tolerance Band 1 Time				For Siemens use only. Sets the amount of time the blower speed can lie outside of tolerance band 1 before a lockout occurs.			•
674	Minimum Speed Change	S/O	40 RPM	0-255 RPM	Only requested speed changes larger than the value of this setting will actually be corrected. This serves as a dead band to protect the PWM blower from constant small speed oscillations.			•
675.00	Minimum PWM Signal Prepurge		86%	0-100%	Sets the minimum allowable PWM signal that the LME7 will transmit to the PWM blower during prepurge. This should be set so that as long as the blower speed remains at or above this setting, a successful prepurge will occur regardless of all other conditions (air temperature, air pressure, undervoltage to blower, etc.)			•
675.01	Maximum PWM Signal Ignition		34%	0-100%	Sets the maximum allowable PWM signal that the LME7 will transmit to the PWM blower during ignition. This should be set so that as long as the blower speed remains at or below this setting, a successful lightoff will occur regardless of all other conditions (air temperature, air pressure, overvoltage to blower, etc.)			•
676	Proportional Gain		112	0-255	P-part of the PID loop controlling the blower speed when closed-loop speed control is used. P is the proportional gain. Larger values give a more aggressive response. It is recommended to leave this setting at the default value.			•
677	Integral Time		0.441 sec	0-37.485 sec	I-part of the PID loop controlling the blower speed when closed-loop speed control is used. I is the integral (reset) function. This component serves to eliminate steady-state error by looking at the accumulation of error over a period of time and correcting for it. Smaller values give a more aggressive response. It is recommended to leave this setting at the default value.			•
678	Derivative Time		0 sec	0-37.485 sec	D-part of the PID loop controlling the blower speed when closed-loop speed control is used. D is the derivative function. This component serves to eliminate overshoot caused by the integral value, and also dampen the action of the P and I values. Smaller values give a weaker response. It is recommended to leave this setting at the default value.			•
679.00	Lower Range Time Constant		6.027 sec	0-37.485 sec	Sets the time constant for speed control in the lower speed range when ramping down. It is recommended to leave this setting at the default value.			•
679.01	Medium Range Time Constant		6.027 sec	0-37.485 sec	Sets the time constant for speed control in the medium speed range when ramping down. It is recommended to leave this setting at the default value.			•
679.02	Upper Range Time Constant		6.027 sec	0-37.485 sec	Sets the time constant for speed control in the upper speed range when ramping down. It is recommended to leave this setting at the default value.			•
679.03	Total Range Time Constant		6.027 sec	0-37.485 sec	Sets the time constant for speed control in all speed ranges when ramping up. It is recommended to leave this setting at the default value.			•
680.00	Upper Speed Range Threshold		4000 RPM	800-9000 RPM	Sets the speed threshold between the upper and medium speed ranges for parameters 679.01 and 679.02.			•
680.01	Lower Speed Range Threshold		2000 RPM	800-9000 RPM	Sets the speed threshold between the lower and medium speed ranges for parameters 679.00 and 679.01.			•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used			PME71.111A1	PME71.112A1	PME71.901A1	
		PW Level	Default	Range				Description
700 Level: Fault History								
701-711	Fault History	Ser	Read only		Shows the current status (fault) along with the 10 most recent faults. 701 = current status, 702 = most recent fault, 703 = next most recent fault, etc. Each fault has indices that provide additional information about the fault: Index 00 = fault code Index 01 = start number Index 02 = phase Index 03 = load	•	•	•
900 Level: Operational Data								
903	Current Output / Stage	ACS410	Read only		Displays the current firing rate on a PME71.901A1. This will display "first stage" during main operation and "----" during all other phases on PME71.111A1 and PME71.112A1.	•	•	•
908	Target Speed %				Displays the real time target speed of the PWM blower as a percentage of the maximum blower speed (parameter 519). Will always display as a "-" on PME71.111A1 and PME71.112A1.	•	•	•
920	Actual PWM Output	Ser			Displays the real time PWM output to the blower as a percentage of the maximum blower speed (parameter 519). Will always display as a "-" on PME71.111A1 and PME71.112A1. For example, if the actual speed (936) is below the target speed (908), the actual PWM output will increase above the target speed in an attempt to speed up the blower to achieve the target speed.	•	•	•
922	Actual Actuator Position	ACS410			Displays as "----" for all PME71... program modules.	•	•	•
923	Target Actuator Position				Displays as "----" for all PME71... program modules.	•	•	•
935	Actual Speed RPM				Displays the real time actual speed of the PWM blower in RPM. Will always display as a "----" on PME71.111A1 and PME71.112A1.	•	•	•
936	Actual Speed %	Ser			Displays the real time actual speed of the PWM blower as a percentage of the maximum blower speed (parameter 519). Will always display as a "-" on PME71.111A1 and PME71.112A1.	•	•	•
944	Analog Input %	ACS410			Displays the real time analog input signal on terminal X65 as a percentage from 0-100%. Will always display as a "----" on PME71.111A1 and PME71.112A1.	•	•	•
951	Mains Voltage AZL	Ser			Displays the real time mains voltage. Measured at terminal X3-04 pin 4 (neutral) and pin 5 (line).	•	•	•
954	Flame Signal AZL				Displays the raw flame signal from 0-100% for any flame sensor type. This signal refers to input terminal X10-06 (UV scanners) or input terminal X10-05.2 (flame rods).	•	•	•
961	Actual Phase	ACS410		Displays the real time phase of the LME7.	•	•	•	
3007	Flame Signal 1 Status			Displays the status of the flame rod input X10-05.2. A value of 1 indicates a valid flame signal is present, and a value of 0 indicates that no valid flame signal is present.	•	•	•	
3008	Flame Signal 2 Status			Displays the status of UV flame scanner input X10-06. A value of 1 indicates a valid flame signal is present, and a value of 0 indicates that no valid flame signal is present.	•	•	•	
3033	Blower			Displays the status of blower output X2-01.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	
3034	Ignition			Displays the status of ignition transformer output X4-02.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	
3035	Safety Valve			Displays the status of safety valve output X6-03.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used			PME71.111A1	PME71.112A1	PME71.901A1	
		PW Level	Default	Range				Description
3036	Main Valve V1	ACS410	Read only		Displays the status of main valve V1 output X7-04.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•
3037	Main Valve V2				Displays the status of main valve V2 output X7-01.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.			•
3039	Pilot Valve				Displays the status of pilot valve output X7-01.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	
3088	Reset				Displays the status of the info button on the LME7. When the info button is pressed, this value is a 1, and when the info button is not pressed, this value is a 0.	•	•	•
3089	Remote Reset				Displays the status of remote reset input X2-03.1. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•
3090	Air Pressure Switch Status				Displays the status of air pressure switch input X3-02.1. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•		•
3091	Gas Pressure Switches				Displays the status of gas pressure switch input X5-01.2. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•
3092	Burner Enable				Displays the status of burner enable input X5-03.1. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•
3133	Alarm				Displays the status of alarm output X2-03.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•
3303	Mains Voltage ACS410				Displays the real time mains voltage. Measured at terminal X3-04 pin 4 (neutral) and pin 5 (line).	•	•	•
3307	Flame Signal 1 ACS410				Displays the flame signal strength (%) from a flame rod on terminal X10-05.2.	•	•	•
3308	Flame Signal 2 ACS410				Displays the flame signal strength (%) from a UV flame scanner on terminal X10-06.	•	•	

LME71 Phase Diagrams

The Siemens LME7 burner controls can perform a number of different burner sequences based upon which PME7 program module is used, how certain parameters are set, and how the LME7 is wired.

Each program module has an associated phase diagram. The phase diagrams illustrate when input and output terminals are expected to be energized or de-energized. A legend on the bottom of each page describes the various symbols used in the diagrams.

Notes:

- 1) A jumper can be added between terminals X7-04.3 and X7-01.3 for direct spark ignition. If this jumper is added, main valve output X7-04.3 and pilot valve output X7-01.3 will be energized from phase 40 through the end of operation (oP1).
- 2) If the LME7 is set to perform valve proving on startup, valve proving takes place at the same time as prepurge. Phases 80-83 will be displayed on the LME7 and the AZL23 even though prepurge (phase 30) is also occurring at the same time. The actual prepurge time will be at least the sum of all four valve proving time parameters (242, 243, 244, 245).
- 3) If the LME7 is set to perform valve proving on shutdown, valve proving takes place at the same time as postpurge. Phases 80-83 will be displayed on the LME7 and the AZL23 even though postpurge (phase 74) is also occurring at the same time. The actual postpurge time will be at least the sum of all four valve proving time parameters (242, 243, 244, 245).

PME71.111A1 Phase Diagram

		Lockout	Standby, Waiting for Call for Heat	Test - Air Pressure Switch Open	Blower On	Prepurge	Trial for Ignition	Flame Detection	Interval 1: Pilot Stabilization	Safety Time 2: Main and Pilot Overlap	Interval 2: Main Stabilization	Operation	Postpurge	Home Run	
		Phase	LOC	OFF	21	22	30	40	42	44	50	50	oP1	74	10
		Param.					225	257		230	231	254	240	234	
		STARTUP											OPERATION	SHUTDOWN	
		Terminal	Description	Notes	SAFETY TIME 1										
INPUTS	X3-04.5	Main Voltage													
	X3-04.1	Safety Loop		X											X
	X5-03.1	Burner On		M											
	X3-02.1	Air Pressure Switch			X	M									
	X5-01.2	Gas Pressure Switch(es)													
	X10-05.2 X10-06.1/2	Flame Signal			X		X								
	X2-02.4	POC (P237 = 1) POC (P237 = 2)											X		
OUTPUTS	X2-02.3	POC Source		X	X										X
	X6-03.3	Safety Valve		X	X										X
	X2-01.3	Blower		X	X	X									X
	X4-02.3	Ignition Transformer		X	X	X	X	X	X	X	X	X	X	X	X
	X7-04.3	Main Valve V1	Note 1	X	X	X	X	X	X	X	X	X	X	X	X
	X7-04.4	Main Valve Indication Light		X	X	X	X	X	X	X	X	X	X	X	X
	X2-03.3	Alarm			X	X	X	X	X	X	X	X	X	X	X
	X7-01.3	Pilot Valve (P247 = 0) Pilot Valve (P247 = 1)	Note 1	X	X	X	X	X	X	X	X	X	X	X	X

Legend :

	Energized	M	Must be energized by end of phase
	Energized or de-energized		
X	De-energized		

PME71.112A1 Phase Diagram

		Lockout	Standby, Waiting for Call for Heat	Test - POC Closed	Blower On	Trial for Ignition	Flame Detection	Interval 1: Pilot Stabilization	Safety Time 2: Main and Pilot Overlap	Interval 2: Main Stabilization	Operation	Home Run	
		Phase	LOC	OFF	21	22	40	42	44	50	50	oP1	10
		Param.					257		230	231	254	240	
					STARTUP							OPERATION	SHUTDOWN
		Terminal	Description	Notes				SAFETY TIME 1					
INPUTS	X3-04.5	Main Voltage											
	X3-04.1	Safety Loop		X									X
	X5-03.1	Burner On		M									
	X5-01.2	Gas Pressure Switch(es)											
	X10-05.2 X10-06.1/2	Flame Signal		X	X	X							
	X2-02.4	POC (P237 = 1) POC (P237 = 2)									X		
OUTPUTS	X2-02.3	POC Source		X	X								X
	X6-03.3	Safety Valve		X	X								X
	X2-01.3	Blower		X	X	X							X
	X4-02.3	Ignition Transformer		X	X	X	X	X	X	X	X	X	X
	X7-04.3	Main Valve V1	Note 1	X	X	X	X	X	X				X
	X7-04.4	Main Valve Indication Light		X	X	X	X	X	X				X
	X2-03.3	Alarm			X	X	X	X	X	X	X	X	X
	X7-01.3	Pilot Valve (P247 = 0) Pilot Valve (P247 = 1)	Note 1	X	X	X	X				X	X	X

Legend :

	Energized	M	Must be energized by end of phase
	Energized or de-energized		
X	De-energized		

PME71.901A1 Phase Diagram

			Lockout	Standby, Waiting for Call for Heat	Test - Air Pressure Switch Open	Blower On	Drive to Prepurge Speed	Test - Air Pressure Switch Closed	Prepurge (Note 2)	Drive to Ignition Speed	Preignition	Trial for Ignition	Flame Detection	Interval: Main Stabilization	Operation	Drive to Postpurge Speed	Postpurge (Note 3)	Home Run	Pressure Test	Atmospheric Test	Fill	Evacuate			
			Phase	LOC	OFF	21	22	24	22	30	36	38	40	42	44	oP	72	74	10	80	81	82	83		
			Param.						224	225		226	257			240		234		242	243	244	245		
			STARTUP													OPERATION	SHUTDOWN		VALVE PROVING						
			Terminal	Description	Notes														SAFETY TIME 1						
INPUTS	X3-04.5	Main Voltage																							
	X3-04.1	Safety Loop																							
	X5-03.1	Burner On		M																					
	X3-02.1	Air Pressure Switch			X			M																	
	X5-01.2	Gas Pressure Switch(es)																							
	X9-04.2	Valve Proving Pressure Switch																			X				
	X10-05.2 X10-06.1/2	Flame Signal		X					X	X															
	X2-02.4	POC																							
OUTPUTS	X2-02.3	POC Source	X																						
	X6-03.3	Safety Valve	X																						
	X2-01.3	Blower	X	X	X																		X		
	X4-02.3	Ignition Transformer	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X		
	X7-04.3	Main Valve V1	X	X	X	X	X	X	X	X	X						X	X	X	X	X	X	X		
	X7-04.4	Main Valve Indication Light	X	X	X	X	X	X	X	X	X						X	X	X	X	X	X	X		
	X7-01.3	Main Valve V2	X	X	X	X	X	X	X	X	X						X	X	X	X	X	X	X		
	X2-03.3	Alarm	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	
PWM Blower Speed			S	S	S	S	T	P	P	T	I	I	I	I	O	T	P	T	P	P	P	P			

Legend :

 Energized	M Must be energized by end of phase	I Ignition speed
 Energized or de-energized	S Standby speed	O Operation - speed determined by input signal
X De-energized	P Prepurge/postpurge speed	T Speed transitioning/modulating

Intentionally Left Blank

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide


LME73 Wiring Diagrams

The following pages show the terminal ratings and wiring diagrams for the different PME73... program modules used with the LME73... burner control.

LME73 Terminals				
Terminal	Type	Function	Parameter	Rating
X2-01.1	PE	Protective Earth ground	Not configurable	---
X2-01.2	Neutral	Neutral		---
X2-01.3	Fixed Output	Blower motor starter		2A, 120VAC
X2-02.1	PE	Protective Earth ground		---
X2-02.2	Neutral	Neutral		---
X2-02.3	Line	POC switch power		2A, 120VAC
X2-02.4	Programmable Input	POC switch	237 - POC Switch	1.5mA, 120VAC
X2-03.1	Input	Remote reset	Not configurable	1.5mA, 120VAC
X2-03.2	Neutral	Neutral		---
X2-03.3	Fixed Output	Alarm		1A, 120VAC
X2-09.1	Programmable Output	Actuator drive to closed	259 - Actuator Timings 260 - Actuator Closing Time 515.00 - Actuator Purge Postion 515.01 - Actuator Activation	0.1A, 120VAC
X2-09.2	Programmable Output	Actuator drive to low fire/ignition		
X2-09.3	Programmable Output	Actuator drive to high fire		
X2-09.4	Fixed Input	Actuator position feedback		
X2-09.5	Not Used	Not used	Not configurable	---
X2-09.6	Neutral	Neutral		---
X2-09.7	Fixed Output	Auxiliary output		1A, 120VAC
X2-09.8	Fixed Input	Auxiliary input		
X3-02.1	Programmable Input	Air pressure switch	224 - Time Air Pressure Switch	1.5mA, 120VAC
X3-02.2	Line	Line	Not configurable	500mA, 120VAC
X3-04.1	Fixed Input	Safety loop (safety limits)		5A, 120VAC
X3-04.2	Line	Safety loop power		2A, 120VAC
X3-04.3	PE	Incoming power - Protective Earth		---
X3-04.4	Neutral	Incoming power - Neutral		---
X3-04.5	Line	Incoming power - Line		5A, 120VAC
X4-02.1	PE	Protective Earth ground		---
X4-02.2	Neutral	Neutral		---
X4-02.3	Programmable Output	Ignition transformer		226 - Pre-ignition Time 257 - Trial for Ignition
X5-01.1	PE	Protective Earth ground	Not configurable	---
X5-01.2	Fixed Input	Gas pressure switches		1.5mA, 120VAC
X5-01.3	Line	Line		500mA, 120VAC
X5-03.1	Fixed Input	Burner switch	654 - Analog Input	1.5mA, 120VAC
X5-03.2	Programmable Input	Decrease fire rate		
X5-03.3	Programmable Input	Increase fire rate		
X5-03.4	Line	Line	Not configurable	500mA, 120VAC

LME73 Terminals				
Terminal	Type	Function	Parameter	Rating
X6-03.1	PE	Protective Earth ground	Not configurable	---
X6-03.2	Neutral	Neutral		---
X6-03.3	Fixed Output	Safety valve		1.5A, 120VAC
X7-01.1	PE	Protective Earth ground		---
X7-01.2	Neutral	Neutral		---
X7-01.3	Programmable Output	Pilot valve	230 - Pilot/Main Stabilization Time 231 - Pilot & Main Overlap Time 247 - Intermittent Pilot 257 - Trial for Ignition	1A, 120VAC
X7-02.1	PE	Protective Earth ground	Not configurable	---
X7-02.2	Neutral	Neutral		---
X7-02.3	Programmable Output	Main fuel valve V2 or actuator drive to ignition	231 - Pilot and Main Overlap Time 232 - Main Stabilization Time	2A, 120VAC
X7-04.1	PE	Protective Earth ground	Not configurable	---
X7-04.2	Neutral	Neutral		---
X7-04.3	Programmable Output	Main fuel valve V1	231 - Pilot and Main Overlap Time 232 - Main Stabilization Time	2A, 120VAC
X7-04.4	Programmable Output	Main valve indication light		
X9-04.1	PE	Protective Earth ground	Not configurable	---
X9-04.2	Programmable Input	Valve proving pressure switch	241 - Valve Proving Activation 242 - VP Evacuation Time 243 - VP Upstream Test 244 - VP Fill Time 245 - VP Downstream Test	1.5mA, 120VAC
X9-04.3	Line	Line	Not configurable	500mA, 120VAC
X10-05.1	Burner Ground	Burner ground for flame rod	254 - FFRT 954 - Flame signal AZL	---
X10-05.2	Programmable Input	Ionization probe signal (flame rod)		Max 30µA
X10-05.3		QRB signal (EU only)		Max 60µA
X10-05.4	Ground	QRB ground (EU only)		---
X10-05.5	Line	Line		500mA, 120VAC
X10-06.1	Programmable Input	QRA signal	254 - FFRT 954 - Flame signal AZL	Max 700µA
X10-06.2	Ground	QRA ground		Not configurable
X65.1	Programmable Input	Analog input (+) for load control	654 - Analog Input	0-10VDC
X65.2		Analog input (-) for load control		0/4-20mA, 500Ω
X66.1	Fixed Output	Actuator feedback pot - power supply	Not configurable	5VDC
X66.2	Fixed Input	Actuator feedback pot - signal		---
X66.3	Ground	Actuator feedback pot - ground		---
X76.1	Not Used	Not used		---
X76.2				---
X76.3				---
X76.4				---

PME73.811A1 – Modulating actuator control with valve proving; ignition position = low fire

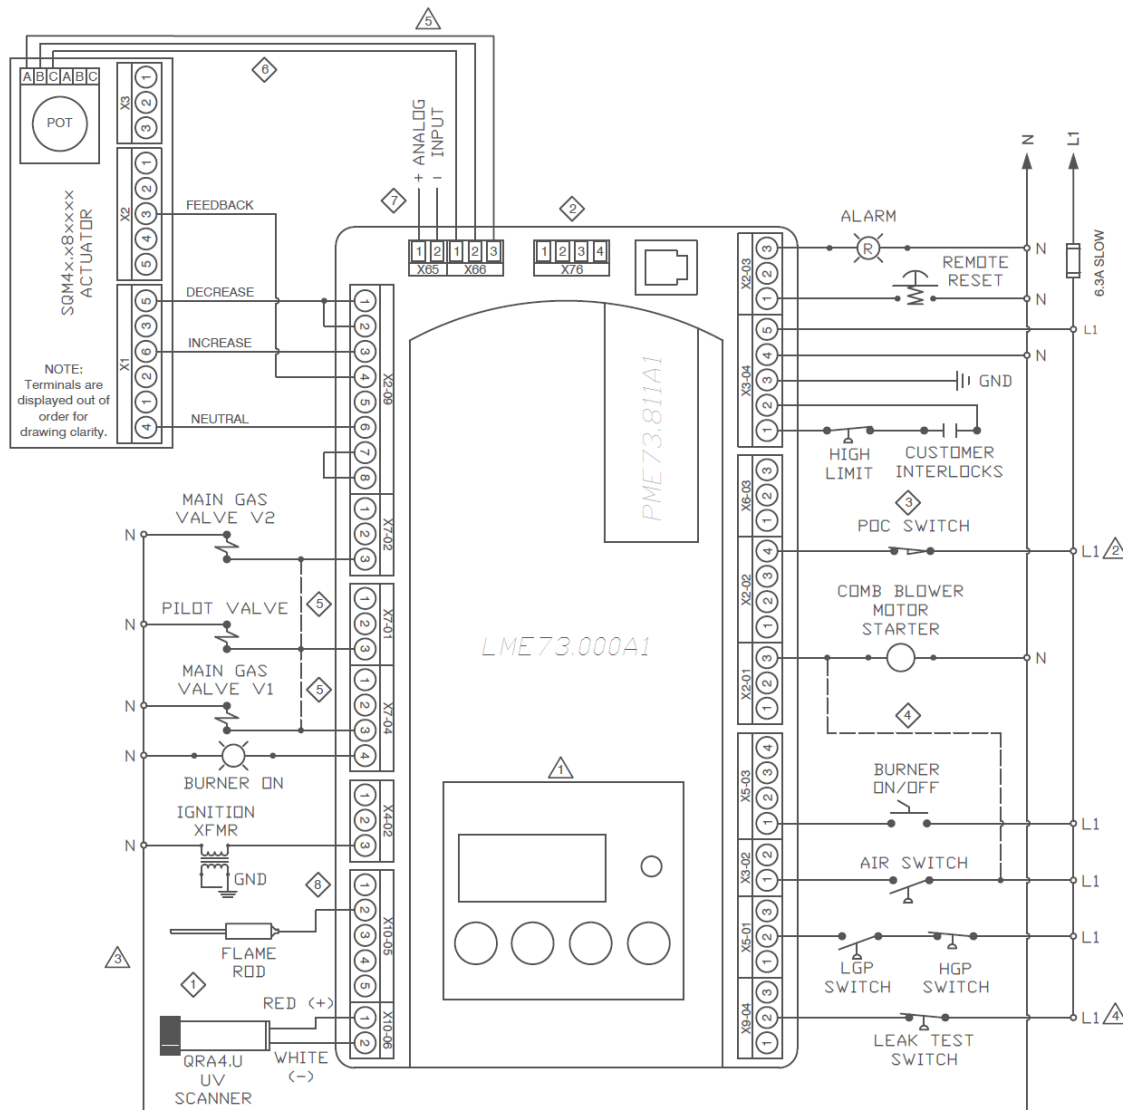


Parameters:

- ⚠ P140: Display Mode
- ⚠ P237: POC Switch
- ⚠ P254: Flame Failure Response Time
- ⚠ P954: Flame Signal AZL
- ⚠ P241: Valve Proving Activation
- ⚠ P654: Analog Input

NOTES:

- ⚠ Connect either a flame rod or UV scanner (QRA4.U), not both.
- ⚠ Do not connect wires to any unused terminals.
- ⚠ When no POC switch is being used, place a jumper from L1 to X2-02.4 or set parameter 237 = 0.
- ⚠ When the LME7 isn't controlling the combustion air blower, wire the combustion air switch between X2-01.3 and X3-02.1. Be sure to remove X2-01.3 to N, and X3-02.1 to L1.
- ⚠ Add jumpers between X7-01.3 and X7-04.3 and between X7-01.3 and X7-02.3 for direct spark ignition. Valve proving is not possible with direct spark ignition.
- ⚠ Wiring shown is for an SQM40... actuator. If using an SQM41... actuator, swap the wires going to terminals A and C on the potentiometer.
- ⚠ For 0-135 Ohm input, wire W to X65.1 and R & B to X65.2
- ⚠ When using a flame rod, terminal X10-05.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

PME73.812A1 – Modulating actuator control with independent ignition position; no valve proving; with SQM4x.x8xxxx actuator

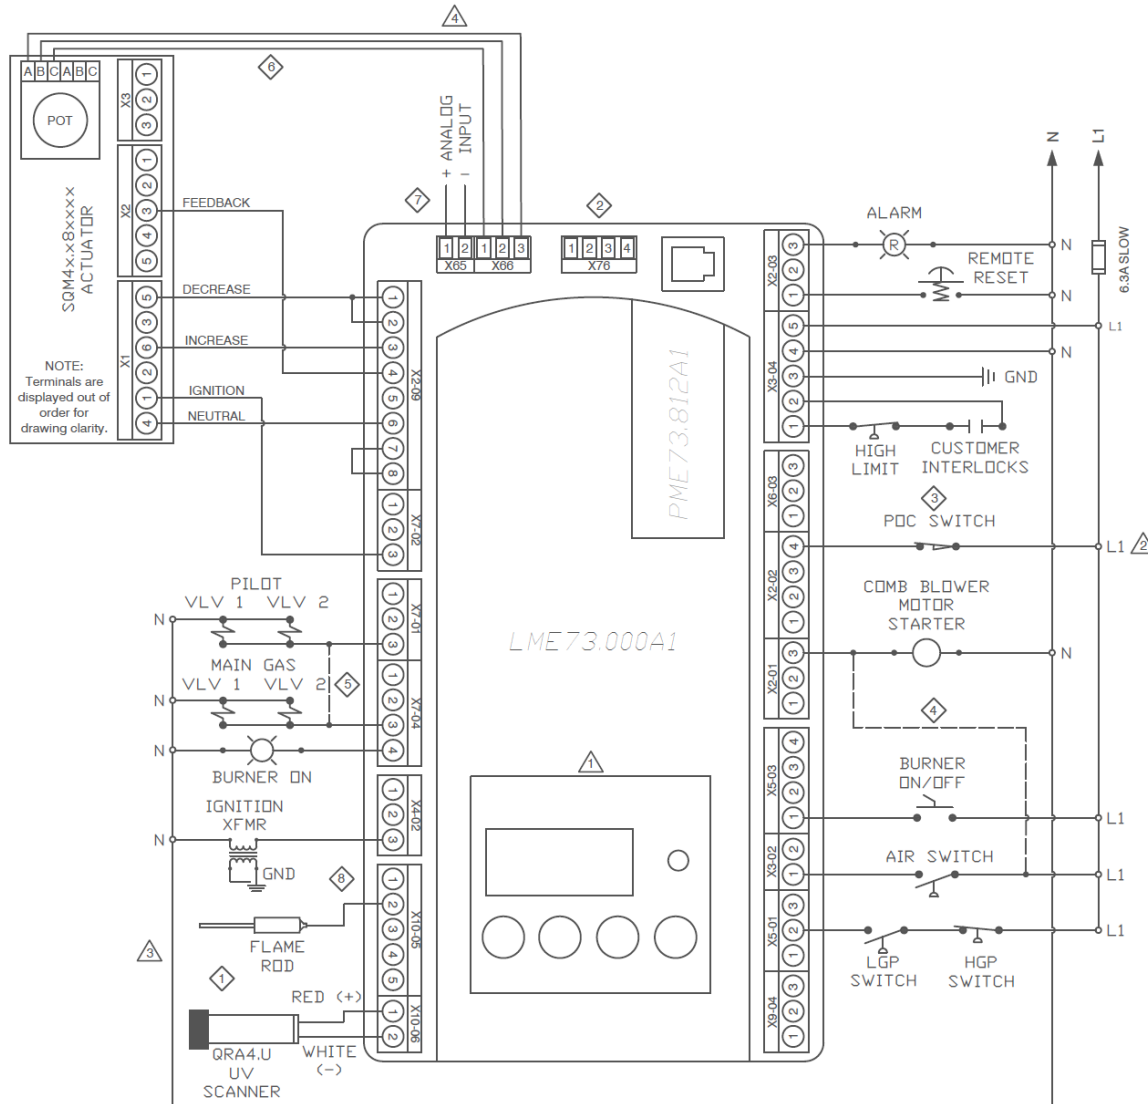


Parameters:

- ▲ P140: Display Mode
- ▲ P237: POC Switch
- ▲ P254: Flame Failure Response Time
- P954: Flame Signal AZL
- ▲ P654: Analog Input

NOTES:

- ① Connect either a flame rod or UV scanner (QRA4.U), not both.
- ② Do not connect wires to any unused terminals.
- ③ When no POC switch is being used, place a jumper from L1 to X2-02.4 or set parameter 237 = 0.
- ④ When the LME7 isn't controlling the combustion air blower, wire the combustion air switch between X2-01.3 and X3-02.1. Be sure to remove X2-01.3 to N, and X3-02.1 to L1.
- ⑤ Add a jumper between X7-01.3 and X7-04.3 for direct spark ignition.
- ⑥ Wiring shown is for an SQM40... actuator. If using an SQM41... actuator, swap the wires going to terminals A and C on the potentiometer.
- ⑦ For 0-135 Ohm input, wire W to X65.1 and R & B to X65.2
- ⑧ When using a flame rod, terminal X10-05.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

PME73.812A1 – Modulating actuator control with independent ignition position; no valve proving; with SQM4x.x1xxxx actuator

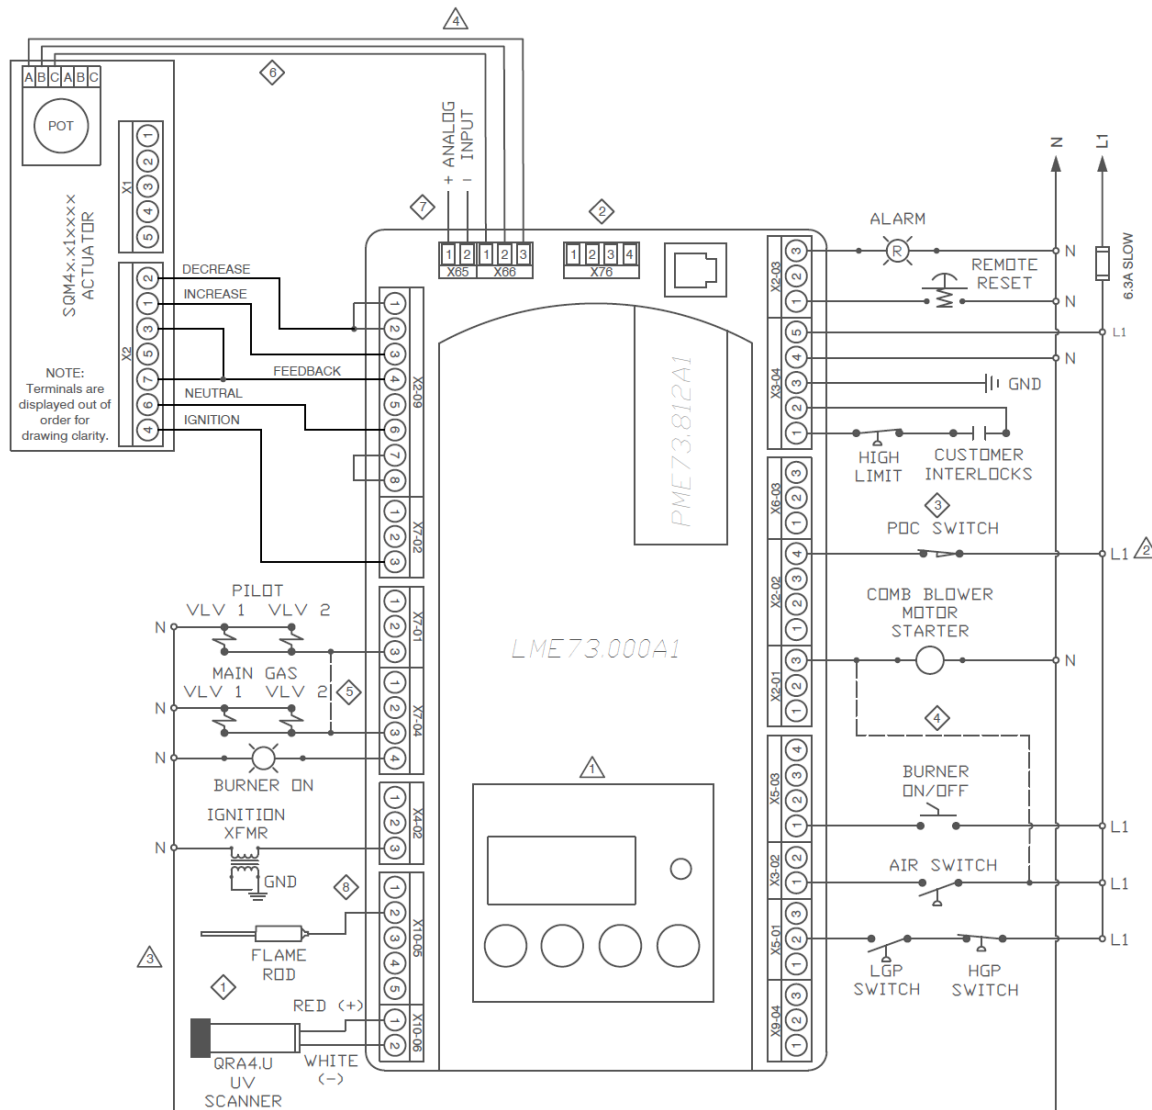


Parameters:

- ⚠ P140: Display Mode
- ⚠ P237: POC Switch
- ⚠ P254: Flame Failure Response Time
P954: Flame Signal AZL
- ⚠ P654: Analog Input

NOTES:

- ⚠ Connect either a flame rod or UV scanner (QRA4.U), not both.
- ⚠ Do not connect wires to any unused terminals.
- ⚠ When no POC switch is being used, place a jumper from L1 to X2-02.4 or set parameter 237 = 0.
- ⚠ When the LME isn't controlling the combustion air blower, wire the combustion air switch between X2-01.3 and X3-02.1. Be sure to remove X2-01.3 to N, and X3-02.1 to L1.
- ⚠ Add a jumper between X7-01.3 and X7-04.3 for direct spark ignition.
- ⚠ Wiring shown is for an SQM40... actuator. If using an SQM41... actuator, swap the wires going to terminals A and C on the potentiometer.
- ⚠ For 0-135 Ohm input, wire W to X65.1 and R & B to X65.2
- ⚠ When using a flame rod, terminal X10-05.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

PME73.831A1 – Modulating actuator control with valve proving; with independent ignition position; no POC

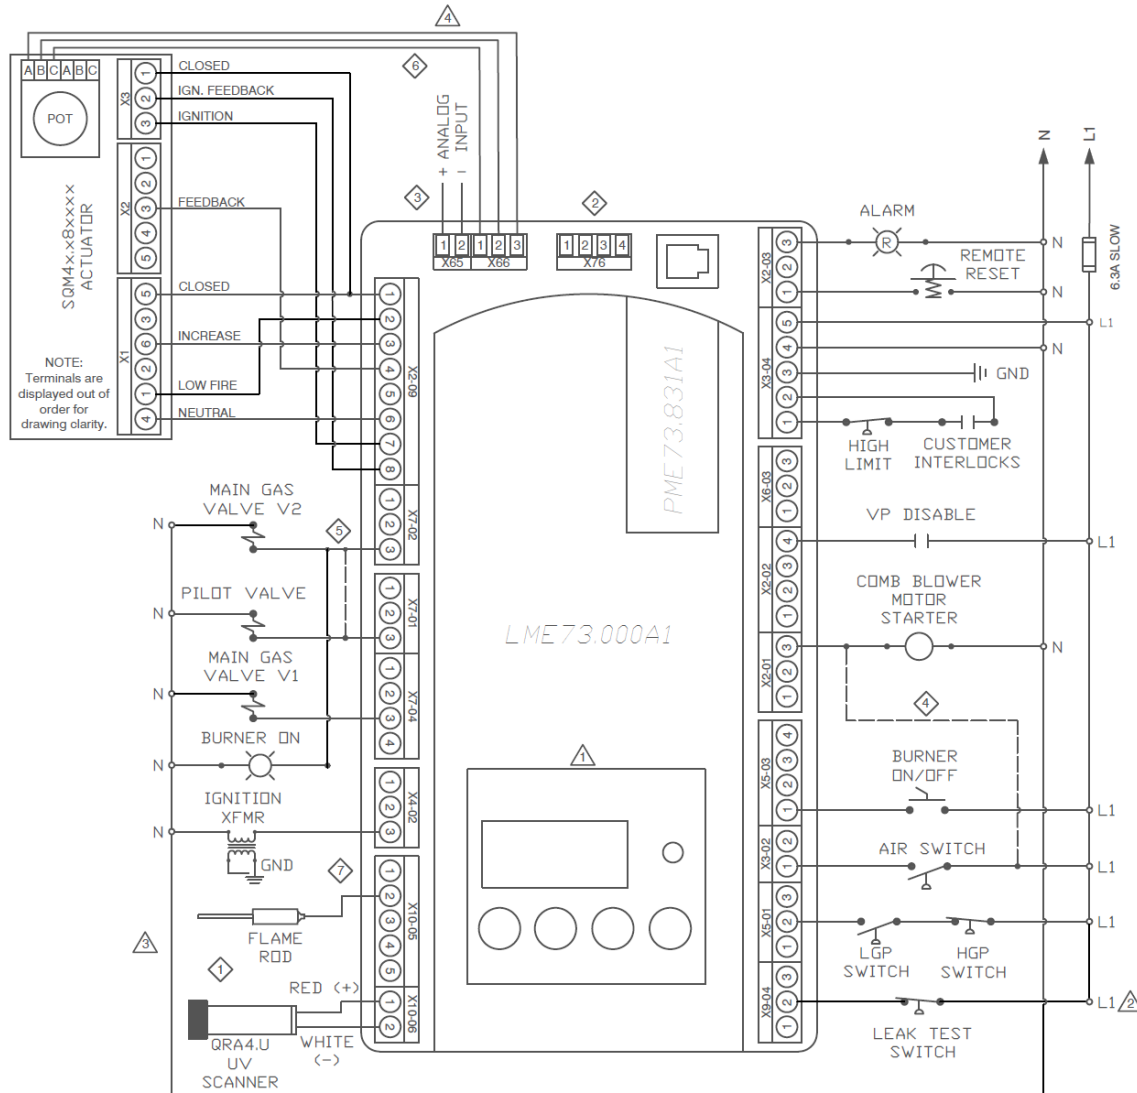


Parameters:

- ① P140: Display Mode
- ② P241: Valve Proving Activation
- ③ P254: Flame Failure Response Time
P954: Flame Signal AZL
- ④ P654: Analog Input

NOTES:

- ① Connect either a flame rod or UV scanner (QRA4.U), not both.
- ② Do not connect wires to any unused terminals.
- ③ For 0-135 Ohm input, wire W to X65.1 and R & B to X65.2
- ④ When the LME7 isn't controlling the combustion air blower, wire the combustion air switch between X2-01.3 and X3-02.1. Be sure to remove X2-01.3 to N, and X3-02.1 to L1.
- ⑤ Add a jumper between X7-01.3 and X7-02.3 for direct spark ignition.
- ⑥ Wiring shown is for an SQM40... actuator. If using an SQM41... actuator, swap the wires going to terminals A and C on the potentiometer.
- ⑦ When using a flame rod, terminal X10-05.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

PME73.840A1 – Floating/bumping (position proportional) actuator control with valve proving; actuator can be disabled; ignition position = low fire

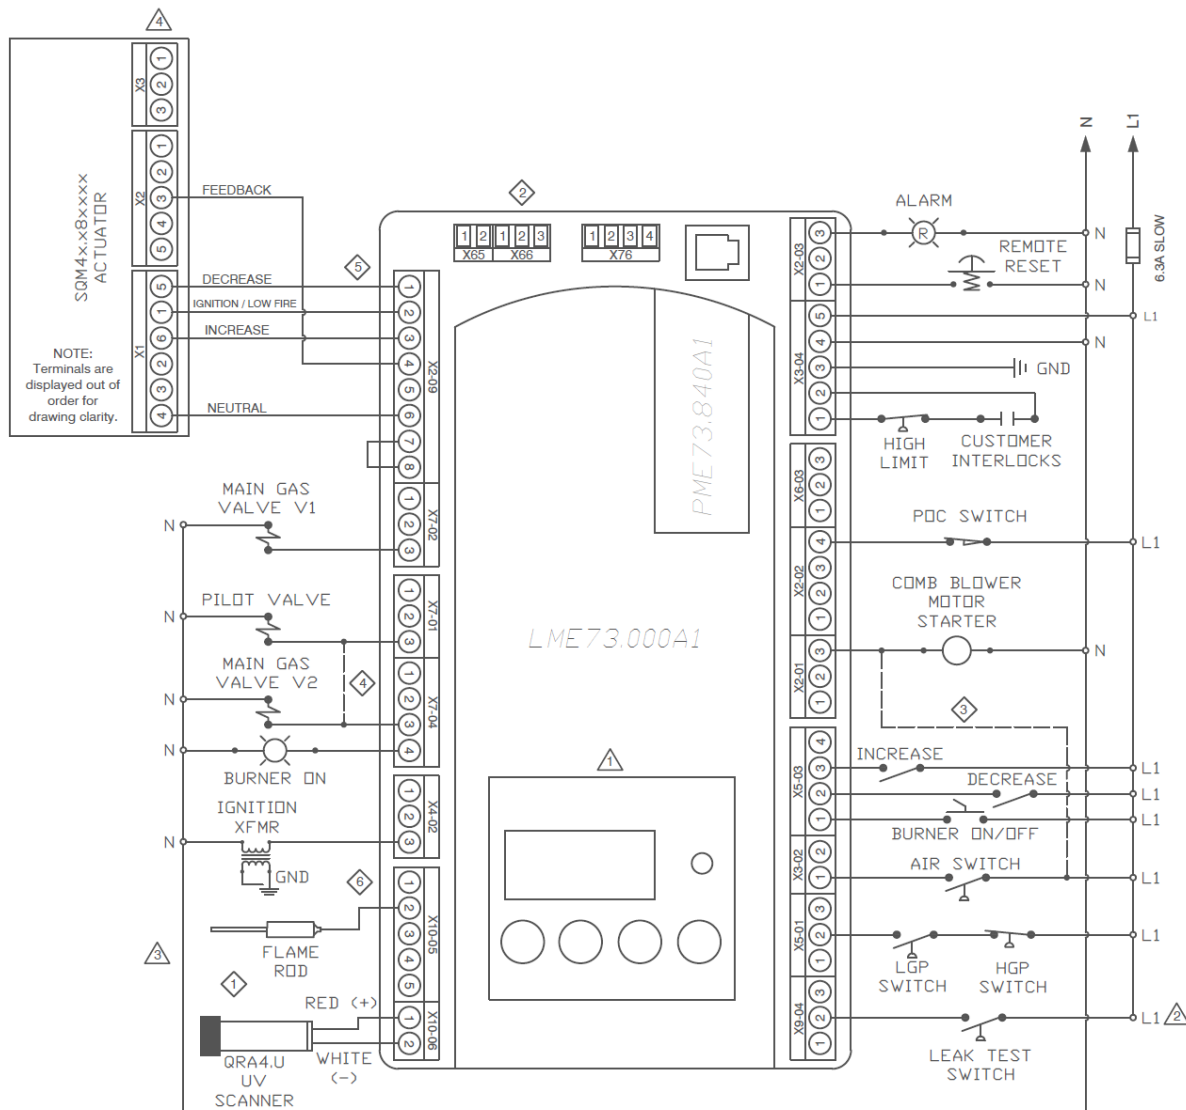

- Parameters:
- ① P140: Display Mode
 - ② P241: Valve Proving Activation
 - ③ P954: Flame Signal AZL
 - ④ P515.01: Actuator Activation

- NOTES:
- ① Connect either a flame rod or UV scanner (QRA4.U), not both.
 - ② Do not connect wires to any unused terminals.
 - ③ When the LME isn't controlling the combustion air blower, wire the combustion air switch between X2-01.3 and X3-02.1. Be sure to remove X2-01.3 to N, and X3-02.1 to L1.
 - ④ Add a jumper between X7-01.3 and X7-04.3 for direct spark ignition.
 - ⑤ If no actuator is being used, jumper together terminals X2-09.1, X2-09.2, X2-09.3, and X2-09.4.
 - ⑥ When using a flame rod, terminal X10-05.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

LME73 Parameter List

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME73. 811A1	PME73. 812A1	PME73. 831A1	PME73. 840A1
		PW Level	Default	Range	Description				
000 Level: Parameter Backup / Restore / Change Passwords									
041	Service Level PW	O	7173	Any 4 characters	The service level password can be changed here. It must be exactly 4 characters in length. Enter the current password, then enter the new password twice to change it (c = current, n = new, r = repeat).	•	•	•	•
042	OEM Level PW		L7unI	Any 5 characters	The OEM level password can be changed here. It must be exactly 5 characters in length. Enter the current password, then enter the new password twice to change it (c = current, n = new, r = repeat).	•	•	•	•
060	Backup / Restore	S	Backup - 0 Restore - 0	0-1	Used to perform parameter backups and restores. Backup: Transfer LME7 parameters to PME7. Restore: Transfer PME7 parameters to LME7. Set parameter to 1 and press the info button to begin the backup or restore. Once a parameter backup is successful, the screen will display "bAC End". Once a parameter restore is successful, the screen will display "rSt End".	•	•	•	•
100 Level: General Information / Display Mode									
101	LME7 Part Number	ACS410	Read only		Displays the part number of the LME7 burner control being used.	•	•	•	•
102	Production Date	Info			Date that the LME7 was produced in the DD.MM.YY format.	•	•	•	•
103	Serial Number				Serial number of the LME7.	•	•	•	•
113	Burner ID	Info	Not set	0-99999999	The burner ID can be viewed through the AZL23 but can only be set using the ACS410 software with the OCI410.40 OEM cable. The burner ID must be all digits (no letters), from 1-8 digits in length. Typically the burner serial number is used. This serves as an identifier for the parameter set. The burner ID must be set in order to perform a parameter backup to a PC using the ACS410 software. Parameter backups to the PME7 program module can be made without setting the burner ID.	•	•	•	•
119	LME7 Part Number OEM	ACS410	Read only		Displays the OEM part number of the LME7 burner control being used. Will be the same as parameter 101.	•	•	•	•
120	PME7 Part Number				Displays the part number of the PME7 program module being used.	•	•	•	•
123	Min Load Change	S	2%	1-10%	This serves as a dead band for load changes to reduce small oscillations (hunting) by the actuator. If the requested change in fire rate is less than the setting of this parameter, the actuator will not move.	•	•	•	
140	Display Mode		1	1-4	Sets what will be displayed by the LME7 integral display. 1 = phase 2 = flame signal (QRA... flame scanner or flame rod) 3 = do not use this setting 4 = load	•	•	•	•
164	Startups	Info	Reset only		Displays the total number of startups. To reset this value, press and hold the info button until the value begins to flash, then let go. The value will automatically change to 0. Press the info button again to confirm the reset.	•	•	•	•
166	Total Startups		Read only		Displays the total number of startups. Not resettable.	•	•	•	•
170	Number of Relay Cycles		Read only		Displays the number of cycles on different internal relays in the LME7. Index 00 = K12 relay cycles Index 01 = K11 relay cycles Index 02 = K2 relay cycles Index 03 = K1 relay cycles	•	•	•	•
171	Max Relay Cycles		Read only		Displays the maximum number of relay cycles allowed on the internal relays of the LME7.	•	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME73. 811A1	PME73. 812A1	PME73. 831A1	PME73. 840A1
		PW Level	Default	Range	Description				
200 Level: Burner Control									
212	Max Time Low Fire	S	58.212 sec	0-1237 sec	Sets the maximum time to let the LME7 drive the actuator to low fire before shutting the fuel valves after a call for heat has been removed from X5-03.1. This setting does not affect fuel valve closing time in the event of a safety shutdown.	•	•		
224	Time Air Pressure Switch	S/O	831 - 12.054 sec 840 - 13.818 sec	0-13.818 sec	Once the LME7 reaches phase 22 for the second time (between phases 24 and 30), this sets the length of time the LME7 will wait for air pressure switch input X3-02.1 to become energized before a lockout occurs due to lack of air pressure. As soon as the switch is made, the sequence progresses.			•	•
225	Prepurge Time		29.106 sec	0-1237 sec	Sets the prepurge time (length of phase 30). The LME7 has a base prepurge time of 2.1 seconds. This setting adds seconds to the base time.	•	•	•	•
226	Pre-Ignition Time		831 - 2.058 sec 840 - 6.174 sec	1.029-37.485 sec	The period of time that the ignition transformer (output X4-02.3) is energized before the pilot valves are opened. Sets the length of phase 38.			•	•
230	Pilot Stabilization Time		811 - 3.234 sec 812 - 3.234 sec 831 - 3.234 sec 840 - 9.408 sec	3.234-74.97 sec	This setting defines the pilot stabilizing period if a pilot is used. During this period, only the pilot valve is open. The spark is de-energized. Sets the length of phase 44.	•	•	•	•
231	Pilot and Main Overlap Time		811 - 9.996 sec 812 - 9.996 sec 831 - 2.940 sec 840 - 2.646 sec	0-74.97 sec	When a fuel train with a pilot is used, this setting defines the overlap of the pilot (output X7-01.3) and the main fuel valves. After this time expires, the pilot is de-energized. Sets the length of phase 50.	•	•	•	•
232	Main Stabilization Time		811 - 2.058 sec 812 - 2.058 sec 831 - 8.820 sec 840 - 8.820 sec	2.058-74.97 sec	This setting defines the main stabilizing period if a pilot is used. During this period, only the main valve is open. The pilot valve is de-energized. "oP1" will be displayed during this time.	•	•	•	•
234	Postpurge Time		811 - 19.404 sec 812 - 19.404 sec 831 - 0 sec 840 - 19.404 sec	0-1237 sec	Sets the postpurge time (length of phase 74).	•	•	•	•
237	POC Switch	S	1	0-2	This setting defines the function of POC switch input X2-02.4. 0 = deactivated 1 = activated (verify POC switch is closed on startup and shutdown) 2 = activated (verify POC switch is closed on startup and shutdown, and verify POC switch is open during main operation)	•	•		
239	Forced Intermittent	S/O	811 - 0 812 - 0 831 - 1	0-1	When activated, this forces the LME7 to shut the burner down every 24 hours of uninterrupted operation. The burner will automatically restart afterwards. The purpose of the shutdown is to check and cycle safety devices. The PME73.840A1 will recycle every 24 hours. 0 = deactivated 1 = activated	•	•	•	
240	Repetition Flame		0	0-2	This sets the number of times a flame failure must occur during main operation before causing a lockout. 0 = no repetitions 1 = no repetitions 2 = 1 repetition	•	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME73. 811A1	PME73. 812A1	PME73. 831A1	PME73. 840A1
		PW Level	Default	Range	Description				
241 or 241.00	Valve Proving Activation	S/O	1	0-1	This setting determines if gas valve proving (leak testing) will be performed. On PME73.811A1, gas valve proving is performed during shutdown unless the postpurge time (parameter 234) is set to 0. In that case, valve proving occurs during startup. On PME73.831A1 and PME73.840A1, gas valve proving can be performed on startup, shutdown, or both depending on the settings of parameters 241.01 and 241.02. 0 = deactivated 1 = activated	•		•	•
241.01	Valve Proving Setup 1		831 - 0 840 - 1	0-1	Determines at which point during the burner's sequence that valve proving will be performed. Used in conjunction with parameter 241.02. 0 = valve proving on startup 1 = valve proving on shutdown			•	•
241.02	Valve Proving Setup 2		0	0-1	Determines at which point during the burner's sequence that valve proving will be performed. Used in conjunction with parameter 241.01. 0 = valve proving according to parameter 241.01 1 = valve proving on startup and shutdown			•	•
242	VP Evacuation Time		2.646 sec	0-2.646 sec	PME73.811A1 and PME73.831A1: If valve proving is performed, this specifies the length of time that the downstream valve (V2) is energized (output X7-02.3). This will evacuate any gas that might exist between the gas valves. Sets the length of phase 80. PME73.840A1: If valve proving is performed, this specifies the length of time that the upstream valve (V1) is energized (output X7-04.4). This will fill the volume between the main gas valves to line pressure. Sets the length of phase 80.	•		•	•
243	VP Upstream Test		10.290 sec	1.029-37.485 sec	PME73.811A1 and PME73.831A1: If valve proving is performed, this specifies the length of time that both the upstream and downstream valves are closed. If the pressure between the valves rises during this period (enough to open the NC valve proving pressure switch), then the upstream valve is leaking and the LME7 will lockout. A longer time period will produce a more sensitive test. Sets the length of phase 81. PME73.840A1: If valve proving is performed, this specifies the length of time that both the upstream and downstream valves are closed. If the pressure between the valves falls during this period (enough to close the NC valve proving pressure switch), then the downstream valve is leaking and the LME7 will lockout. A longer time period will produce a more sensitive test. Sets the length of phase 81.	•		•	•
244	VP Fill Time		2.646 sec	0-2.646 sec	PME73.811A1 and PME73.831A1: If valve proving is performed, this specifies the length of time that the upstream valve (V1) is energized (output X7-04.4). This will fill the volume between the main gas valves to line pressure. Sets the length of phase 82. PME73.840A1: If valve proving is performed, this specifies the length of time that the downstream valve (V2) is energized (output X7-04.4). This will evacuate any gas that might exist between the gas valves. Sets the length of phase 82.	•		•	•
245	VP Downstream Test	10.290 sec	1.029-37.485 sec	PME73.811A1 and PME73.831A1: If valve proving is performed, this specifies the length of time that both the upstream and downstream valves are closed. If the pressure between the valves falls during this period (enough to close the NC valve proving pressure switch), then the downstream valve is leaking and the LME7 will lockout. A longer time period will produce a more sensitive test. Sets the length of phase 83. PME73.840A1: If valve proving is performed, this specifies the length of time that both the upstream and downstream valves are closed. If the pressure between the valves rises during this period (enough to open the NC valve proving pressure switch), then the upstream valve is leaking and the LME7 will lockout. A longer time period will produce a more sensitive test. Sets the length of phase 83.	•		•	•	

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME73. 811A1	PME73. 812A1	PME73. 831A1	PME73. 840A1
		PW Level	Default	Range	Description				
247	Intermittent Pilot	S/O	0	0-1	Sets the type of pilot being used. If set to 1, the pilot valve will remain open from phase 40 to the end of main operation (oP...). 0 = interrupted pilot 1 = intermittent pilot	•	•		•
254	Flame Failure Response Time (FFRT)		811 - 1 812 - 1 831 - 0	0-1	Sets the flame failure response time (FFRT). The FFRT is the maximum length of time that the flame signal can go away before a lockout occurs. This setting also doubles as the length of time the signal from the air pressure switch can go away before a lockout occurs. On PME73.840A1, the FFRT is fixed at 1 second. 0 = 1 second 1 = 3 seconds	•	•	•	
257	Trial for Ignition		811 - 4.116 sec 812 - 4.116 sec 831 - 2.205 sec 840 - 2.205 sec	0-13.23 sec	This setting defines the overlap of the spark (output X4-02.3) and the pilot valve (output X7-01.3) if a pilot is used. The LME7 has a base time of 0.3 seconds. This setting adds seconds to the base time. Sets the length of phase 40.	•	•	•	•
259 or 259.00	Actuator Opening Time		811 - 58.212 sec 812 - 58.212 sec 831 - 67.914 sec 840 - 300.762 sec	0-1237 sec	Set slightly longer than the time it takes for the actuator to drive from fully closed to fully open.	•	•	•	•
259.01	Actuator Time From Ignition to Position Above Low Fire		14.994 sec	0-37.485 sec	Sets the amount of time the actuator has to move from the ignition position to a position above low fire in phase 54 in the case that the ignition position is set below the low fire position. If the ignition position is set equal to or above the low fire position, set this parameter to 0.			•	
259.02	Actuator Time From Low Fire to Position Above Ignition		14.994 sec	0-37.485 sec	Sets the amount of time the actuator has to move from the low fire position to a position above ignition in phase 36 in the case that the low fire position is set below the ignition position and prepurge occurs at low fire. If prepurge occurs at high fire or if the low fire position is set equal to or above the ignition position, set this parameter to 0.			•	
260	Actuator Closing Time		811 - 58.212 sec 812 - 58.212 sec 831 - 67.914 sec 840 - 300.762 sec	0-1237 sec	Set slightly longer than the time it takes for the actuator to drive from fully open to fully closed.	•	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME73. 811A1	PME73. 812A1	PME73. 831A1	PME73. 840A1
		PW Level	Default	Range	Description				
500 Level: Actuator Configuration (These parameters are found at the end of the 200 level parameters)									
515 or 515.00	Actuator Purge Position	S/O	1	0-1	Determines the position of the actuator during prepurge and postpurge. Note: This parameter is found at the end of the 200 level parameters. 0 = Purge at low fire 1 = Purge at high fire			•	•
515.01	Actuator Activation		1	0-1	Used to activate or deactivate the use of an actuator. Note: This parameter is found at the end of the 200 level parameters. 0 = deactivated (no actuator) 1 = activated (with actuator)				•
560	Analog Input Type	S	0	0-2	Sets the type of input being used to control the actuator. 0 = no actuator / 3-position input 1 = do not use this setting (for future use only) 2 = analog input			•	
600 Level: Analog Input Configuration									
654	Analog Input	S	811 - 1 812 - 1 831 - 0	0-5	Sets the type of input signal being connected to terminal X65 or X5-03. This input signal is used to determine the actuator position during operation. 0 = 3-position 1 = 0-10 VDC 2 = 0-135 Ohm 3 = 0-20 mA 4 = 4-20 mA with lockout when input is less than 4 mA 5 = 4-20 mA without lockout when input is less than 4 mA	•	•	•	
700 Level: Fault History									
701-711	Fault History	Ser	Read only		Shows the current status (fault) along with the 10 most recent faults. 701 = current status, 702 = most recent fault, 703 = next most recent fault, etc. Each fault has indices that provide additional information about the fault: Index 00 = fault code Index 01 = start number Index 02 = phase Index 03 = load	•	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME73.811A1	PME73.812A1	PME73.831A1	PME73.840A1
		PW Level	Default	Range	Description				
900 Level: Operational Data									
903	Current Output / Stage	ACS410	Read only		Not applicable to the LME73. Displays as "----" for all PME73... program modules.	•	•	•	•
908	Target Speed %				Not applicable to the LME73. Displays as "----" for all PME73... program modules.	•	•	•	•
920	Actual PWM Output	Ser			Not applicable to the LME73. Displays as "----" for all PME73... program modules.	•	•	•	•
922	Actual Actuator Position	ACS410			When an actuator is used and a potentiometer is connected, this displays the real-time position of the actuator.	•	•	•	•
923	Target Actuator Position				When an actuator is used and a potentiometer is connected, this displays the target position of the actuator during main operation. Displays as "----" during all other phases.	•	•	•	•
935	Actual Speed RPM				Not applicable to the LME73. Displays as "----" for all PME73... program modules.	•	•	•	•
936	Actual Speed %	Ser			Not applicable to the LME73. Displays as "----" for all PME73... program modules.	•	•	•	•
944	Analog Input %	ACS410			Displays the real time analog input signal on terminal X65 as a percentage from 0-100%.	•	•	•	•
951	Mains Voltage AZL	Ser			Displays the real time mains voltage. Measured at terminal X3-04 pin 4 (neutral) and pin 5 (line).	•	•	•	•
954	Flame Signal AZL				Displays the raw flame signal from 0-100% for any flame sensor type. This signal refers to input terminal X10-06 (UV scanners) or input terminal X10-05.2 (flame rods).	•	•	•	•
961	Actual Phase	ACS410			Displays the real time phase of the LME7.	•	•	•	•
3007	Flame Signal 1 Status				Displays the status of the flame rod input X10-05.2. A value of 1 indicates a valid flame signal is present, and a value of 0 indicates that no valid flame signal is present.	•	•	•	•
3008	Flame Signal 2 Status				Displays the status of UV flame scanner input X10-06. A value of 1 indicates a valid flame signal is present, and a value of 0 indicates that no valid flame signal is present.	•	•	•	•
3033	Blower				Displays the status of blower output X2-01.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•
3034	Ignition				Displays the status of ignition transformer output X4-02.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•
3035	Safety Valve			Displays the status of safety valve output X6-03.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•	
3036	Main Valve A			Displays the status of main valve output X7-04.3. This is the upstream valve V1 output on PME73.811A1, PME73.812A1 and PME73.831A1, and the downstream valve V2 output on PME73.840A1. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•	
3037	Main Valve B			Displays the status of main valve output X7-02.3. This is the downstream valve V2 output on PME73.811A1 and PME73.831A1 and the upstream valve V1 output on PME73.840A1. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•	

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME73. 811A1	PME73. 812A1	PME73. 831A1	PME73. 840A1
		PW Level	Default	Range	Description				
3039	Pilot Valve	ACS410	Read only		Displays the status of pilot valve output X7-01.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•
3088	Reset				Displays the status of the info button on the LME7. When the info button is pressed, this value is a 1, and when the info button is not pressed, this value is a 0.	•	•	•	•
3089	Remote Reset				Displays the status of remote reset input X2-03.1. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•
3090	Air Pressure Switch Status				Displays the status of air pressure switch input X3-02.1. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•
3091	Gas Pressure Switches				Displays the status of gas pressure switch input X5-01.2. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•
3092	Burner Enable				Displays the status of burner enable input X5-03.1. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•
3133	Alarm				Displays the status of alarm output X2-03.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•
3303	Mains Voltage ACS410				Displays the real time mains voltage. Measured at terminal X3-04 pin 4 (neutral) and pin 5 (line).	•	•	•	•
3307	Flame Signal 1 ACS410				Displays the flame signal strength (%) from a flame rod on terminal X10-05.2.	•	•	•	•
3308	Flame Signal 2 ACS410				Displays the flame signal strength (%) from a UV flame scanner on terminal X10-06.	•	•		

LME73 Phase Diagrams

The Siemens LME7 burner controls can perform a number of different burner sequences based upon which PME7 program module is used, how certain parameters are set, and how the LME7 is wired.

Each program module has an associated phase diagram. The phase diagrams illustrate when input and output terminals are expected to be energized or de-energized. A legend on the bottom of each page describes the various symbols used in the diagrams.

Notes:

- 1) A jumper can be added between terminals X7-04.3 and X7-01.3 for direct spark ignition. If this jumper is added, pilot valve output X7-01.3 and main valve output X7-04.3 will be energized from phase 40 through the end of operation.
- 2) On PME73.811A1, if the LME7 is set to perform valve proving, valve proving will always take place during shutdown unless it is the next startup following a lockout or power loss, or if the postpurge time (parameter 234) is set to 0. In that case, valve proving occurs during startup and shutdown. When valve proving occurs during shutdown, it will happen at the same time as postpurge. Phases 80-83 will be displayed on the LME7 and the AZL23 even though postpurge (phase 74) is also occurring at the same time. The actual postpurge time will be at least the sum of all four valve proving time parameters (242, 243, 244, and 245). When valve proving occurs during startup, it will happen at the same time as prepurge. Phases 80-83 will be displayed on the LME7 and the AZL23 even though prepurge (phase 30) is also occurring at the same time. The actual prepurge time will be at least the sum of all four valve proving time parameters (242, 243, 244, and 245).
- 3) On PME73.831A1 and PME73.840A1, if the LME7 is set to perform valve proving on startup, valve proving takes place at the same time as prepurge. Phases 80-83 will be displayed on the LME7 and the AZL23 even though prepurge (phase 30) is also occurring at the same time. The actual prepurge time will be at least the sum of all four valve proving time parameters (242, 243, 244, and 245).
- 4) On PME73.831A1 and PME73.840A1, if the LME7 is set to perform valve proving on shutdown, valve proving takes place at the same time as postpurge. Phases 80-83 will be displayed on the LME7 and the AZL23 even though postpurge (phase 74) is also occurring at the same time. The actual postpurge time will be at least the sum of all four valve proving time parameters (242, 243, 244, and 245).
- 5) On PME73.831A1, energizing input X2-02.4 will disable valve proving if valve proving is enabled via parameter 241.00. The LME7 checks this input in phase 30 if valve proving is taking place during startup or phase 72 if valve proving is taking place during shutdown.

PME73.812A1 Phase Diagram

	Lockout	Standby, Waiting for Call for Heat	Test - Air Pressure Switch Open	Blower On	Drive to Prepurge Position	Test - Air Pressure Switch Closed	Prepurge	Drive to Ignition Position	Trial for Ignition	Flame Detection	Interval 1: Pilot Stabilization	Safety Time 2: Pilot and Main Overlap	Interval 2: Main Stabilization	Operation	Drive to Low Fire	Drive to Postpurge Position	Postpurge	Home Run
Phase	LOC	OFF	21	22	24	22	30	36	40	42	44	50	oP1	oP	oP1	72	74	10
Param.					259		225	260	257		230	231	232	240	212		234	

	Terminal	Description	Notes	STARTUP													OPERATION		SHUTDOWN	
				LOC	OFF	21	22	24	22	30	36	40	42	44	50	oP1	oP	oP1	72	74
INPUTS	X3-04.5	Main Voltage																		
	X3-04.1	Safety Loop		X																
	X5-03.1	Burner On		M																
	X3-02.1	Air Pressure Switch			X			M												
	X5-01.2	Gas Pressure Switch(es)																		
	X10-05.2 X10-06.1/2	Flame Signal			X				X	X										
	X2-02.4	POC (P237 = 1) POC (P237 = 2)												X						
OUTPUTS	X2-02.3	POC Source		X	X															
	X6-03.3	Safety Valve		X	X															
	X2-01.3	Blower		X	X	X														
	X4-02.3	Ignition Transformer		X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	
	X7-01.3	Pilot Valve	Note 1	X	X	X	X	X	X	X					X	X	X	X	X	
	X7-04.3	Main Valves	Note 1	X	X	X	X	X	X	X	X	X	X					X	X	
	X7-04.4	Main Valve Indication Light		X	X	X	X	X	X	X	X	X	X					X	X	
X2-03.3	Alarm			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X		
ACTUATOR	X2-09.3	Drive to High Fire		X	X	X	X			X	X	X	X	X		X	X	X		
	X2-09.2	Drive to Low Fire		X	X	X	X	X	X	X	X	X	X	X			X	X		
	X7-02.3	Drive to Ignition		X	X	X	X	X	X					X	X	X	X	X		
	X2-09.1	Drive Closed		X	X		X	X	X	X	X	X	X	X	X	X	X	X		
	X2-09.4	Position Feedback				M										M				

Legend :
 Energized
 Energized or de-energized
X De-energized
M Must be energized by end of phase
 Must be de-energized at beginning of phase and energized by end of phase

PME73.831A1 Phase Diagram

	Terminal	Description	Notes	STARTUP														OPERATION		SHUTDOWN		VALVE PROVING				
				LOC	OFF	21	22	24	22	30	36	38	40	42	44	50	54	oP1	oP	72	74	10	80	81	82	83
				Param.				259		225	260	226	257		230	231	260	232	240		234		242	243	244	245
INPUTS	X3-04.5	Main Voltage																								
	X3-04.1	Safety Loop			X																					
	X5-03.1	Burner On			M																					
	X3-02.1	Air Pressure Switch				X			M																	
	X5-01.2	Gas Pressure Switch(es)																								
	X9-04.2	Valve Proving Pressure Switch																								
	X10-05.2 X10-06.1/2	Flame Signal				X				X	X													X		
X2-02.4	VP Disable								Note 5														Note 5			
OUTPUTS	X2-02.3	VP Disable Source		X	X																					
	X6-03.3	Safety Valve		X	X																					
	X2-01.3	Blower		X	X	X																	X			
	X4-02.3	Ignition Transformer		X	X	X	X	X	X	X				X	X	X	X	X	X	X	X	X	X	X		
	X7-01.3	Pilot Valve	Note 1	X	X	X	X	X	X	X						X	X	X	X	X	X	X	X	X		
	X7-04.3	Main Valve V1		X	X	X	X	X	X	X	X										X	X	X	X		
	X7-02.3	Main Valve V2	Note 1	X	X	X	X	X	X	X	X	X	X	X							X	X	X	X		
Main Valve Indication Light			X	X	X	X	X	X	X	X	X	X	X							X	X	X	X			
X2-03.3	Alarm			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X			
ACTUATOR	X2-09.3	Drive to High Fire		X	X	X	X		X	X	X	X	X	X	X	X				X	X	X	X			
	X2-09.2	Drive to Low Fire		X	X	X	X	X	X	X	X	X	X	X	X		X			X	X	X	X			
	X2-09.1	Drive Closed		X	X		X	X	X	X	X	X	X	X	X	X	X	X		X	X	X				
	X2-09.4	Position Feedback		X	X	M	X		X	X	X	X	X	X	M	X				X	X	X	M			
	X2-09.7	Drive to Ignition Position		X	X	X	X	X	X											X	X	X	X			
	X2-09.8	Ignition Feedback		X	X	X	X	X	X	M										X	X	X	X			

Legend : Energized X De-energized Must be de-energized at beginning of phase and energized by end of phase

M Must be energized by end of phase Energized or de-energized

PME73.840A1 Phase Diagram

	Phase	Param.	Lockout	Standby, Waiting for Call for Heat	Test - Air Pressure Switch Open	Blower On	Drive to Pre-purge Position	Test - Air Pressure Switch Closed	Pre-purge (Note 3)	Drive to Ignition Position	Pre-ignition	Trial for Ignition	Flame Detection	Interval 1: Pilot Stabilization	Safety Time 2: Pilot and Main Overlap	Interval 2: Main Stabilization	Operation	Drive to Post-purge Position	Post-purge (Note 4)	Home Run	Evacuate	Atmospheric Test	Fill	Pressure Test	
			LOC	OFF	21	22	24	22	30	36	38	40	42	44	50	oP1	oP1	72	74	10					80
							259	224	225	260	226	257		230	231	232	240		234		242	243	244	245	
STARTUP																	OPERATION	SHUTDOWN		VALVE PROVING					
Terminal	Description	Notes																		SAFETY TIME 1					
INPUTS	X3-04.5	Main Voltage																							
	X3-04.1	Safety Loop		X																					
	X5-03.1	Burner On		M																					
	X3-02.1	Air Pressure Switch			X			M																	
	X5-01.2	Gas Pressure Switch(es)																							
	X9-04.2	Valve Proving Pressure Switch																						X	
	X10-05.2 X10-06.1/2	Flame Signal		X					X	X															
X2-02.4	POC																								
OUTPUTS	X2-02.3	POC Source	X	X																					
	X6-03.3	Safety Valve	X	X																					
	X2-01.3	Blower	X	X	X																			X	
	X4-02.3	Ignition Transformer	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X	X	
	X7-01.3	Pilot Valve	Note 1	X	X	X	X	X	X	X	X					X	X	X	X	X	X	X	X	X	
	X7-02.3	Main Valve V1		X	X	X	X	X	X	X	X								X	X	X	X	X	X	
	X7-04.3	Main Valve V2	Note 1	X	X	X	X	X	X	X	X	X	X	X					X	X	X	X	X	X	
	X7-04.4	Main Valve Indication Light		X	X	X	X	X	X	X	X	X	X	X					X	X	X	X	X	X	
X2-03.3	Alarm			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X		
ACTUATOR	X2-09.3	Drive to High Fire	X	X	X	X		X	X	X	X	X	X	X	X	X				X	X	X	X	X	
	X2-09.2	Drive to Ignition / Low Fire	X	X	X	X	X	X	X							X			X	X	X	X	X	X	
	X2-09.1	Drive Closed	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	
	X2-09.4	Position Feedback			M																				

Legend : Energized De-energized Must be de-energized at beginning of phase and energized by end of phase

Energized or de-energized Must be energized by end of phase

Intentionally Left Blank

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide


LME75 Wiring Diagrams

The following pages show the terminal ratings and wiring diagrams for the different PME75... program modules used with the LME75... burner control.

LME75 Terminals				
Terminal	Type	Function	Parameter	Rating
X2-01.1	PE	Protective Earth ground	Not configurable	---
X2-01.2	Neutral	Neutral		---
X2-01.3	Fixed Output	Blower motor starter		2A, 120VAC
X2-02.1	PE	Protective Earth ground		---
X2-02.2	Neutral	Neutral		---
X2-02.3	Line	POC switch power		2A, 120VAC
X2-02.4	Programmable Input	POC switch, high gas pressure switch, or valve proving disable	237 - POC Switch 237.01 - HGPS	2.5mA, 120VAC
X2-03.1	Input	Remote reset	Not configurable	2.5mA, 120VAC
X2-03.2	Neutral	Neutral		---
X2-03.3	Fixed Output	Alarm		1A, 120VAC
X2-09.1	Programmable Output	Actuator drive to closed	259 - Actuator Timings 260 - Actuator Closing Time 515.00 - Actuator Purge Position	0.1A, 120VAC
X2-09.2	Programmable Output	Actuator drive to low fire/ignition		
X2-09.3	Programmable Output	Actuator drive to high fire		
X2-09.4	Fixed Input	Actuator position feedback	515.01 - Actuator Activation	2.5mA, 120VAC
X2-09.5	Not Used	Not used	Not configurable	---
X2-09.6	Neutral	Neutral		---
X2-09.7	Fixed Output	Auxiliary output		1A, 120VAC
X2-09.8	Fixed Input	Auxiliary input		
X3-02.1	Programmable Input	Air pressure switch	224 - Time APS 235 - APS Evaluation 235.01 - Response Time APS	2.5mA, 120VAC
X3-02.2	Line	Line	Not configurable	500mA, 120VAC
X3-04.1	Fixed Input	Safety loop (safety limits)		5A, 120VAC
X3-04.2	Line	Safety loop power		2A, 120VAC
X3-04.3	PE	Incoming power - Protective Earth		---
X3-04.4	Neutral	Incoming power - Neutral		---
X3-04.5	Line	Incoming power - Line		5A, 120VAC
X4-02.1	PE	Protective Earth ground		---
X4-02.2	Neutral	Neutral		---
X4-02.3	Programmable Output	Ignition transformer	226 - Pre-ignition Time 257 - Trial for Ignition	2A, 120VAC
X5-01.1	PE	Protective Earth ground	Not configurable	---
X5-01.2	Programmable Input	Gas pressure switches	223 - LGP Shutdown Behavior 236 - LGP Evaluation	2.5mA, 120VAC
X5-01.3	Line	Line	Not configurable	500mA, 120VAC
X5-03.1	Fixed Input	Burner switch		
X5-03.2	Programmable Input	Decrease fire rate	654 - Analog Input	2.5mA, 120VAC
X5-03.3	Programmable Input	Increase fire rate		
X5-03.4	Line	Line	Not configurable	500mA, 120VAC

LME75 Terminals				
Terminal	Type	Function	Parameter	Rating
X6-03.1	PE	Protective Earth ground	Not configurable	---
X6-03.2	Neutral	Neutral		---
X6-03.3	Fixed Output	Safety valve		1.5A, 120VAC
X7-01.1	PE	Protective Earth ground		---
X7-01.2	Neutral	Neutral		---
X7-01.3	Programmable Output	Pilot valve	230 - Pilot Stabilization Time 231 - Pilot & Main Overlap Time 247 - Intermittent Pilot 257 - Trial for Ignition	1A, 120VAC
X7-02.1	PE	Protective Earth ground	Not configurable	---
X7-02.2	Neutral	Neutral		---
X7-02.3	Programmable Output	Main fuel valve V2 or actuator drive to ignition	231 - Pilot & Main Overlap Time 232 - Main Stabilization Time	2A, 120VAC
X7-04.1	PE	Protective Earth ground	Not configurable	---
X7-04.2	Neutral	Neutral		---
X7-04.3	Programmable Output	Main fuel valve V1	231 - Pilot & Main Overlap Time 232 - Main Stabilization Time	2A, 120VAC
X7-04.4	Programmable Output	Main valve indication light		
X9-04.1	PE	Protective Earth ground	Not configurable	---
X9-04.2	Programmable Input	Valve proving pressure switch or high gas pressure switch	237.01 - High Gas Pressure Switch 241 - Valve Proving Activation	2.5mA, 120VAC
X9-04.3	Line	Line	Not configurable	500mA, 120VAC
X10-05.1	Programmable Input	QRI / QRA7 flame signal	179 - Two Flame Sensor Logic 216 - Extran. Light Tolerance Time 217.01 - FFRT 954 - Flame signal AZL	5VDC nominal
X10-05.2	Programmable Output	QRI / QRA7 power supply	180 - Self-Check Time	100mA, 14-21VDC
X10-05.3	PE	Protective Earth	Not configurable	---
X10-05.4	Neutral	Neutral		---
X10-05.5	Line	Line		500mA, 120VAC
X10-06.1	Burner Ground	Burner ground for flame rod		---
X10-06.2	Programmable Input	Ionization probe signal (flame rod)	217.01 - FFRT 954 - Flame signal AZL	Max 30µA
X65.1	Programmable Input	Analog input (+) for load control	654 - Analog Input	0-10VDC 0/4-20mA, 500Ω 0-135Ω
X65.2		Analog input (-) for load control		
X66.1	Fixed Output	Actuator feedback pot - power supply	Not configurable	5mA, 5VDC
X66.2	Fixed Input	Actuator feedback pot - signal		---
X66.3	Ground	Actuator feedback pot - ground		---
X76.1	Fixed Output	Power supply		10mA, 24VDC
X76.2	Programmable Output	PWM speed control signal (to blower)	519 - Maximum Blower Speed 644 - Feedback Pulse / Rev 650 - Tolerance Band	0.5mA, 24VDC
X76.3	Programmable Input	PWM speed feedback (from blower)		0.4-1mA, 12-24VDC
X76.4	Ground	Power supply ground	Not configurable	---

PME75.811A1 – Modulating actuator control with valve proving; self-check scanner or flame rod; ignition position = low fire

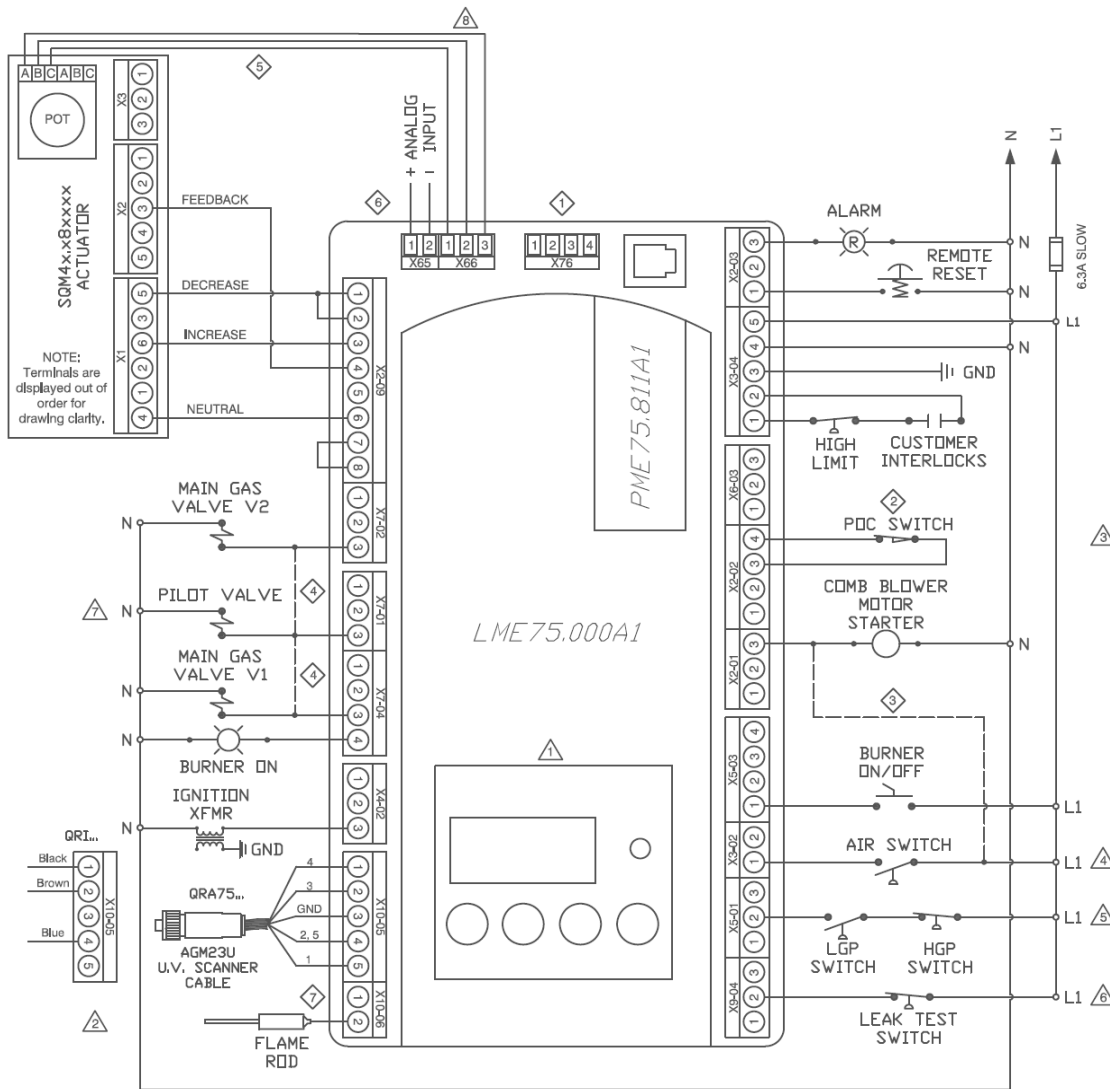


Parameters:

- ⚠ P140: Display Mode
- ⚠ P217.01: Flame Failure Response Time
P954: Flame Signal AZL
- ⚠ P237.00: POC Switch
P237.01: High Gas Pressure Switch
- ⚠ P235.00: Air Pressure Switch Evaluation
- ⚠ P236: Low Gas Pressure Evaluation
- ⚠ P241: Valve Proving Activation
- ⚠ P247: Intermittent Pilot
- ⚠ P515.01: Actuator Activation
P560: Analog Input Type
P654: Analog Input Signal

NOTES:

- ⚠ Do not connect wires to any unused terminals.
- ⚠ If no POC switch is being used, X2-02.4 can be used as a high gas pressure switch input (see param. 237.01). When X2-02.4 is not being used at all, place a jumper from X2-02.3 to X2-02.4 or set param. 237.00 = 0 and param. 237.01 = 0.
- ⚠ When the LME7 isn't controlling the combustion air blower, wire the combustion air switch between X2-01.3 and X3-02.1. Be sure to remove X2-01.3 to N, and X3-02.1 to L1.
- ⚠ Add jumpers between X7-01.3 and X7-04.3 and between X7-01.3 and X7-02.3 for direct spark ignition. Valve proving is not possible with direct spark ignition.
- ⚠ Wiring shown is for an SQM40... actuator. If using an SQM41... actuator, swap the wires going to terminals A and C on the potentiometer.
- ⚠ For 0-135 Ohm input, wire W to X65.1 and R & B to X65.2
- ⚠ When using a flame rod, terminal X10-06.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

PME75.812A1 - Modulating actuator control with independent ignition position; no valve proving; self-check scanner or flame rod

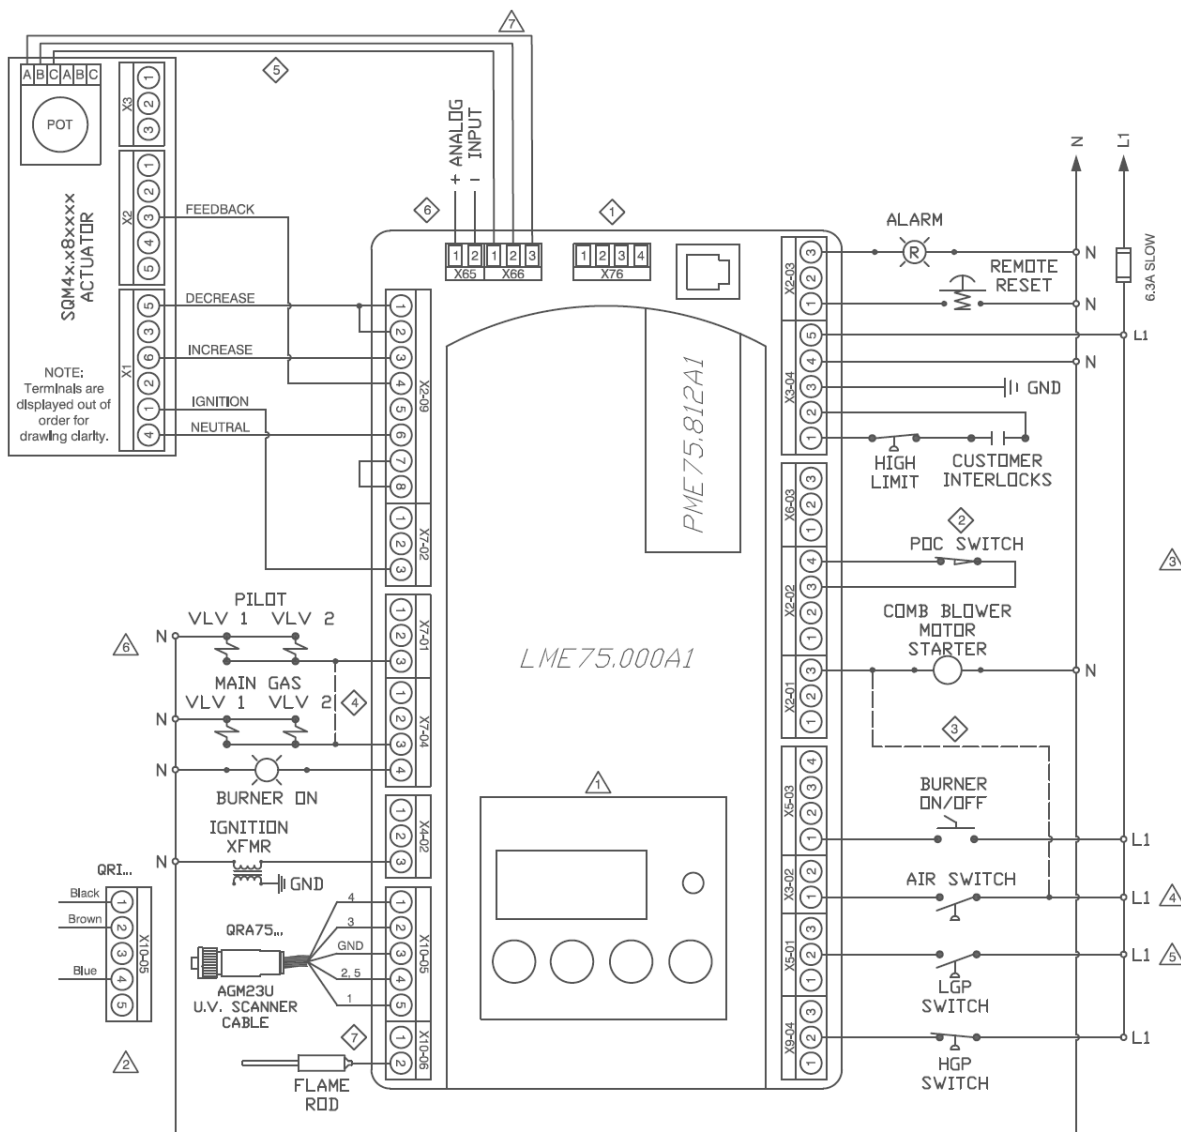


Parameters:

- Ⓐ P140: Display Mode
- Ⓑ P217.01: Flame Failure Response Time
P954: Flame Signal AZL
- Ⓒ P237.00: POC Switch
P237.01: High Gas Pressure Switch
- Ⓓ P235.00: Air Pressure Switch Evaluation
- Ⓔ P236: Low Gas Pressure Evaluation
- Ⓕ P247: Intermittent Pilot
- Ⓖ P515.01: Actuator Activation
P560: Analog Input Type
P654: Analog Input Signal

NOTES:

- Ⓐ Do not connect wires to any unused terminals.
- Ⓑ When no POC switch is being used, place a jumper from X2-02.3 to X2-02.4 or set parameter 237.00 = 0.
- Ⓒ When the LME7 isn't controlling the combustion air blower, wire the combustion air switch between X2-01.3 and X3-02.1. Be sure to remove X2-01.3 to N, and X3-02.1 to L1.
- Ⓓ Add a jumper between X7-01.3 and X7-04.3 for direct spark ignition.
- Ⓔ Wiring shown is for an SQM40... actuator. If using an SQM41... actuator, swap the wires going to terminals A and C on the potentiometer.
- Ⓕ For 0-135 Ohm input, wire W to X65.1 and R & B to X65.2
- Ⓖ When using a flame rod, terminal X10-06.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

PME75.831A1 - Modulating actuator control with valve proving; with independent ignition position; self-check scanner or flame rod; no POC

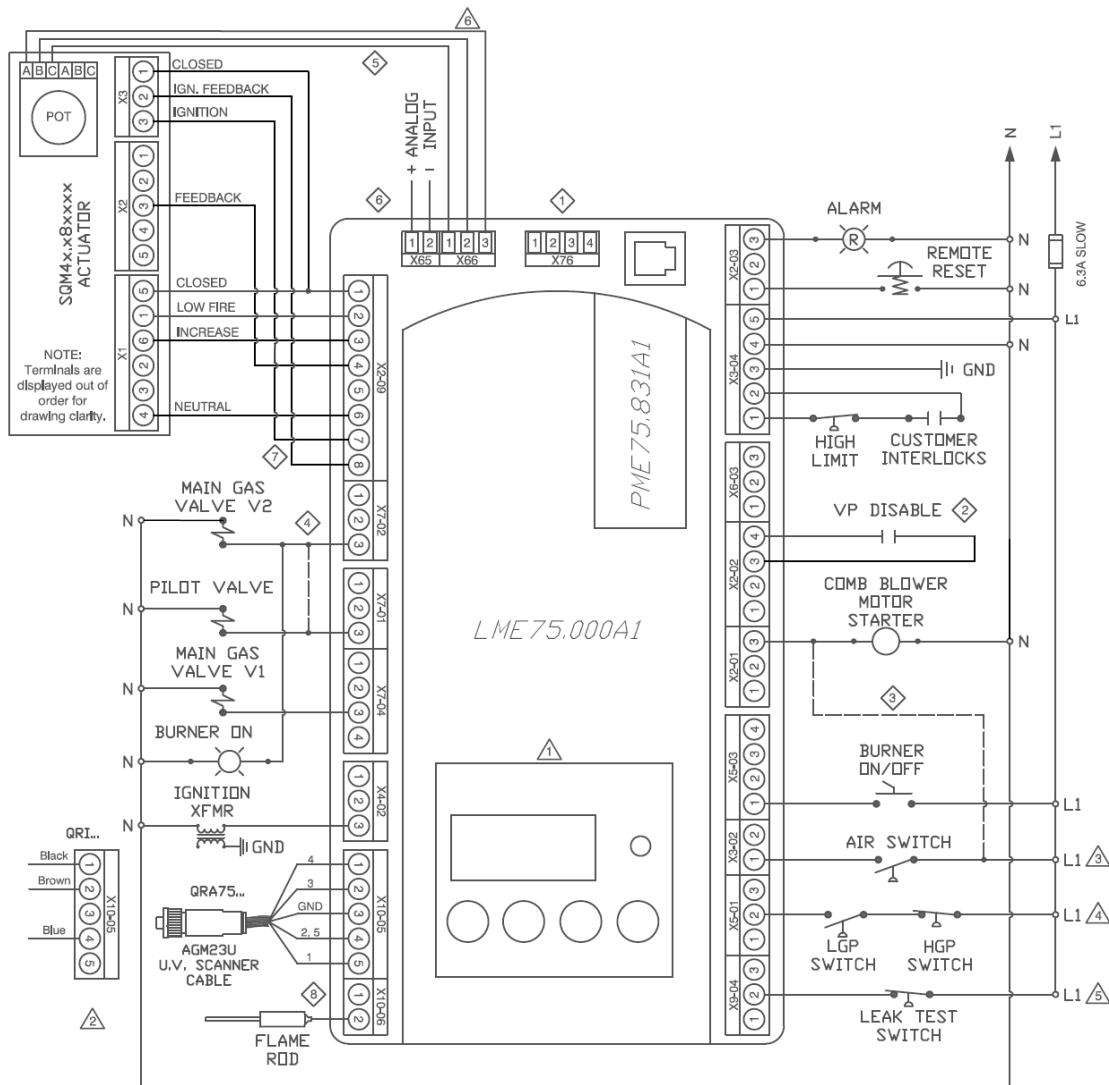

Parameters:

- ① P140: Display Mode
- ② P217.01: Flame Failure Response Time
P954: Flame Signal AZL
- ③ P235.00: Air Pressure Switch Evaluation
- ④ P236: Low Gas Pressure Evaluation
- ⑤ P241: Valve Proving Activation
- ⑥ P515.01: Actuator Activation
P560: Analog Input Type
P654: Analog Input Signal

NOTES:

- ① Do not connect wires to any unused terminals.
- ② If no VP disable contact is being used, X2-02.4 can be used as a high gas pressure switch input (see parameter 237.01). When X2-02.4 is not being used at all, set parameter 237.01 = 0.
- ③ When the LME7 isn't controlling the combustion air blower, wire the combustion air switch between X2-01.3 and X3-02.1. Be sure to remove X2-01.3 to N, and X3-02.1 to L1.
- ④ Add a jumper between X7-01.3 and X7-02.3 for direct spark ignition.
- ⑤ Wiring shown is for an SQM40... actuator. If using an SQM41... actuator, swap the wires going to terminals A and C on the potentiometer.
- ⑥ For 0-135 Ohm input, wire W to X65.1 and R & B to X65.2
- ⑦ If actuator control is disabled, add a jumper between X2-09.7 and X2-09.8
- ⑧ When using a flame rod, terminal X10-06.1 must be connected to the burner ground if there is no main ground connection on terminal X3-04.3.

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75. 811A1	PME75. 812A1	PME75. 831A1	PME75. 901A1
		PW Level	Default	Range	Description				
000 Level: Parameter Backup / Restore / Change Passwords									
041	Service Level PW	O	7576	Any 4 characters	The service level password can be changed here. It must be exactly 4 characters in length. Enter the current password, then enter the new password twice to change it (c = current, n = new, r = repeat).	•	•	•	•
042	OEM Level PW		L7unI	Any 5 characters	The OEM level password can be changed here. It must be exactly 5 characters in length. Enter the current password, then enter the new password twice to change it (c = current, n = new, r = repeat).	•	•	•	•
060	Backup / Restore	S	Backup - 0 Restore - 0	0-1	Used to perform parameter backups and restores. Backup: Transfer LME7 parameters to PME7. Restore: Transfer PME7 parameters to LME7. Set parameter to 1 and press the info button to begin the backup or restore. Once a parameter backup is successful, the screen will display "bAC End". Once a parameter restore is successful, the screen will display "rSt End".	•	•	•	•
100 Level: General Information / Display Mode									
101	LME7 Part Number	ACS410	Read only		Displays the part number of the LME7 burner control being used.	•	•	•	•
102	Production Date	Info			Date that the LME7 was produced in the DD.MM.YY format.	•	•	•	•
103	Serial Number				Serial number of the LME7.	•	•	•	•
113	Burner ID	Info	Not set	0-99999999	The burner ID can be viewed through the AZL23 but can only be set using the ACS410 software with the OCI410.40 OEM cable. The burner ID must be all digits (no letters), from 1-8 digits in length. Typically the burner serial number is used. This serves as an identifier for the parameter set. The burner ID must be set in order to perform a parameter backup to a PC using the ACS410 software. Parameter backups to the PME7 program module can be made without setting the burner ID.	•	•	•	•
119	LME7 Part Number OEM	ACS410	Read only		Displays the OEM part number of the LME7 burner control being used. Will be the same as parameter 101.	•	•	•	•
120	PME7 Part Number				Displays the part number of the PME7 program module being used.	•	•	•	•
123	Min Load Change	S	2%	1-10%	This serves as a dead band for load changes to reduce small oscillations (hunting) by the actuator. If the requested change in fire rate is less than the setting of this parameter, the actuator will not move.	•	•	•	•
140	Display Mode		811 - 3 812 - 1 831 - 1 901 - 4	1-4	Sets what will be displayed by the LME7 integral display. 1 = phase 2 = flame signal (flame rod) 3 = flame signal (QRA75... or QRI... flame scanner) 4 = load	•	•	•	•
164	Startups	Info	Reset only		Displays the total number of startups. To reset this value, press and hold the info button until the value begins to flash, then let go. The value will automatically change to 0. Press the info button again to confirm the reset.	•	•	•	•
166	Total Startups				Displays the total number of startups. Not resettable.	•	•	•	•
170	Number of Relay Cycles				Read only	Displays the number of cycles on different internal relays in the LME7. Index 00 = K12 relay cycles (PME75.901A1) or K8 relay cycles (all other PME75 chips) Index 01 = K11 relay cycles (PME75.901A1) or K7 relay cycles (all other PME75 chips) Index 02 = K2 relay cycles Index 03 = K1 relay cycles	•	•	•
171	Max Relay Cycles			Displays the maximum number of relay cycles allowed on the internal relays of the LME7.	•	•	•	•	

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75. 811A1	PME75. 812A1	PME75. 831A1	PME75. 901A1
		PW Level	Default	Range	Description				
179	Two Flame Sensor Logic	S/O	0	0-1	The LME75 allows the use of two flame sensors at the same time (one flame rod and one flame scanner). This sets the logic for the flame sensor inputs. 0 = OR logic - a valid flame signal must be present on one of the two flame signal inputs. This applies from the end of phase 42 through the end of burner operation. 1 = AND logic - a valid flame signal must be present on both flame signal inputs. This only applies from the start of phase 52 through the end of operation on PME75.8... chips and only applies during main operation on PME75.901A1. During phases 42-50 on PME75.8... chips and phases 42-44 on PME75.901A1, only one flame signal must be present.	•	•	•	•
180	Self-Check Time		0	0-1	Sets the time interval for the test of the self-check scanner. On the QRA75... scanner, this sets the length of time between shutter operations. 0 = every 5 minutes 1 = every 5 seconds	•	•	•	•
200 Level: Burner Control									
212	Max Time Low Fire	S	58.212 sec	0-1237 sec	Sets the maximum time to let the LME7 drive the actuator to low fire before shutting the fuel valves after a call for heat has been removed from X5-03.1. This setting does not affect fuel valve closing time in the event of a safety shutdown.	•	•		
216	Extraneous Light Tolerance Time		29.106 sec	0-1237 sec	This sets the amount of time that a flame signal must be present in standby before the LME7 goes into lockout (Loc 4). When a flame signal is present during standby, the LME7 immediately goes to Phase 04. If the flame signal goes away before this time elapses, the LME7 will switch from Phase 04 back to standby (OFF) without requiring a manual reset.	•	•	•	•
217.00	Flame On Response Time		Read only		Sets the amount of time that a flame signal must be present before the LME7 considers that flame signal to be valid. This parameter is set to 0 and is read-only, so it has no effect and cannot be changed.	•	•	•	•
217.01	Flame Failure Response Time (FFRT)	S/O	811 - 2.940 sec 812 - 1.911 sec 831 - 0 sec 901 - 0 sec	0-13.818 sec	Sets the flame failure response time (FFRT). The FFRT is the maximum length of time that the flame signal can go away before a lockout occurs. The LME75 has a base flame failure response time of 1 second. This setting adds time to the base time. For example, a default setting of 1.911 seconds means the FFRT is 2.911 seconds.	•	•	•	•
218	Forced Intermittent Time		811 - 80050.31 sec 812 - 80050.31 sec 831 - 80050.31 sec 901 - 83640.01 sec	0-80050.31 sec (0-83640.01 sec on PME75.901A1)	Sets the length of time before a forced burner shutdown occurs. If the burner has been running uninterrupted for this length of time, and parameter 239 is set to 1, the burner will shut down and automatically restart afterwards. The purpose of the shutdown is to check and cycle safety devices.	•	•	•	•
222	Prepurge Activation	S	1	0-1	Activates or deactivates prepurge after a normal shutdown. If this is set to 0, a prepurge will still occur on the next startup following a lockout or a loss of power, or if valve proving is activated and occurs during startup. 0 = deactivated 1 = activated	•	•	•	•
223	Low Gas Pressure Shutdown Behavior		1	0-1	Sets the behavior of the LME7 in the event that the low gas pressure switch connected to input X5-01.2 is de-energized. 0 = safety shutdown and start prevention - the burner is shutdown and the LME7 goes into Phase 90 until gas pressure is restored. Once gas pressure is restored, the burner will start back up automatically. 1 = lockout (Loc 20)	•	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75.811A1	PME75.812A1	PME75.831A1	PME75.901A1
		PW Level	Default	Range	Description				
224	Time Air Pressure Switch	S/O	811 - 13.818 sec 812 - 13.818 sec 831 - 12.054 sec 901 - 12.348 sec	0-13.818 sec	Once the LME7 reaches phase 22 for the second time (between phases 24 and 30), this sets the length of time the LME7 will wait for air pressure switch input X3-02.1 to become energized before a lockout occurs due to lack of air pressure. As soon as the switch is made, the sequence progresses.	•	•	•	•
225.00	Prepurge Time		811 - 29.106 sec 812 - 29.106 sec 831 - 29.106 sec 901 - 19.404 sec	0-1237 sec	Sets the prepurge time (length of phase 30) along with parameter 225.01.	•	•	•	•
225.01	Prepurge Multiplier		1	1-255	Sets a multiplier for the prepurge time. The actual prepurge time (length of phase 30) is determined by multiplying parameter 225.00 and this parameter.	•	•	•	•
226	Preignition Time		831 - 2.058 sec 901 - 2.205 sec	1.029-37.485 sec	Sets the preignition time (length of phase 38).			•	•
230	Pilot/Main Stabilization Time		3.234 sec	0-74.97 sec	On PME75.8... chips, this setting defines the pilot stabilizing period if a pilot is used. During this period, only the pilot valve is open. The spark is de-energized. Sets the length of phase 44. On PME75.901A1, this setting defines the first half of the main stabilizing period. During this period, only the main valves are open. The spark is de-energized. Sets the length of the first part of phase 44.	•	•	•	•
231	Pilot and Main Overlap Time		811 - 9.996 sec 812 - 9.996 sec 831 - 2.940 sec 901 - 2.646 sec	0-74.97 sec	When a fuel train with a pilot is used, this setting defines the overlap of the pilot (output X7-01.3) and the main fuel valves. After this time expires, the pilot is de-energized. Sets the length of phase 50. Has no effect on PME75.901A1.	•	•	•	•
232 232.00	Main Stabilization Time		811 - 2.058 sec 812 - 2.058 sec 831 - 8.820 sec 901 - 8.820 sec	2.058-74.97 sec	On PME75.8... chips, this setting defines the main stabilizing period if a pilot is used. During this period, only the main valves are open. The pilot valve is de-energized. Sets the length of phase 52. On PME75.901A1, this setting defines the second half of the main stabilizing period. During this period, only the main valves are open. The spark is de-energized. Sets the length of the second part of phase 44.	•	•	•	•
232.01	Actuator Opening Time Delay		596.673	0-1237 sec	This setting defines the time-delayed opening signal for the actuator. Once the main fuel valves open, the time delay starts.				•
234.00	Postpurge Time		811 - 0 sec 812 - 19.404 sec 831 - 0 sec 901 - 4.851 sec	0-1237 sec	Sets the postpurge time (length of phase 74) along with parameter 234.01.	•	•	•	•
234.01	Postpurge Multiplier		1	1-255	Sets a multiplier for the postpurge time. The actual postpurge time (length of phase 74) is determined by multiplying parameter 234.00 and this parameter.	•	•	•	•
235.00	Air Pressure Switch Evaluation	S	1	0-1	Sets the behavior of the air pressure switch input X3-02.1. On the PME75.901A1, a setting of 0 disables the air pressure switch. A setting of 1 enables the air pressure switch input according to parameter 235.02. On all other PME75... chips: 0 = Air pressure switch is not evaluated during operation (lack of air pressure has no effect) 1 = Air pressure switch is evaluated during operation (lack of air pressure causes a lockout)	•	•	•	•
235.01	Response Time Air Pressure Switch		0.294 sec	0-2.058 sec	Sets the amount of time that the air pressure switch input X3-02.1 can be de-energized before a lockout occurs. The LME7 has a base time of 0.7 seconds. This setting adds time to the base time. This setting cannot be adjusted on PME75.901A1 (set at 0.294 sec).	•	•	•	•
235.02	Air Pressure Switch Evaluation 2		1	0-1	Sets the behavior of the air pressure switch input X3-02.1. 0 = Air pressure switch is not evaluated during prepurge and postpurge 1 = Air pressure switch is evaluated from prepurge to shutdown				•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75.811A1	PME75.812A1	PME75.831A1	PME75.901A1
		PW Level	Default	Range	Description				
236	Low Gas Pressure Evaluation		0	0-1	Sets the behavior of the low gas pressure switch input X5-01.2. 0 = Low gas pressure switch is evaluated during startup and operation (phases 30-70). 1 = Low gas pressure switch is only evaluated when main fuel valves are open. This is useful when the low gas pressure switch is mounted downstream of the main fuel valves for CSA B149.3 compliance.	•	•	•	•
237.00	POC Switch	S	811 - 1 812 - 1 831 - 0 901 - 0	0-2	On PME75.811A1 and PME75.812A1, this setting defines the function of POC switch input X2-02.4. If set to deactivated, nothing can be wired to this input. On PME75.831A1, this is set to 0 and cannot be changed. On PME75.901A1, this setting defines the function of input X9-04.2. 0 = deactivated (PME75.811A1, PME75.812A1, PME75.831A1) or valve proving pressure switch (PME75.901A1) 1 = activated (verify POC switch is closed on startup and shutdown) 2 = activated (verify POC switch is closed on startup and shutdown, and verify POC switch is open during main operation)	•	•	•	•
237.01	High Gas Pressure Switch	S/O	0	0-1	PME75.811A1, PME75.831A1, and PME75.901A1: Sets the function of input X2-02.4. 0 = POC (on PME75.811A1) or valve proving disable (on PME75.831A1 and PME75.901A1) 1 = high gas pressure switch PME75.812A1: Activates or deactivates input X9-04.2 for use with a high gas pressure switch. If set to deactivated, nothing can be wired to this input. 0 = deactivated 1 = activated	•	•	•	•
239	Forced Intermittent		0	0-1	When activated, this forces the LME7 to shut the burner down after a predetermined length of uninterrupted operation. This length of time is set by parameter 218. The burner will automatically restart afterwards. The purpose of the shutdown is to check and cycle safety devices. 0 = deactivated 1 = activated	•	•	•	•
240	Repetition Flame		0	0-4	This sets the number of times a flame failure during main operation or during main trial for ignition must occur before causing a lockout. 0 = no repetitions 1 = no repetitions 2 = 1 repetition 3 = 2 repetitions 4 = 3 repetitions	•	•	•	
241 or 241.00	Valve Proving Activation	S	811 - 0 831 - 1 901 - 1	0-1	This setting determines if gas valve proving (leak testing) will be performed. On PME75.811A1, gas valve proving is performed during shutdown unless the postpurge time (parameter 234) is set to 0. In that case, valve proving occurs during startup. On PME75.831A1 and PME75.901A1, gas valve proving can be performed on startup, shutdown, or both depending on the settings of parameters 241.01 and 241.02. 0 = deactivated 1 = activated	•		•	•
241.01	Valve Proving Setup 1		831 - 0 901 - 1	0-1	Determines at which point during the burner's sequence that valve proving will be performed. Used in conjunction with parameter 241.02. 0 = valve proving on startup 1 = valve proving on shutdown			•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75.811A1	PME75.812A1	PME75.831A1	PME75.901A1
		PW Level	Default	Range	Description				
241.02	Valve Proving Setup 2	S	0	0-1	Determines at which point during the burner's sequence that valve proving will be performed. Used in conjunction with parameter 241.01. 0 = valve proving according to parameter 241.01 1 = valve proving on startup and shutdown			•	•
242	VP Evacuation Time		811 - 2.646 sec 831 - 2.646 sec 901 - 2.793 sec	0-2.646 sec (0-2.793 sec on PME75.901A1)	If valve proving is performed, this specifies the length of time that the downstream valve (V2) is energized. This will evacuate any gas that might exist between the gas valves. Sets the length of phase 80.	•		•	•
243	VP Upstream Test		811 - 10.290 sec 831 - 10.290 sec 901 - 10.437 sec	1.029-37.485 sec (1.176-37.485 sec on PME75.901A1)	If valve proving is performed, this specifies the length of time that both the upstream and downstream valves are closed. If the pressure between the valves rises during this period (enough to open the NC valve proving pressure switch), then the upstream valve is leaking and the LME7 will lockout. A longer time period will produce a more sensitive test. Sets the length of phase 81.	•		•	•
244	VP Fill Time		811 - 2.646 sec 831 - 2.646 sec 901 - 2.793 sec	0-2.646 sec (0-2.793 sec on PME75.901A1)	If valve proving is performed, this specifies the length of time that the upstream valve (V1) is energized (output X7-04.3). This will fill the volume between the main gas valves to line pressure. Sets the length of phase 82.	•		•	•
245	VP Downstream Test		811 - 10.290 sec 831 - 10.290 sec 901 - 10.437 sec	1.029-37.485 sec (1.176-37.485 sec on PME75.901A1)	If valve proving is performed, this specifies the length of time that both the upstream and downstream valves are closed. If the pressure between the valves falls during this period (enough to close the NC valve proving pressure switch), then the downstream valve is leaking and the LME7 will lockout. A longer time period will produce a more sensitive test. Sets the length of phase 83.	•		•	•
247	Intermittent Pilot		0	0-1	Sets the type of pilot being used. If set to 1, the pilot valve will remain open from phase 40 to the end of main operation (oP...). 0 = interrupted pilot 1 = intermittent pilot	•	•		
257	Trial for Ignition	S/O	811 - 9.114 sec 812 - 4.116 sec 831 - 2.205 sec 901 - 2.205 sec	0-13.23 sec (0-13.818 sec on PME75.901A1)	On PME75.8... chips, this setting defines the overlap of the spark (output X4-02.3) and the pilot valve (output X7-01.3) if a pilot is used. On PME75.901A1, this setting defines the overlap of the spark (output X4-02.3) and the main valves. The LME7 has a base time of 0.3 seconds. This setting adds seconds to the base time. Sets the length of phase 40.	•	•	•	•
259 or 259.00	Actuator Opening Time		811 - 58.212 sec 812 - 58.212 sec 831 - 67.914 sec	0-1237 sec	Set slightly longer than the time it takes for the actuator to drive from fully closed to fully open.	•	•	•	
259.01	Actuator Time from Ignition to Position Above Low Fire		14.994 sec	0-37.485 sec	Sets the amount of time the actuator has to move from the ignition position to a position above low fire in phase 54 in the case that the ignition position is set below the low fire position. If the ignition position is set equal to or above the low fire position, set this parameter to 0.			•	
259.02	Actuator Time From Low Fire to Position Above Ignition		14.994 sec	0-37.485 sec	Sets the amount of time the actuator has to move from the low fire position to a position above ignition in phase 36 in the case that the low fire position is set below the ignition position and prepurge occurs at low fire. If prepurge occurs at high fire or if the low fire position is set equal to or above the ignition position, set this parameter to 0.			•	
260	Actuator Closing Time		811 - 58.212 sec 812 - 58.212 sec 831 - 67.914 sec 901 - 14.553 sec	0-1237 sec	Set slightly longer than the time it takes for the actuator to drive from fully open to fully closed.	•	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75.811A1	PME75.812A1	PME75.831A1	PME75.901A1
		PW Level	Default	Range	Description				
400 Level: Blower Speeds									
P0 403.00	Ignition Speed	S	1300 RPM	500-12000 RPM	Sets the PWM blower speed during ignition. See Section 6 (PWM Blowers) for more information on setting this value.				•
P1 403.01	Low Fire Speed		700 RPM	500-10000 RPM	Sets the PWM blower speed at low fire. See Section 6 (PWM Blowers) for more information on setting this value.				•
P2 403.02	High Fire Speed		4300 RPM	500-16500 RPM	Sets the PWM blower speed at high fire. See Section 6 (PWM Blowers) for more information on setting this value.				•
P2o 403.03	Open Fuel Valve 2 Speed		1300 RPM	500-15000 RPM	Sets the PWM blower speed threshold for opening the stage 2 fuel valve in 2-stage applications. See Section 6 (PWM Blowers) for more information on setting this value.				•
P2c 403.04	Close Fuel Valve 2 Speed		700 RPM	500-15000 RPM	Sets the PWM blower speed threshold for closing the stage 2 fuel valve in 2-stage applications. See Section 6 (PWM Blowers) for more information on setting this value.				•
500 Level: Actuator Configuration									
503.00	Standby Blower Speed	S	900 RPM	0-16500 RPM	Sets the PWM blower speed when the burner is in standby (off).				•
503.01	Prepurge Blower Speed		5800 RPM	500-16500 RPM	Sets the PWM blower speed during prepurge.				•
503.02	Postpurge Blower Speed		5800 RPM	500-16500 RPM	Sets the PWM blower speed during postpurge.				•
503.03	Valve Proving Speed		900 RPM	500-16500 RPM	Sets the PWM blower speed during valve proving.				•
513.00	Minimum Open Fuel Valve 2 Speed	S/O	500 RPM	500-15000 RPM	Sets the minimum PWM blower speed for parameter 403.03.				•
513.01	Maximum Open Fuel Valve 2 Speed		15000 RPM	500-15000 RPM	Sets the maximum PWM blower speed for parameter 403.03.				•
514.00	Minimum Close Fuel Valve 2 Speed		500 RPM	500-15000 RPM	Sets the minimum PWM blower speed for parameter 403.04.				•
514.01	Maximum Close Fuel Valve 2 Speed		15000 RPM	500-15000 RPM	Sets the maximum PWM blower speed for parameter 403.04.				•
515.00	Actuator Purge Position		811 - 1 812 - 1 831 - 1	0-1 or Read only	On PME75.811A1 and PME75.812A1, this setting cannot be changed and prepurge will take place at high fire. On PME75.831A1, this determines the position of the actuator during prepurge. 0 = purging in low-fire 1 = purging in high-fire	•	•	•	
515.01	Actuator Activation		811 - 0 812 - 1 831 - 1	0-1	Used to activate or deactivate the use of an actuator. If set to 0, parameter 560 must also be set to 0. 0 = deactivated (no actuator) 1 = activated (with actuator)	•	•	•	
516.00	Minimum Ignition Speed		500 RPM	500-12000 RPM	Sets the minimum allowable PWM blower speed during ignition (P0). This should be set to the minimum blower speed at which the burner can still be safely ignited.				•
516.01	Maximum Ignition Speed		12000 RPM	500-12000 RPM	Sets the maximum allowable PWM blower speed during ignition (P0). This should be set to the maximum blower speed at which the burner can still be safely ignited.				•
517.00	Minimum Low Fire Speed		500 RPM	500-10000 RPM	Sets the minimum allowable PWM blower speed when the burner is at low fire (P1). This should be set to the minimum blower speed at which the burner can still be safely operated at low fire.				•
517.01	Maximum Low Fire Speed		10000 RPM	500-10000 RPM	Sets the maximum allowable PWM blower speed when the burner is at low fire (P1). This should be set to the maximum blower speed at which the burner can still be safely operated at low fire.				•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75.811A1	PME75.812A1	PME75.831A1	PME75.901A1
		PW Level	Default	Range	Description				
518.00	Minimum High Fire Speed	S/O	500 RPM	500-16500 RPM	Sets the minimum allowable PWM blower speed when the burner is at high fire (P2). This should be set to the minimum blower speed at which the burner can still be safely operated at high fire.				•
518.01	Maximum High Fire Speed		16500 RPM	500-16500 RPM	Sets the maximum allowable PWM blower speed when the burner is at high fire (P2). This should be set to the maximum blower speed at which the burner can still be safely operated at high fire.				•
519	Maximum Blower Speed		6000 RPM	3000-16500 RPM	Sets the maximum blower speed according to the PWM blower manufacturer. This value is used to calculate blower speed percentages.				•
522	Ramp Up PWM Blower		14.994 sec	2.058-74.97 sec	This sets the speed that the PWM blower ramps up. This setting is active during operation as well as driving to special positions (standby, prepurge, ignition, postpurge). Large blowers typically require a longer ramp up. This value is only valid for 3-position control (parameter 654 = 0).				•
523	Ramp Down PWM Blower		14.994 sec	2.058-74.97 sec	This sets the speed that the PWM blower ramps down. This setting is active during operation as well as driving to special positions (standby, prepurge, ignition, postpurge). Large blowers typically require a longer ramp down. This value is only valid for 3-position control (parameter 654 = 0).				•
543	Pneumatic Ratio Control Operating Mode		2	1-2	This parameter sets the type of burner that the LME7 is controlling. 1 = direct spark modulating burner 2 = direct spark 2-stage burner				•
559	Speed Control Mode		1	0-2	This setting activates or deactivates the internal PID control in the LME7. If using a PWM blower that has its own internal speed control, this should be deactivated. 0 = deactivated 1 = activated 2 = test mode for setting parameters 675.00 and 675.01				•
560	Ratio Control Mode		Read only		Defines the device being controlled by the LME7 that is used to influence the amount of air to the burner. This value is set to 1 by Siemens and cannot be modified. 1 = PWM blower				•
600 Level: PWM Blower Configuration									
644	Feedback Pulse / Rev	S/O	3	2-5	This sets the expected number of pulses per revolution being output from the PWM blower. This information should be provided by the blower manufacturer.				•
646.00	Settling Time		5.145 sec	1.029-10.29 sec	The blower speed must lie within tolerance band 1 for this length of time before the target speed is considered reached.				•
646.01	Settling Time Fuel Valve 2		0 sec	0-10.29 sec	The blower speed must move beyond the speed thresholds set by parameters 403.03 and 403.04 for this amount of time before fuel valve 2 is opened or closed. Serves as a time deadband.				•
650.00	Tolerance Band 1		+/- 1%	+/- 1-30%	Sets an inner tolerance band for blower speed control. Percentages are based on the maximum blower speed (parameter 519). If the actual blower speed falls outside tolerance band 1 for longer than the time set by parameter 660, a lockout occurs.				•
650.01	Tolerance Band 2		+/- 3%	+/- 1-30%	Sets an outer tolerance band for blower speed control. Percentages are based on the maximum blower speed (parameter 519). If the actual blower speed falls outside tolerance band 2, a lockout occurs immediately.				•
654	Analog Input		S	1	0-5	Sets the type of input signal being connected to terminal X65 or X5-03. This input signal is used to determine the blower speed during operation. 0 = 3-position 1 = 0-10 VDC 2 = 0-135 Ohm 3 = 0-20 mA 4 = 4-20 mA with lockout when input is less than 4 mA 5 = 4-20 mA without lockout when input is less than 4 mA	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75.811A1	PME75.812A1	PME75.831A1	PME75.901A1
		PW Level	Default	Range	Description				
658.00	PWM Startup	S/O	12%	1-100%	Sets the minimum PWM signal that the blower needs to receive in order to start the blower from standstill. This information should be provided by the blower manufacturer.				•
658.01	Minimum PWM Signal		0%	0-20%	Sets a minimum PWM signal that the LME7 will transmit to the PWM blower.				•
658.02	Maximum PWM Signal		100%	80-100%	Sets a maximum PWM signal that the LME7 will transmit to the PWM blower.				•
659.00	Min Ramp Up	S	Read only		For Siemens use only. Sets the minimum allowable value for the ramp up time (parameter 522).				•
659.01	Max Ramp Up				For Siemens use only. Sets the maximum allowable value for the ramp up time (parameter 522).				•
659.02	Min Ramp Down				For Siemens use only. Sets the minimum allowable value for the ramp down time (parameter 523).				•
659.03	Max Ramp Down				For Siemens use only. Sets the maximum allowable value for the ramp down time (parameter 523).				•
660	Tolerance Band 1 Time	S/O	9.996 sec	0-37.485 sec	Sets the amount of time the blower speed can lie outside of tolerance band 1 before a lockout occurs.				•
674	Minimum Speed Change		40 RPM	0-255 RPM	Only requested speed changes larger than the value of this setting will actually be corrected. This serves as a dead band to protect the PWM blower from constant small speed oscillations.				•
675.00	Minimum PWM Signal Prepurge		10%	0-100%	Sets the minimum allowable PWM signal that the LME7 will transmit to the PWM blower during prepurge. This should be set so that as long as the blower speed remains at or above this setting, a successful prepurge will occur regardless of all other conditions (air temperature, air pressure, undervoltage to blower, etc.)				•
675.01	Maximum PWM Signal Ignition		60%	0-100%	Sets the maximum allowable PWM signal that the LME7 will transmit to the PWM blower during ignition. This should be set so that as long as the blower speed remains at or below this setting, a successful lightoff will occur regardless of all other conditions (air temperature, air pressure, overvoltage to blower, etc.)				•
676	Proportional Gain		50	0-255	P-part of the PID loop controlling the blower speed when closed-loop speed control is used. P is the proportional gain. Larger values give a more aggressive response. It is recommended to leave this setting at the default value.				•
677	Integral Time		0.441 sec	0-37.485 sec	I-part of the PID loop controlling the blower speed when closed-loop speed control is used. I is the integral (reset) function. This component serves to eliminate steady-state error by looking at the accumulation of error over a period of time and correcting for it. Smaller values give a more aggressive response. It is recommended to leave this setting at the default value.				•
678	Derivative Time		0 sec	0-37.485 sec	D-part of the PID loop controlling the blower speed when closed-loop speed control is used. D is the derivative function. This component serves to eliminate overshoot caused by the integral value, and also dampen the action of the P and I values. Smaller values give a weaker response. It is recommended to leave this setting at the default value.				•
679.00	Lower Range Time Constant		2.940 sec	0-37.485 sec	Sets the time constant for speed control in the lower speed range when ramping down. It is recommended to leave this setting at the default value.				•
679.01	Medium Range Time Constant		2.940 sec	0-37.485 sec	Sets the time constant for speed control in the medium speed range when ramping down. It is recommended to leave this setting at the default value.				•
679.02	Upper Range Time Constant		2.940 sec	0-37.485 sec	Sets the time constant for speed control in the upper speed range when ramping down. It is recommended to leave this setting at the default value.				•
679.03	Total Range Time Constant		1.470 sec	0-37.485 sec	Sets the time constant for speed control in all speed ranges when ramping up. It is recommended to leave this setting at the default value.				•
680.00	Upper Speed Range Threshold		4000 RPM	800-16500 RPM	Sets the speed threshold between the upper and medium speed ranges for parameters 679.01 and 679.02.				•
680.01	Lower Speed Range Threshold		2000 RPM	800-16500 RPM	Sets the speed threshold between the lower and medium speed ranges for parameters 679.00 and 679.01.				•
698	Minimum Speed Hysteresis		500 RPM	100-1500 RPM	Sets the minimum speed difference required between parameters 403.03 and 403.04.				•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75.811A1	PME75.812A1	PME75.831A1	PME75.901A1
		PW Level	Default	Range	Description				
700 Level: Fault History									
701-711	Fault History	Ser	Read only		Shows the current status (fault) along with the 10 most recent faults. 701 = current status, 702 = most recent fault, 703 = next most recent fault, etc. Each fault has indices that provide additional information about the fault: Index 00 = fault code Index 01 = start number Index 02 = phase Index 03 = load	•	•	•	•
900 Level: Operational Data									
903	Current Output / Stage	ACS410			On PME75.901A1, displays the current firing rate. This will display "first stage" during main operation and "----" during all other phases on all other PME75... chips.	•	•	•	•
908	Target Speed %				On PME75.901A1, displays the real time target speed of the PWM blower as a percentage of the maximum blower speed (parameter 519). Will always display as a "----" on all other PME75... chips.	•	•	•	•
920	Actual PWM Output	Ser			On PME75.901A1, displays the real time PWM output to the blower as a percentage of the maximum blower speed (parameter 519). For example, if the actual speed (936) is below the target speed (908), the actual PWM output will increase above the target speed in an attempt to speed up the blower to achieve the target speed. Will always display as a "----" on all other PME75... chips.	•	•	•	•
922	Actual Actuator Position	ACS410			When an actuator is used and a potentiometer is connected, this displays the real-time position of the actuator.	•	•	•	•
923	Target Actuator Position				When an actuator is used and a potentiometer is connected, this displays the target position of the actuator during main operation. Displays as "----" during all other phases.	•	•	•	•
935	Actual Speed RPM	Ser			On PME75.901A1, displays the real time actual speed of the PWM blower in RPM. Will always display as a "----" on all other PME75... chips.	•	•	•	•
936	Actual Speed %				On PME75.901A1, displays the real time actual speed of the PWM blower as a percentage of the maximum blower speed (parameter 519). Will always display as a "----" on all other PME75... chips.	•	•	•	•
944	Analog Input %	ACS410			Displays the real time analog input signal on terminal X65 as a percentage from 0-100%.	•	•	•	•
951	Mains Voltage AZL	Ser	Read only		Displays the real time mains voltage. Measured at terminal X3-04 pin 4 (neutral) and pin 5 (line).	•	•	•	•
954	Flame Signal AZL				Displays the raw flame signal from 0-100% for any flame sensor type. Index 00 = flame rod (input X10-06.2) Index 01 = flame scanner QRA75/QRI (input X10-05.1)	•	•	•	•
961	Actual Phase	ACS410			Displays the real time phase of the LME7.	•	•	•	•
3007	Flame Signal 1 Status				Displays the status of the flame rod input X10-06.2. A value of 1 indicates a valid flame signal is present, and a value of 0 indicates that no valid flame signal is present.	•	•	•	•
3008	Flame Signal 2 Status				Displays the status of QRA75/QRI flame scanner input X10-05.1. A value of 1 indicates a valid flame signal is present, and a value of 0 indicates that no valid flame signal is present.	•	•	•	•
3033	Blower				Displays the status of blower output X2-01.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•
3034	Ignition				Displays the status of ignition transformer output X4-02.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•
3035	Safety Valve				Displays the status of safety valve output X6-03.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•
3036	Main Valve V1				Displays the status of main valve V1 output X7-04.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•
3037	Main Valve V2				Displays the status of main valve V2 output X7-02.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•

Parameter Number	Parameter Name	LEGEND - Password Level: S = Service O = OEM S/O = View - Service, Write - OEM Info = Info Menu Ser = Service Menu ACS410 = ACS410 only Shaded Parameters = Frequently Used				PME75.811A1	PME75.812A1	PME75.831A1	PME75.901A1
		PW Level	Default	Range	Description				
3039	Pilot Valve 1	ACS410	Read only		Displays the status of pilot valve output X7-01.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•
3088	Reset			Displays the status of the info button on the LME7. When the info button is pressed, this value is a 1, and when the info button is not pressed, this value is a 0.	•	•	•	•	
3089	Remote Reset			Displays the status of remote reset input X2-03.1. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•	
3090	Air Pressure Switch Status			Displays the status of air pressure switch input X3-02.1. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•	
3091	Gas Pressure Switches			Displays the status of gas pressure switch input X5-01.2. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•	
3092	Burner Enable			Displays the status of burner enable input X5-03.1. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•	
3094	VP Disable			Displays the status of VP Disable input X2-02.4. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.			•	•	
3103	Load Controller Open			Displays the status of load controller open input X5-03.3. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•	
3104	Load Controller Closed			Displays the status of load controller closed input X5-03.2. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•	•	•	
3106	Not Used			Not used	•	•	•	•	
3107	Valve Proving Pressure Switch			Displays the status of valve proving pressure switch input X9-04.2. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•		•	•	
3108	POC Status			Displays the status of POC input X2-02.4. A value of 1 indicates the input is energized, and a value of 0 indicates the input is de-energized.	•	•		•	
3133	Alarm			Displays the status of alarm output X2-03.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•	•	
3136	Actuator Open			Displays the status of the command signal to increase the actuator position via output X2-09.3. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•		
3146	Actuator Close			Displays the status of the command signal to decrease the actuator position via output X2-09.2. A value of 1 indicates the output is energized, and a value of 0 indicates the output is de-energized.	•	•	•		
3303	Mains Voltage ACS410			Displays the real time mains voltage. Measured at terminal X3-04 pin 4 (neutral) and pin 5 (line).	•	•	•	•	
3307	Flame Signal 1 ACS410	Displays the flame signal strength (%) from a flame rod on terminal X10-06.2.	•	•	•	•			
3308	Flame Signal 2 ACS410	Displays the flame signal strength (%) from a QRA75 or QRI flame scanner on terminal X10-05.1.	•	•	•	•			

LME75 Phase Diagrams

The Siemens LME7 burner controls can perform a number of different burner sequences based upon which PME7 program module is used, how certain parameters are set, and how the LME7 is wired.

Each program module has an associated phase diagram. The phase diagrams illustrate when input and output terminals are expected to be energized or de-energized. A legend on the bottom of each page describes the various symbols used in the diagrams.

Notes:

- 1) A jumper can be added between terminals X7-04.3 and X7-01.3 for direct spark ignition. If this jumper is added, pilot valve output X7-01.3 and main valve output X7-04.3 will be energized from phase 40 through the end of phase 70.
- 2) On PME75.811A1, if the LME7 is set to perform valve proving, valve proving will always take place during shutdown unless it is the next startup following a lockout or power loss, or if the postpurge time (parameter 234.00) is set to 0. In that case, valve proving occurs during startup and shutdown. On PME75.831A1 and PME75.901A1, valve proving can occur during startup, shutdown, or both depending on the settings of parameters 241.01 and 241.02. When valve proving occurs during shutdown, it will happen at the same time as postpurge. Phases 80-83 will be displayed on the LME7 and the AZL23 even though postpurge (phase 74) is also occurring at the same time. The actual postpurge time will be at least the sum of all four valve proving time parameters (242, 243, 244, and 245). When valve proving occurs during startup, it will happen at the same time as prepurge. Phases 80-83 will be displayed on the LME7 and the AZL23 even though prepurge (phase 30) is also occurring at the same time. The actual prepurge time will be at least the sum of all four valve proving time parameters (242, 243, 244, and 245).
- 3) On PME75.8xxA1, if parameter 235.00 is set to 0, air pressure switch input X3-02.1 only needs to be energized during phases 22 through 52 and during phase 74. The switch is not checked during main burner operation. On PME75.901A1, if parameter 235.00 is set to 0, the air pressure switch input X3-02.1 is not checked at all. If parameter 235.00 is set to 1, the input gets checked based on parameter 235.02. If parameter 235.02 is set to 1, the input is checked during phases 22 through 74. If parameter 235.02 is set to 0, the input is checked during phases 22 through 44, and phases 70 through 74.
- 4) On PME75.8xxA1, if parameter 236 is set to 1, low gas pressure switch input X5-01.2 only needs to be energized during phases 52 through 70. On PME75.901A1, if parameter 236 is set to a 1, low gas pressure switch input X5-01.2 only needs to be energized during phases 44 through 70. The input is not checked before the main valves are open. This is useful for applications where the low gas pressure switch is mounted downstream of the safety shutoff valves (for CSA B149.3 compliance).
- 5) On PME75.831A1 and PME75.901A1, energizing input X2-02.4 will disable valve proving if valve proving is enabled via parameter 241.00. The LME7 checks this input in phase 30 if valve proving is taking place during startup or phase 72 if valve proving is taking place during shutdown.

PME75.812A1 Phase Diagram

			Lockout	Standby, Waiting for Call for Heat	Test - Air Pressure Switch Open	Blower On	Drive to Prepurge Position	Test - Air Pressure Switch Closed	Prepurge	Drive to Ignition Position	Trial for Ignition	Flame Detection	Interval 1: Pilot Stabilization	Safety Time 2: Pilot and Main Overlap	Interval 2: Main Stabilization	Operation	Drive to Low Fire	Shutdown	Drive to Postpurge Position	Postpurge	Home Run		
			Phase	LOC	OFF	21	22	24	22	30	36	40	42	44	50	52	oP	oP1	70	72	74	10	
			Param.				259		225	260	257		230	231	232	240	212			234			
			STARTUP													OPERATION			SHUTDOWN				
Terminal	Description	Notes														SAFETY TIME 1							
INPUTS	X3-04.5	Main Voltage																					
	X3-04.1	Safety Loop		X																			
	X5-03.1	Burner On		M																			
	X3-02.1	Air Pressure Switch	Note 3			X			M														
	X5-01.2	Gas Pressure Switch(es)	Note 4																				
	X10-05.1 X10-06.2	Flame Signal			X					X	X												
	X9-04.2	High Gas Pressure Switch																					
	X2-02.4	POC (P237.00 = 1) POC (P237.00 = 2)			X																		
OUTPUTS	X2-02.3	POC Source	X	X																			
	X6-03.3	Safety Valve	X	X																			
	X2-01.3	Blower	X	X	X																		
	X4-02.3	Ignition Transformer		X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	X	X
	X7-01.3	Pilot Valve	Note 1	X	X	X	X	X	X	X						X	X	X	X	X	X	X	X
	X7-04.3	Main Valves	Note 1	X	X	X	X	X	X	X	X	X	X								X	X	X
	X7-04.4	Main Valve Indication Light		X	X	X	X	X	X	X	X	X	X								X	X	X
	X2-03.3	Alarm			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
ACTUATOR	X2-09.3	Drive to High Fire	X	X	X	X				X	X	X	X	X	X		X	X	X	X	X	X	
	X2-09.2	Drive to Low Fire	X	X	X	X	X	X	X	X	X	X	X	X	X			X	X	X	X	X	
	X7-02.3	Drive to Ignition	X	X	X	X	X	X	X						X	X	X	X	X	X	X	X	
	X2-09.1	Drive Closed	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X		
	X2-09.4	Position Feedback	X	X	M	X										X		M	X	X	X		

Legend : Energized X De-energized Must be de-energized at beginning of phase and energized by end of phase
 Energized or de-energized M Must be energized by end of phase

PME75.831A1 Phase Diagram

		Lockout	Standby, Waiting for Call for Heat	Test - Air Pressure Switch Open	Blower On	Drive to Prepurge Position	Test - Air Pressure Switch Closed	Prepurge (Note 2)	Drive to Ignition Position	Preignition Time	Trial for Ignition	Flame Detection	Interval 1: Pilot Stabilization	Safety Time 2: Pilot and Main Overlap	Drive to Low Fire	Interval 2: Main Stabilization	Operation	Shutdown	Drive to Postpurge Position	Postpurge (Note 2)	Home Run	Evacuate	Atmospheric Test	Fill	Pressure Test								
		Phase	LOC	OFF	21	22	24	22	30	36	38	40	42	44	50	54	52	oP	70	72	74	10	80	81	82	83							
		Param.					259		225	260	226	257		230	231	260	232	240			234	260	242	243	244	245							
		STARTUP															OPERATION			SHUTDOWN			VALVE PROVING										
Terminal	Description	Notes																SAFETY TIME 1															
INPUTS	X3-04.5	Main Voltage																															
	X3-04.1	Safety Loop		X																													
	X5-03.1	Burner On		M																													
	X3-02.1	Air Pressure Switch	Note 3		X			M																									
	X5-01.2	Gas Pressure Switch(es)	Note 4																														
	X9-04.2	Valve Proving Pressure Switch																															
	X10-05.1	Flame Signal			X				X	X																X							
	X10-06.2																																
X2-02.4	VP Disable High Gas Press. Sw. (P237.01 = 1)							Note 5												Note 5													
OUTPUTS	X2-02.3	VP Disable Source		X	X																												
	X6-03.3	Safety Valve		X	X																												
	X2-01.3	Blower		X	X	X																				X							
	X4-02.3	Ignition Transformer		X	X	X	X	X	X	X			X	X	X		X	X	X	X	X	X	X	X	X	X							
	X7-01.3	Pilot Valve	Note 1	X	X	X	X	X	X	X											X	X	X	X	X	X							
	X7-04.3	Main Valve V1		X	X	X	X	X	X	X	X										X	X	X	X	X	X							
	X7-02.3	Main Valve V2	Note 1	X	X	X	X	X	X	X	X	X	X	X							X	X	X	X	X	X							
		Main Valve Indication Light		X	X	X	X	X	X	X	X	X	X	X							X	X	X	X	X	X							
X2-03.3	Alarm			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X								
ACTUATOR	X2-09.3	Drive to High Fire		X	X	X	X		X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X								
	X2-09.2	Drive to Low Fire		X	X	X	X	X	X	X	X	X	X	X			X		X	X	X	X	X	X	X								
	X2-09.1	Drive Closed		X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X											
	X2-09.4	Position Feedback		X	X	M	X		X	X	X	X	X	X	X	M	X				X	X	M										
	X2-09.7	Drive to Ignition Position		X	X	X	X	X	X												X	X	X	X	X								
	X2-09.8	Ignition Feedback		X	X	X	X	X	X	M											X	X	X	X	X								












Legend : Energized X De-energized Must be de-energized at beginning of phase and energized by end of phase

Energized or de-energized M Must be energized by end of phase

PME75.901A1 Phase Diagram

		Lockout	Standby, Waiting for Call for Heat	Test - Air Pressure Switch Open and POC Closed	Drive to Prepurge Position	Test - Air Pressure Switch Closed	Prepurge (Note 2)	Drive to Ignition Position	Preignition	Trial for Ignition	Flame Detection	Interval 1: Main Stabilization	Interval 2: Main Stabilization	Operation	Shutdown	Drive to Postpurge Position	Postpurge (Note 2)	Home Run	Evacuate	Atmospheric Test	Fill	Pressure Test		
Phase		LOC	OFF	21	24	22	30	36	38	40	42	44	44	oP1	70	72	74	10	80	81	82	83		
Param.							225	260	226	257		230	232.00				234		242	243	244	245		
STARTUP															SHUTDOWN					VALVE PROVING				
Terminal	Description	Notes																SAFETY TIME 1						
INPUTS	X3-04.5	Main Voltage																						
	X3-04.1	Safety Loop																						
	X5-03.1	Burner On		M																				
	X3-02.1	Air Pressure Switch	Note 3		X		M																	
	X5-01.2	Gas Pressure Switch(es)	Note 4																					
	X9-04.2	Valve Proving Pressure Switch																						
		POC (P237.00 = 1, P241.00 = 0)																						X
		POC (P237.00 = 2, P241.00 = 0)											X											
	X10-05.1 X10-06.2	Flame Signal			X			X	X															
	X2-02.4	VP Disable (P237.01 = 0, P241.00 = 1)						Note 5									Note 5							
High Gas Press. Sw. (P237.01 = 1)																								
OUTPUTS	X2-02.3	POC Source	X																					
	X6-03.3	Safety Valve	X																					
	X2-01.3	Blower	X	X	X													X						
	X4-02.3	Ignition Transformer	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X		X	X	X	X	
	X7-02.3	Main Valve V2	X	X	X	X	X	X	X															
	X7-04.3	Main Valve V1	X	X	X	X	X	X	X											X	X	X	X	
	X7-04.4	Main Valve Indication Light	X	X	X	X	X	X	X											X	X	X	X	
	X2-03.3	Alarm		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X		X	X	X	X	
PWM Blower Speed			S	S	S	T	Pr	Pr	T	I	I	I	I	T	O	T	T	Po	T	V	V	V	V	

       Legend :

 Energized	 Must be energized by end of phase	 Ignition speed	 Postpurge speed
 Energized or de-energized	 Standby speed	 Operation - speed determined by input signal	 Valve proving speed
 De-energized	 Prepurge speed	 Speed transitioning/modulating	

Intentionally Left Blank

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Commissioning a New LME7 Burner Control

1. Ensure all devices are properly connected to the LME7. See Section 2 (LME71...), Section 3 (LME73...), or Section 4 (LME75...) of this manual for more information on wiring devices to the LME7 burner control.
2. Install the PME7 program module into the LME7 burner control. Apply power to the LME7.
3. The LME7 will alternately display “rSt” and “PrC”, indicating that the parameter set from the PME7 program module needs to be restored into the LME7 burner control. To do so, press and hold the info button on the LME7 burner control until the LED on the LME7 turns yellow, then release. This should take approximately three seconds.
4. The word “run” will briefly be displayed. Then, the display will alternate between “rSt” and “End”. This indicates that the restore process was successful.
5. Press and hold the info button for approximately two seconds to reset the LME7. If everything was done properly, the LME7 should now display “OFF”.
6. If any LME7 parameters need to be changed from their default values, an AZL23 display unit is required. Plug in the AZL23 display unit.
7. To log in to the LME7 and access the parameters, press and hold the F and A buttons simultaneously on the AZL23 until the word “Code” appears.
8. Enter the password for the desired access level. The default passwords are:

LME71... / LME73... Service Level Password – 7173
LME75... Service Level Password – 7576
LME7... OEM Level Password – L7unI
9. Set all parameters as necessary for the application. See Section 2 (LME71...), Section 3 (LME73...), or Section 4 (LME75...) of this manual for more information on setting the parameters in the LME7 burner control.
10. If using an LME73... or LME75... burner control with an actuator, the limit switches on the actuator must be set. The most common actuator used with the LME7 is the SQM4x.x8xxxx. On the SQM4x.x8xxxx actuator, set the red cam (I) for the desired high fire position. Set the blue cam (II) for the desired low fire position (on all PME chips except PME7x.831A1) or for the desired fully closed position (PME7x.831A1). If using PME73.812A1 or PME75.812A1, set the orange cam (III) for the desired ignition position. If using PME73.831A1 or PME75.831A1, set the orange cam (III) for the desired low fire position and set the green cam (VI) for the desired ignition position. If using an actuator other than the SQM4x.x8xxxx, see the actuator literature for more information on setting the limit switches.
11. At this point, the LME7 burner control is fully commissioned. It is recommended to perform a parameter backup to synchronize the parameter settings of the LME7 burner control and PME7 program module. See the next section for instructions on performing a parameter backup.

Parameter Backups / Restores

Both the LME7 burner control and PME7 program module contain one parameter set. The parameter set in the LME7 burner control is always the one that is used for burner operation. The parameter set in the PME7 program module is simply a backup parameter set. At any time, these two parameter sets can be synchronized with a parameter backup or a parameter restore.

Parameter backup – Overwriting the PME7 parameter set with the LME7 parameter set

Parameter restore – Overwriting the LME7 parameter set with the PME7 parameter set

The following procedures can be used to perform parameter backups or parameter restores.

Parameter Backup (LME7 -> PME7) Using the LME7 Built-in Display

1. Press and hold the + and - buttons on the LME7 together for approximately one second. “PrC” will be displayed briefly, then the display will show “rSt”.
2. Press the + or - button to toggle to “bAC”.
3. Press and hold the info button until the word “run” is displayed, then release.
4. The LME7 will alternately display “bAC” and “End” once the parameter backup is complete.
5. Press the info button to return to the normal display.

Parameter Restore (PME7 -> LME7) Using the LME7 Built-in Display

Use to overwrite the parameters in the LME7 with those previously saved in the PME7.

1. Press and hold the + and - buttons on the LME7 together for approximately one second. “PrC” will be displayed briefly, then the display will show “rSt”.
2. Press and hold the info button until the word “run” is displayed, then release.
3. The LME7 will alternately display “rSt” and “End” once the parameter restore is complete.
4. Press the info button to return to the normal display.

Parameter Backup (LME7 -> PME7) Using the AZL23 Display Unit

1. Press and hold the F and A buttons on the AZL23 until “CodE” is displayed, then release.
2. Log in at the service or OEM level.
3. The display will show “000: Int”. Press the info button on the AZL23.
4. Toggle to parameter 060 using the + and - buttons, then press the info button.
5. Press the + or - button to toggle to “bAC_UP”, then press the info button.
6. Tap the + button twice to change the value to 1, then press the info button.
7. The word “run” will be displayed during the backup process.
8. The AZL23 will display “bAC End” once the parameter backup is complete.
9. Press the info button to return to the normal display.

Parameter Restore (PME7 -> LME7) Using the AZL23 Display Unit

Use to overwrite the parameters in the LME7 with those previously saved in the PME7.

1. Press and hold the F and A buttons on the AZL23 until "CodE" is displayed, then release.
2. Log in at the service or OEM level.
3. The display will show "000: Int". Press the info button on the AZL23.
4. Toggle to parameter 060 using the + and - buttons, then press the info button.
5. "rEStorE" will be displayed. Press the info button.
6. Tap the + button twice to change the value to 1, then press the info button.
7. The word "run" will be displayed during the restore process.
8. The AZL23 will display "rSt End" once the parameter restore is complete.
9. Press the info button to return to the normal display.

Displaying the Flame Signal from the LME7 Burner Control

The flame signal can be viewed on the LME7 burner control using the following procedures.

LME71.../LME73... Burner Control

1. Press and hold the + button on the LME7 burner control. "FL1" will be displayed briefly, followed by the flame signal from 0-100%.
2. Holding the + button for less than three seconds will briefly display the flame signal. Upon releasing the + button, the display will return to normal.
3. Holding the + button for more than three seconds will leave the flame signal displayed for two minutes. This is indicated by the point after the flame signal value flashing. After two minutes, or after pressing the + and - buttons together (escape), the display will return to normal.

LME75... Burner Control with a QRA75... or QRI... Flame Scanner

1. Press and hold the - button on the LME7 burner control. "FL2" will be displayed briefly, followed by the flame signal from 0-100%.
2. Holding the - button for less than three seconds will briefly display the flame signal. Upon releasing the - button, the display will return to normal.
3. Holding the - button for more than three seconds will leave the flame signal displayed for two minutes. This is indicated by the second decimal point from the right flashing. After two minutes, or after pressing the + and - buttons together (escape), the display will return to normal.

LME75... Burner Control with a Flame Rod

1. Press and hold the + button on the LME7 burner control. "FL1" will be displayed briefly, followed by the flame signal from 0-100%.
2. Holding the + button for less than three seconds will briefly display the flame signal. Upon releasing the + button, the display will return to normal.
3. Holding the + button for more than three seconds will leave the flame signal displayed for two minutes. This is indicated by the point after the flame signal value flashing. After two minutes, or after pressing the + and - buttons together (escape), the display will return to normal.

Displaying the Actuator Position / PWM Blower Speed from the LME7 Burner Control

The current position of the actuator (LME73.../LME75...) or speed of the PWM blower (LME71... with PME71.901A1) can be viewed from the LME7 burner control using the following procedure.

1. Press and hold the A button on the LME7 burner control. "oP" will be displayed briefly, followed by the actuator position / PWM blower speed from 0-100%.
2. Holding the A button for less than three seconds will briefly display the actuator position / PWM blower speed. Upon releasing the A button, the display will return to normal.
3. Holding the A button for more than three seconds will leave the actuator position / PWM blower speed displayed for two minutes. This is indicated by the decimal point in front of the value flashing. After two minutes, or after pressing the + and - buttons together (escape), the display will return to normal.

Manually Adjusting the Actuator Position / PWM Blower Speed from the LME7 Burner Control

During main operation, the current position of the actuator (LME73.../LME75...) or speed of the PWM blower (LME71... with PME71.901A1) can be adjusted manually from the LME7 burner control using the following procedure. Setting the actuator position / PWM blower speed manually overrides the analog input signal on terminal X65 or the 3-position input signal on terminal X5-03.

1. Press and hold the A button on the LME7 burner control until the decimal point in front of the value being displayed begins flashing. This takes approximately five seconds. "oP" will be displayed briefly, followed by the actuator position / PWM blower speed from 0-100%.
2. Press and hold the A button again until "LoA" is displayed. Continue holding the A button and simultaneously press the + or - button to increase or decrease the actuator position / PWM blower speed respectively.
3. Once the desired actuator position / PWM blower speed is reached, release the A button. The LME7 will alternately display "LoA" and the current actuator position / PWM blower speed.
4. To leave manual mode, press the + and - buttons together (escape). "oP" will be displayed and the actuator position / PWM blower speed will be controlled by the analog input signal on terminal X65 or the 3-position input signal on terminal X5-03.

AZL23 Display Unit Icons

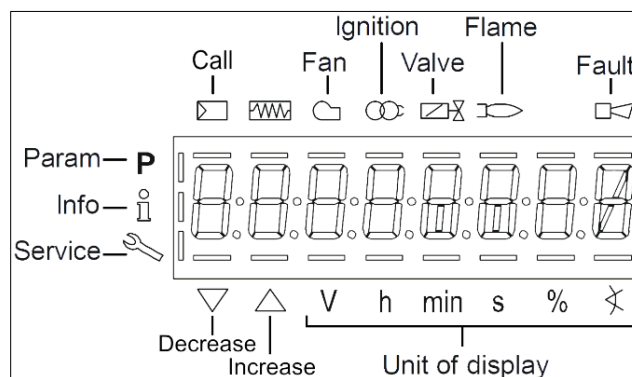


Figure 5-1: AZL23 Display Unit Icons

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Introduction

The LME7 flame safeguard, when used with the PME71.901A1 or PME75.901A1 program module, features an integrated, closed-loop PWM (pulse width modulation) blower control. This integrated control is used to modulate the speed of a PWM blower with firing rate. The LME7 transmits a PWM control signal to the blower and then reads back the speed of the blower. On most PWM blowers, the speed feedback signal is taken from Hall Effect sensors that commutate the PWM blower motor.

Blower speed has a large impact on the air flow delivered to the burner and thus has a large impact on the fuel-air ratio. A combustion air pressure switch offers only a small amount of protection, since the switch must be set to allow low fire operation when the PWM blower is spinning slowly and the blower output pressure is low. Blower speed feedback ensures that a blower failure will be quickly detected and the burner will shut down safely.

PWM Blower Fundamentals

A common type of variable speed blower is the brushless DC blower, commonly referred to as a PWM blower. These blowers typically have a variable speed drive and a DC brushless motor integrated into one housing. These blowers are typically fed single-phase or three-phase AC voltage directly and use some type of AC to DC rectification to produce the DC voltage pulses necessary to drive the blower motor.

Unlike a brushed DC motor, field windings in a brushless motor are triggered (commutated) via non-contact Hall Effect sensors. In addition to commutating the motor, these Hall Effect sensors also provide a pulsed output that the LME7 can use for blower speed feedback. Wiring of the speed feedback signal is covered in Section 2 (LME71) and Section 4 (LME75).

Brushless DC motors usually do not have the same speed limitations as most three-phase blower motors do. While most three-phase blower motors are limited to about 3,800 RPM, some brushless DC motors used in blower applications will spin more than 8,000 RPM. This high-speed capability is attractive in a blower application since more air flow at higher pressures can be generated with a smaller blower. The LME71 can read blower speeds up to 9,000 RPM via the Hall Effect sensors in the blower. The LME75 can read blower speeds up to 16,500 RPM via the Hall Effect sensors in the blower.

Accurate speed control of a brushless DC motor can be more challenging as compared to a VFD and a three-phase AC motor. The primary reasons behind this are the electromechanical characteristics of the motors themselves. In brushless DC motors, the motor windings are being fed DC pulses of variable duration (hence these blowers being called pulse width modulation). The width of these pulses determines the blower's speed for a given torque output and for a given blower input voltage. All three of these variables – pulse width, torque output, and input voltage have a substantial impact on the blower's speed and can be regarded as primary variables.

Some PWM blowers have internal speed controls that compensate for torque output and input voltage variances. This is done by taking a commanded speed set point (dictated by the LME7) and adjusting the width of the pulse to achieve the commanded speed. PWM blowers having fast updating, properly tuned internal speed controls typically work well with the LME7.

Centrifugal Blower Fundamentals

Since a centrifugal blower is the piece of machinery being controlled by the LME7, a brief mention of its basic characteristics is warranted. Specifically, there are three fundamental "fan laws" that a person working with such equipment should be aware of. These are:

1. Air flow varies linearly with the speed of the blower. In other words, the CFM of the blower is directly proportional to the RPM of the blower.

$$\text{CFM (new)} = \frac{\text{RPM (new)}}{\text{RPM (old)}} \times \text{CFM (old)}$$

2. The static output pressure of the blower (SP) varies by the square of the change in RPM:

$$\text{SP (new)} = \left(\frac{\text{RPM (new)}}{\text{RPM (old)}} \right)^2 \times \text{SP (old)}$$

3. The required brake horsepower of the blower (BHP) varies by the cube of the change in RPM:

$$\text{BHP (new)} = \left(\frac{\text{RPM (new)}}{\text{RPM (old)}} \right)^3 \times \text{BHP (old)}$$

Example: A blower spinning at 1750 RPM produces 10 in WC of static pressure, 4500 CFM of air flow, and requires 20 BHP. What happens if the RPM is increased to 2750 RPM?

Assumptions: There is no air damper on the inlet to the blower, and system effects (such as the restriction due to heat exchangers, the burner's diffuser, etc...) are not taken into account.

Flow: CFM (new) = (2750 / 1750) * 4500 = 7071 CFM

Pressure: SP (new) = (2750 / 1750)² * 10 = 24.7 in WC


Power: BHP (new) = (2750 / 1750)³ * 20 = 78 BHP

Blower Speed Monitoring

To ensure that the burner is either operated at a safe fuel-to-air ratio or is shut down, the blower speed is constantly monitored while a flame is present. The speed is monitored in a way that nuisance shutdowns are eliminated, but fast shutdowns will occur if the speed deviation is large. Two tolerance bands centered about the target speed are used. These bands are:

1. **Tolerance Band 1** - If the speed is within this band, it is considered acceptable and no action is taken. If the blower speed falls outside of this band, the speed control in the LME7 or the PWM blower will begin working to get it back inside this band. If the speed does not fall back inside Tolerance Band 1 within five seconds (PME71.901A1) or within the time set via parameter 646.00 (PME75.901A1), a lockout occurs. The width of this band is adjustable via parameter 650.00. On the PME71.901A1, the range is +/- 1.0 to 5.0% of the maximum blower speed (parameter 519). On the PME75.901A1, the range is +/- 1.0 to 30.0% of the maximum blower speed (parameter 519).
2. **Tolerance Band 2** - If the blower speed ever falls outside of this band, a lockout occurs immediately. The width of this band is adjustable via parameter 650.01. On the PME71.901A1, the range is +/- 1.0 to 10.0% of the maximum blower speed (parameter 519). On the PME75.901A1, the range is +/- 1.0 to 30.0% of the maximum blower speed (parameter 519). Tolerance Band 2 should be set to a larger value than Tolerance Band 1.


These bands are shown graphically in Figures 6-1 and 6-2.

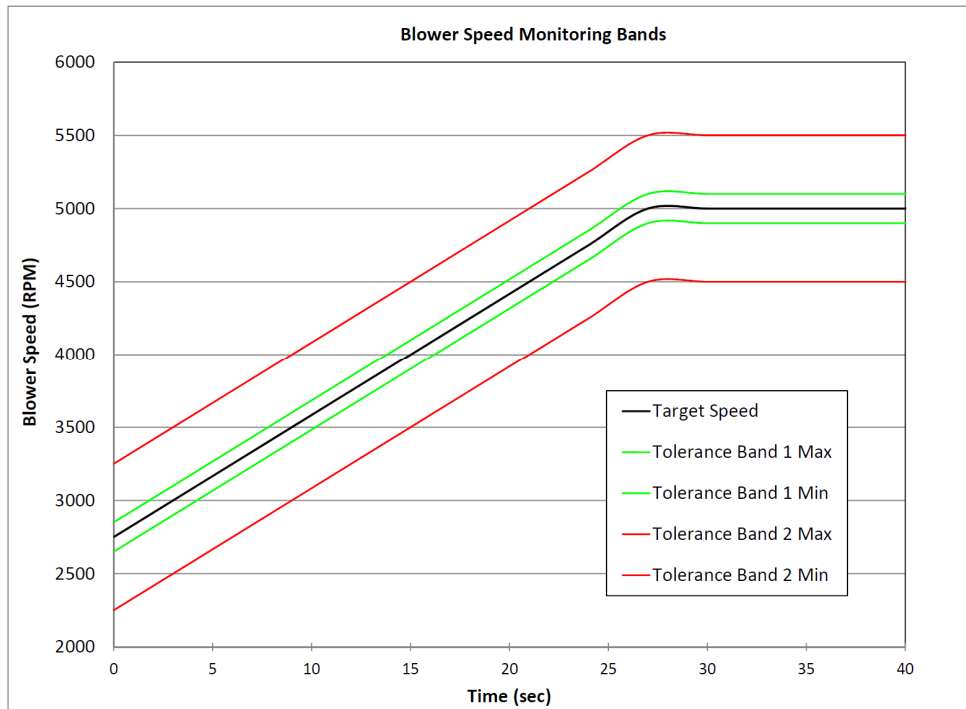

Name of Tolerance Band		Tolerance Band 1		Tolerance Band 2	
High Limit of Tolerance Band		+1.0% to 5.0%		+1.0% to 10.0%	
Low Limit of Speed Band		-1.0% to 5.0%		-1.0% to 10.0%	
Parameter to Adjust Width of Band		650.00		650.01	
Maximum Blower Speed (P519)		5000 RPM			
Tolerance Band Limits for Figure 6-1					
Tolerance band 1 = 2%		+/- 100 RPM		+/- 500 RPM	
Tolerance band 2 = 10%					

	Time	Target Speed		Max	Min	Max	Min
	sec	%	RPM	RPM	RPM	RPM	RPM
RAMP UP	0	55	2750	2850	2650	3250	2250
	3	60	3000	3100	2900	3500	2500
	6	65	3250	3350	3150	3750	2750
	9	70	3500	3600	3400	4000	3000
	12	75	3750	3850	3650	4250	3250
	15	80	4000	4100	3900	4500	3500
	18	85	4250	4350	4150	4750	3750
	21	90	4500	4600	4400	5000	4000
	24	95	4750	4850	4650	5250	4250
	27	100	5000	5100	4900	5500	4500
HIGH FIRE	30	100	5000	5100	4900	5500	4500
	33	100	5000	5100	4900	5500	4500
	36	100	5000	5100	4900	5500	4500
	39	100	5000	5100	4900	5500	4500
	42	100	5000	5100	4900	5500	4500

Figure 6-1: LME71 Blower Speed Monitoring Bands

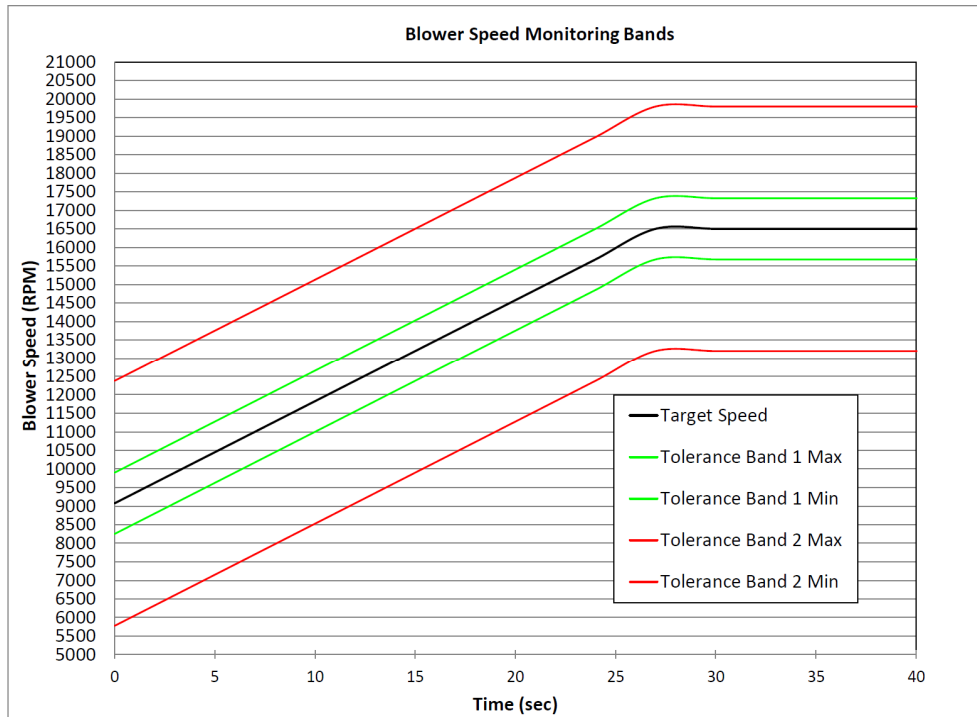

Name of Tolerance Band		Tolerance Band 1		Tolerance Band 2			
High Limit of Tolerance Band		+1.0% to 30.0%		+1.0% to 30.0%			
Low Limit of Speed Band		-1.0% to 30.0%		-1.0% to 30.0%			
Parameter to Adjust Width of Band		650.00		650.01			
Maximum Blower Speed (P519)		16500 RPM					
Tolerance Band Limits for Figure 6-1							
Tolerance band 1 = 5%		+/- 825 RPM		+/- 3300 RPM			
Tolerance band 2 = 20%							
	Time	Target Speed		Max	Min	Max	Min
	sec	%	RPM	RPM	RPM	RPM	RPM
RAMP UP	0	55	9075	9900	8250	12375	5775
	3	60	9900	10725	9075	13200	6600
	6	65	10725	11550	9900	14025	7425
	9	70	11550	12375	10725	14850	8250
	12	75	12375	13200	11550	15675	9075
	15	80	13200	14025	12375	16500	9900
	18	85	14025	14850	13200	17325	10725
	21	90	14850	15675	14025	18150	11550
	24	95	15675	16500	14850	18975	12375
	27	100	16500	17325	15675	19800	13200
HIGH FIRE	30	100	16500	17325	15675	19800	13200
	33	100	16500	17325	15675	19800	13200
	36	100	16500	17325	15675	19800	13200
	39	100	16500	17325	15675	19800	13200
	42	100	16500	17325	15675	19800	13200

Figure 6-2: LME75 Blower Speed Monitoring Bands

Commissioning the LME7 when Using a PWM Blower

After verifying that all PWM blower-related components are installed and wired correctly, the LME7 burner control can be programmed for the PWM blower application.

Prerequisites

- Ensure that the PWM blower is a closed loop type, meaning that it is utilizing an onboard speed control properly tuned for that specific blower.
- Ensure that the maximum closed loop speed that the PWM blower is programmed for is adequate for the application.
- Ensure the wiring is correct, paying particular attention to the low voltage wiring. Some PWM blowers have their electronics internally powered from the high voltage, while others require separate, external low voltage power.

After these points are double-checked, the LME7 parameters can be set for the application.

1. Set the blower ramp times.

- a. Ramp up = Parameter 522
- b. Ramp down = Parameter 523

These ramp times should be set at least 10% longer than the capabilities of the connected PWM blower. For example, if the PWM blower can ramp up in 20 seconds, then parameter 522 should be set to at least 22 seconds. The same logic applies to the ramp down, parameter 523.

2. Set the maximum speed of the PWM blower via parameter 519. This should be copied directly from the blower nameplate or otherwise provided by the blower manufacturer.
3. Set the number of pulses per revolution for the PWM blower tachometer speed feedback signal via parameter 644. This should be provided by the blower manufacturer and is typically only found in the blower technical literature.
4. Set parameter 559 to activate or deactivate the LME7 internal speed control. For PWM blowers, especially those utilizing a properly tuned onboard speed control, parameter 559 is typically set to 0. Setting the value to 0 turns off the speed control inside the LME7 and allows the speed control to be performed solely by the PWM blower.
5. Set the PWM blower speed monitoring bands to values that are safe for the application. These are set via parameters 650.00 and 650.01. See complete explanation of these bands detailed earlier on pages 3-5.
6. Set the standby speed of the PWM blower via parameter 503.00. This is typically set to 0 RPM.

7. On the LME71, set the prepurge and postpurge speed of the PWM blower via parameter 503.01. On the LME75, set the prepurge, postpurge, and valve proving speed of the PWM blower via parameters 503.01, 503.02, and 503.03.
8. For the PME75.901A1, set parameter 543 to a value of 1.
9. Set the ignition (P0), low fire (P1), and high fire (P2) blower speeds with the burner off. These values are found in the 400 set of parameters. To set these parameters, use the following procedure:
 - a. Log in at the Service or OEM access level. The display will say "400: Set". Press the info button.
 - b. The display will say "run". Press the + and - buttons together (escape). The display will then show the ignition speed P0.
 - c. To adjust the ignition speed P0, press and hold the A button while simultaneously pressing the + or - buttons to increase or decrease the ignition speed respectively. Once the desired ignition speed P0 has been set, press the + button.
 - d. The low fire speed P1 will be displayed. Press and hold the A button while simultaneously pressing the + or - buttons to increase or decrease the low fire speed respectively. Once the desired low fire speed P1 has been set, press the + button.
 - e. The high fire speed P2 will be displayed. Press and hold the A button while simultaneously pressing the + or - buttons to increase or decrease the high fire speed respectively. Once the desired high fire speed P2 has been set, press the + and - buttons together (escape) two times to get back to the normal screen (OFF).
10. At this point, all critical PWM blower-related parameters have been set.

Adjusting P0, P1, and P2 via the LME7 Built-in Display

1. While in standby (OFF), press and hold the A button and either the + or - button for more than five seconds until "OFF" starts blinking. This puts the LME7 into commissioning mode.
2. Give the LME7 a call for heat. The LME7 will proceed to start the burner. After prepurge is complete, the LME7 will slow the blower down to the preset ignition speed (P0).

Note that commissioning mode will time out after two minutes. If prepurge is longer than two minutes, commissioning may have exited by the time prepurge is over. To re-enter, hold A and either the + or - button for more than five seconds.

3. At this point, the LME7 will alternately display P0 and a three-digit number. The three-digit number is the setting of the ignition speed P0 divided by 10. For example, if the display alternately displays P0 and 200, this means that the ignition speed is currently set for 2000 RPM.
4. To adjust the ignition speed, press and hold the A button while simultaneously pressing the + or - button to increase or decrease the speed respectively. The speed of the blower will change in real time. Once the desired ignition speed P0 has been set, press the info button.
5. The startup of the burner will continue. The burner will light off and establish flame. Once the burner has lit off, it will drive to the preset low fire speed (P1).
6. The LME7 will then alternately display P1 and a three-digit number that is representative of the low fire speed divided by 10. To adjust the low fire speed, press and hold the A button while simultaneously pressing the + or - button to increase or decrease the speed respectively. The speed of the blower will change in real time. Once the desired low fire speed P1 has been set, press the info button.
7. The LME7 will immediately drive to the preset high fire speed P2.
8. The LME7 will then alternately display P2 and a three-digit number that is representative of the high fire speed divided by 10. To adjust the high fire speed, press and hold the A button while simultaneously pressing the + or - button to increase or decrease the speed respectively. The speed of the blower will change in real time. Once the desired high fire speed P2 has been set, press the info button.
9. Press the + and - buttons together (escape) to return to normal operation. The PWM blower will now respond to the external load control signal being supplied to the LME7.

Note: If parameter 654 is set to 0, and there is an input signal on X5-03.2 or X5-03.3, the LME7 will not drive to points P1 or P2. To set P1 and P2, temporarily remove the signal on X5-03.2 and X5-03.3.

Adjusting P0, P1, and P2 via the AZL23 Display Unit

1. Log in at the Service or OEM access level. The display will say "400: Set". Press the info button.
2. The display will say "run". Give the LME7 a call for heat. The LME7 will proceed to start the burner. After prepurge is complete, the LME7 will slow the blower down to the preset ignition speed (P0).
3. At this point, the LME7 will alternately display P0 and the ignition speed.
4. To adjust the ignition speed, press and hold the A button while simultaneously pressing the + or - button to increase or decrease the speed respectively. The speed of the blower will change in real time. Once the desired ignition speed P0 has been set, press the info button.
5. The startup of the burner will continue. The burner will light off and establish flame. Once the burner has lit off, it will drive to the preset low fire speed (P1).
6. The LME7 will then alternately display P1 and the low fire speed. To adjust the low fire speed, press and hold the A button while simultaneously pressing the + or - button to increase or decrease the speed respectively. The speed of the blower will change in real time. Once the desired low fire speed P1 has been set, press the info button.
7. The LME7 will immediately drive to the preset high fire speed P2.
8. The LME7 will then alternately display P2 and the high fire speed. To adjust the high fire speed, press and hold the A button while simultaneously pressing the + or - button to increase or decrease the speed respectively. The speed of the blower will change in real time. Once the desired high fire speed P2 has been set, press the info button.
9. Press the + and - buttons together (escape) to return to normal operation. The PWM blower will now respond to the external load control signal being supplied to the LME7.

Additional Tips for Burners with PWM Blowers

- Most of the time, speed faults that are seen on the LME7 are caused by the PWM blower not being able to decelerate quickly enough when the blower is being ramped down. If fast ramp times are not critical for the application, ramp times (parameters 522 and 523) can be increased, and this should correct the issue.
- The LME7 in combination with the PWM blower can be tested for proper operation while the LME7 is in standby (OFF). After the PWM blower parameters are set, the standby speed of the PWM blower can be adjusted with parameter 503.00. The actual speed as a % of the maximum blower speed (parameter 519) can be read back on parameter 936. If different blower speeds are set and plotted vs. the actual speed (936), the linearity of the PWM blower's speed response can be assessed.
- The ACS410 PC software has a trending package that is very useful when diagnosing PWM blower speed issues. In particular, the target speed (parameter 920) and the actual speed (parameter 936) can be plotted against one another in real time and can be closely reviewed to see where the largest deviations occur.
- The combustion air pressure switch should be set by taking the PWM blower to 10% below the lowest anticipated low fire speed (if low fire is 50%, take the PWM blower to 40%) and setting the switch to open at that point. This should maximize the safety potential of the combustion air pressure switch and minimize nuisance air pressure trips. This can be done in standby by setting the standby speed of the blower to 10% lower than low fire and adjusting the switch to trip at this point.
- Most PWM blowers have their own internal speed control. However, when using a PWM blower that does not have its own internal speed control, parameter 559 must be set to 1 so that the LME7 can control the speed of the blower. When parameter 559 is set to 1, the LME7 controls the blower speed using the PID values set by parameters 676, 677, and 678. The default settings of these parameters are typically adequate.

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Troubleshooting Introduction

The LME7 has an extensive list of fault codes to help clarify the nature of any fault. Section 7-2 describes every fault code in detail and gives guidance on how to correct it.

When a fault occurs, the LME7 will alternate between displaying “Loc” and the fault number.

The fault history is stored in the 700 set of parameters. These are only accessible with an AZL23 remote display or through the ACS410 software. To access the 700 set of parameters on the AZL23, press and hold the info button until “SEr” is displayed, then let go. The LME7 stores the last 11 fault codes:

Parameter 701 displays information about the current status of the LME7.

Parameter 702 displays information about the most recent fault.

Parameter 703 displays information about the second most recent fault.

...

Parameter 711 displays information about the 10th most recent fault.

Each fault code listed has indexes that provide additional information about the fault:

Index 00 = Fault code

Index 01 = Start number

Index 02 = Phase

Index 03 = Load

Index 01 will display a value of “._.”. This means that the AZL23 display ran out of room to display the start number. When this happens, hold down the info button to display the value.

An example of how the AZL23 displays a fault code in the fault history is shown below:



Figure 7-1: LME7 Fault History Example with Indexes

Navigating the Fault History

To navigate the fault history, use the following key strokes on the AZL23.

- When the parameter number is flashing, press the “+” or “-” button to cycle through the list of faults (parameters 701-711).
- When the parameter number is flashing, press and hold the info button to move the cursor from the parameter number to the index number. This will cause the index number to begin flashing.
- When the index number is flashing, press the “+” or “-” button to cycle through the list of indexes (00-03).
- When the index number is flashing, press the “+” and “-” buttons together to escape and move the cursor from the index number to the parameter number. This will cause the parameter number to begin flashing.

Resetting Faults on the LME7 Burner Control

Faults can be reset in one of three ways on the LME7... burner control:

1. Pressing the info button on the LME7 burner control for 1-3 seconds.
Note: Pressing the info button for less than one second has no effect. Pressing the info button for more than three seconds places the LME7 into diagnostic mode.
2. Pressing the info button on the AZL23 remote display until the word “rESET” appears, then releasing.
Note: Releasing the info button before the word “rESET” appears has no effect. Pressing the info button too long accesses the “InFo” menu.
3. Connecting neutral to reset terminal X2-03.1 for more than one second. This is typically done with the use of a push button connected between neutral and X2-03.1.
Note: Connecting neutral to X2-03.1 for less than one second has no effect.

Accessing the Service (SEr) Menu

The service (SEr) menu contains the fault history as well as the 900 series of parameters that are used for diagnostic purposes, such as flame signal (954) and incoming voltage (951).

1. From the home screen (OFF), press and hold the info button until the word “SEr” is displayed, then release. The word “InFo” will briefly be displayed before “SEr”.
2. Press the + or - button to navigate through the parameters in the “SEr” menu.
3. When finished, press the “+” and “-” buttons together to escape.

Complete Fault Code List

Fault Code	Description of the Fault	Corrective Action
2	No flame at start-up	<p>A flame failure occurred during lightoff.</p> <ol style="list-style-type: none"> 1. Check the wiring of the ignition transformer, pilot valve, and main valve(s). 2. Ensure manual shutoff valves on the pilot gas line and main gas line are open. 3. Check the fuel / air ratio at lightoff. 4. Check the flame detector signal in the presence of a known flame source. Replace the flame detector if it does not produce the anticipated signal.
3	Air pressure switch open	<p>The air pressure switch connected to terminal X3-02.1 is open, causing a fault. Ensure the setpoint of the switch is set to an appropriate value. Check the wiring of the air pressure switch. If no air pressure switch is being used, place a jumper from terminal X2-01.3 to X3-02.1.</p>
4	Extraneous light	<p>An extraneous light (flame signal present when there should be none) fault occurred.</p> <ol style="list-style-type: none"> 1. Ensure that the source of light is not a flame. If it is, take corrective action immediately. 2. Ambient light can cause an extraneous light fault. Ensure the flame scanner is viewing a dark area. 3. UV scanners typically fail on, giving a false flame signal. Remove UV scanner and cover the bulb to ensure it is not seeing any light. Look inside the bulb and see if any purple arcs of electricity are occurring between the electrodes in the bulb. If there are, replace the UV scanner.
5	Air pressure switch closed	<p>The air pressure switch connected to terminal X3-02.1 is closed before the blower output is energized in phase 22, causing a fault. Ensure the setpoint of the switch is set to an appropriate value. Check the wiring of the air pressure switch. If no air pressure switch is being used, place a jumper from terminal X2-01.3 to X3-02.1.</p>
6	Actuator position fault	<p>The required position feedback from the connected SQM... actuator was not received.</p> <ol style="list-style-type: none"> 1. Ensure the potentiometer on the SQM... actuator is wired correctly. <ul style="list-style-type: none"> -For counter-clockwise actuators (SQM40..., SQM50...), terminal "c" on the potentiometer should be wired to terminal X66.1 on the LME7, and terminal "a" on the potentiometer should be wired to terminal X66.3 on the LME7. -For clockwise actuators (SQM41..., SQM50...R), terminal "a" on the potentiometer should be wired to terminal X66.1 on the LME7, and terminal "c" on the potentiometer should be wired to terminal X66.3 on the LME7. 2. Ensure the SQM... actuator is wired properly to the LME7, especially the position feedback on terminal X2-09.4 of the LME7. 3. Ensure no mechanical stops are preventing the actuator from reaching its expected position. 4. While not common, heavy vibration on the actuator can wear a track in the position feedback potentiometer. If the fault always occurs at the same actuator position, the actuator may need to be replaced, and the vibration needs to be reduced to avoid having a similar issue with the new actuator.

Fault Code	Description of the Fault	Corrective Action
7	Loss of flame	<p>A flame failure occurred during normal operation.</p> <ol style="list-style-type: none"> 1. Check the fuel / air ratio. 2. Check the flame detector signal in the presence of a known flame source. Replace the flame detector if it does not produce the anticipated signal.
10	Wiring or other error	<p>This fault is a catchall and can be caused by a variety of issues. See Section 7-3 for a list of all known causes of this fault. If none of the causes listed in Section 7-3 appears to be the cause, review all wiring on the LME7 and check to see if a wire is landed on an incorrect terminal.</p>
12	Fuel valve V2 leaking (PME73.840A1) Fuel valve V1 leaking (all other PME7s)	<p>On PME73.840A1, the downstream gas valve V2 failed valve proving. On all other PME7 program modules, the upstream gas valve V1 failed valve proving.</p> <ol style="list-style-type: none"> 1. Bubble test the gas valve to ensure the valve is not leaking. If the valve is leaking, replace the valve. 2. Ensure that the setpoint of the valve proving pressure switch is set to 50% of the inlet pressure to the upstream gas valve.
13	Fuel valve V1 leaking (PME73.840A1) Fuel valve V2 leaking (all other PME7s)	<p>On PME73.840A1, the upstream gas valve V1 failed valve proving. On all other PME7 program modules, the downstream gas valve V2 failed valve proving.</p> <ol style="list-style-type: none"> 1. Bubble test the gas valve to ensure the valve is not leaking. If the valve is leaking, replace the valve. 2. Ensure that the setpoint of the valve proving pressure switch is set to 50% of the inlet pressure to the upstream gas valve.
14	Proof-of-closure (POC) switch failure	<p>The POC switch is not in the expected state. If a POC switch exists, ensure it is wired to terminal X2-02.4 on the LME7. On an LME75 burner control, the source of power to the common side of the POC switch must come from terminal X2-02.3. If no POC switch exists, either set parameter 237 to 0 or install a jumper between terminals X2-02.3 and X2-02.4. If the POC input is deactivated, there must be nothing connected to terminal X2-02.4.</p>
20	Gas pressure fault	<p>One of the gas pressure switches wired to terminal X5-01.2 opened, causing a fault. It is common for both the high and low gas pressure switches to be wired to terminal X5-01.2, so the fault could be either a high gas or low gas event. Check the gas supply and open any manual shutoff valves. Check the wiring of all gas pressure switches. Check the setpoint of any gas pressure switches to ensure the setpoint is set to an appropriate value.</p>
21	High gas pressure fault	<p>The high gas pressure switch wired to terminal X2-02.4 (PME75.811A1) or X9-04.2 (PME75.812A1) opened, causing a fault. Check the wiring of the high gas pressure switch. Check the setpoint of the high gas pressure switch and ensure it is set to an appropriate value. Check pressure regulators for ruptured diaphragms or incorrect setpoints. If the high gas pressure switch input is deactivated, there must be nothing connected to terminal X2-02.4 (PME75.811A1) or X9-04.2 (PME75.812A1).</p>

Fault Code	Description of the Fault	Corrective Action
22	Safety loop open	Check all of the switches wired into the safety loop on terminal X3-04.1. One of the switches opened, causing the fault. Fix the condition that caused the switch to open and reset the fault.
60	Analog input out of range	The 4-20 mA input connected to terminal X65 is out of range. This input determines the position of the actuator or speed of the PWM blower. Check the wiring of the analog input. If a fault is not desired when the input drops below 4 mA, set parameter 654 to a 5.
83	PWM blower speed fault	<p>The speed of the PWM blower does not match the expected speed. More specifically, the blower speed fell outside of tolerance band 1 (parameter 650.00) for a time longer than the maximum speed deviation allowed (parameter 660), or the blower speed fell outside of tolerance band 2 (parameter 650.01). There are many possible corrective actions:</p> <ol style="list-style-type: none"> 1. Increase ramp time up (parameter 522) and/or ramp time down (parameter 523) to allow the blower more time to achieve the expected speed. 2. Increase the setting of tolerance band 1 (parameter 650.00) and/or tolerance band 2 (parameter 650.01). 3. Ensure that the maximum fan speed (parameter 519) and the number of pulses per revolution (parameter 644) are set correctly for the blower being used. 4. Inspect wiring from PWM blower to LME7 to ensure the tachometer speed feedback signal is wired correctly.
138	Restore process successful	There is no fault. This fault occurs when a parameter set was successfully restored from the PME7 program module to the LME7 base unit. Reset the fault.
139	No program module detected	This fault occurs when no PME7 program module is plugged into the LME7 base unit. Insert a PME7 program module into the LME7 base unit and reset the fault.
167	Manual lockout	A manual lockout is caused by pressing the info button and any other button, either on the LME7 base unit or on the AZL23 remote display. Reset the fault.
206	Inadmissible combination of units (LME7 / AZL23)	Reset the LME7. If the fault occurs continuously, replace the LME7 and / or AZL23.
225	PWM blower speed fault	The speed of the PWM blower dropped below the minimum prepurge speed (parameter 675.00) during prepurge, or the speed of the PWM blower exceeded the maximum ignition speed (parameter 675.01) during ignition. Adjust parameter 675.00 or 675.01, or adjust purge speed (503.01) or ignition speed (403.00).
226	PWM blower parameterization error	<p>The following parameter settings are not allowed. Correct the parameter setting that is incorrect and reset the fault.</p> <ol style="list-style-type: none"> 1. Speed low-fire (P1) > speed high-fire (P2) 2. Speed low-fire (P0) = 0 3. Maximum blower speed (parameter 519) = 0

Fault Code	Description of the Fault	Corrective Action
227	PWM blower parameterization error	<p>One or more PWM blower settings are not compatible. Make sure the following three conditions on the minimum and maximum speed settings are met.</p> <ol style="list-style-type: none"> 1. $516.00 \leq P0 \leq 516.01$ 2. $517.00 \leq P1 \leq 517.01$ 3. $518.00 \leq P2 \leq 518.01$
rSt Er1 rSt Er2	Incompatible PME7 and LME7	The PME7 program module and LME7 base unit being used are incompatible. PME71 program modules are only compatible with LME71 base units, PME73 program modules are only compatible with LME73 base units, and PME75 program modules are only compatible with LME75 base units.
rSt Er3	Fault during restore process	The PME7 program module was removed during the restore process. Re-install the PME7 program module and reset the fault to complete the restore process.
bAC Er3	Fault during backup process	The PME7 program module was removed during the backup process. Re-install the PME7 program module and reset the fault. Perform the backup process again.
Err PrC	No program module detected	This fault occurs when no PME7 program module is plugged into the LME7 base unit. Insert a PME7 program module into the LME7 base unit and reset the fault.

Other Common Faults

Known Causes of Loc 10

Loc 10 is a catchall fault that can be caused by a variety of issues. All known causes of Loc 10 are listed below in Table 7-1.

Table 7-1: All Known Causes of Loc 10

Cause #	LME71/73/75	Description	Phase	Corrective Action
1	All	Line power is directly connected to safety loop input X3-04.1	OFF	Power to the safety loop must be sourced from terminal X3-04.2
2	LME73/75 only	PV jumper missing	40	Add a jumper between terminals X2-09B.7 and X2-09B.8
3	All	Line power directly connected to blower output terminal X2-01.3	OFF	Correct feedback/wiring error
4	All	K4 relay contacts welded	21	With no power on the LME7, check continuity across pins X2-01.3 and X2-02.3. If there is continuity, replace the LME7. See Note 1 below.
5	All	Line power directly connected to POC source terminal X2-02.3	OFF	Correct feedback/wiring error
6	All	Line power directly connected to SV output terminal X6-03.3	OFF	Correct feedback/wiring error
7	All	Ambient temperature out of range (less than -40°F or exceeds 140°F)	OFF	Adjust the temperature back within the controller's acceptable range.
8	All	Flame failure incorrectly being logged as Loc 10	44, 50	Adjust combustion to avoid flame failures during light-off
9	LME75 only	Parameter 560 set incorrectly	oP	Set parameter 560 to any value besides 1.
10	LME75 only	Failed self-check sequence	oP	Check wiring of scanner. Replace scanner.
11	LME75 only	Line power is directly connected to POC input X2-02.4	OFF	Power to the POC input must be sourced from terminal X2-02.3

Notes:

1. It is likely that the rating on the blower motor output X2-01.3 was exceeded. Output X2-01.3 has a 2 Amp rating at 120 V, 50/60 Hz.

Loc 10 Troubleshooting Steps

When a Loc 10 fault occurs that is not listed in Table 7-1, it is typically caused by a wiring error. To determine where the wiring error is, use the following troubleshooting steps:

1. Unplug all terminals from the LME7 except for X3-04 and the AZL (if equipped).
2. Plug in terminal X5-03 and attempt to start the burner.
3. As various faults occur due to terminals being disconnected from the LME7, plug terminals back in as necessary.
4. Eventually when one terminal is plugged back in, it should cause a Loc 10 fault.
5. Investigate the wiring on all pins of the terminal that caused the Loc 10 fault when it was plugged back in.

LME7 LED is Flashing Red

When the LED on the front of the LME7 is flashing red very quickly, this indicates that the LME7 has been placed into Diagnostic Mode. While being in Diagnostic Mode does not prevent successful operation of the burner, it does remove the status that is typically displayed by the LED, as well as causes operators to incorrectly conclude that the LME7 is damaged.

There is no practical use for Diagnostic Mode. To exit Diagnostic Mode, simply press and hold the info button until the LED flashes yellow, then release the info button.

LME7 Stuck in Standby (OFF) / LME7 Faults Won't Reset

Ensure that neutral is not directly connected to terminal X2-03.1, the remote reset input. To remotely reset the LME7, neutral is momentarily applied to input X2-03.1. If neutral is applied to X2-03.1 permanently, an LME7 fault cannot be reset and the LME7 will not start the burner even when a call for heat signal is applied to input X5-03.1.

LME7 Stuck in Phase 90 (P90)

This indicates there is no power on input terminal X5-01.2. Typically, the low gas pressure switch and/or high gas pressure switch are connected to terminal X5-01.2. Check for appropriate gas pressure, and reset pressure switches if they are manual reset. Once power is restored to terminal X5-01.2, the LME7 will exit Phase 90 automatically.

LME75 Does a Power Cycle During the Operating (oP) Phase

This could be caused by one of two scenarios:

1. Parameter 560 is set to a value of 1. If this is the case, change parameter 560 to a value of 0 or 2 instead.
2. The self-check flame scanner failed the self-check sequence. Check the wiring of the flame scanner. If the wiring looks correct and the issue persists, replace the flame scanner.

Other LME7 Phases

Phase	LED Status	Meaning
P01	Yellow/red	LME7 over/under voltage (102-132V)
P02	Yellow	Safety shutdown
P04	Green/red	Extraneous light
P08	OFF	Test phase - appears briefly during initial powerup

Intentionally Left Blank

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410
Appendix A	Application Guide

Modbus RTU, Modbus TCP/IP, and BACnet MS/TP Communication

Introduction

There are two interface modules available to connect the LME7 burner control to a building automation system: the OCI417.10 and the OCI460.10. The OCI417.10 provides both a Modbus RTU and BACnet MS/TP interface. If a Modbus TCP/IP interface is needed, the OCI460.10 should be used. The OCI417.10 is covered on pages 1-13 of this section, while the OCI460.10 is covered on pages 14-26. Both units are compatible with all LME7... burner controls and PME7... program modules.

OCI417.10 Instructions

Physical Connections

Power

Power to the OCI417.10 must be either 9-24VDC or 9-24VAC (nominal). Power consumption is 2.5W or less. **SCC part number AGA15-24** is available as a suitable power supply.

Terminal designations:

Label	Function
L+	DC + / AC ~
N-	DC - / AC ~

Connection to the LME7...

The connection from the OCI417.10 to the LME7... should be made with a standard 4-wire RJ-11 cable, such as **SCC part number TDC207**. **Maximum allowed cable length is 3 meters.**

X56 Port LME7...



Pin 1: 5V Out
Pin 2: Transmit
Pin 3: Receive
Pin 4: 0V Out

OCI417.10




Pin 1: 0V In
Pin 2: Receive
Pin 3: Transmit
Pin 4: 5V In

Note that while the OCI417.10 is connected, the AZL2... or PC tool ACS410 via OCI410... may not be simultaneously connected. Connecting multiple interfaces to the LME7... using a multi-way cable or splitter may result in damage to the connected LME7..., OCI417.10, AZL2..., or OCI410...



Connection to the BMS

The connection from the BMS to the OCI417.10 is via terminal block. The physical medium is RS-485. Multiple RS-485 nodes may be connected in a daisy-chain. For long runs (typically greater than 1,000 feet) or noisy environments, termination may be required on the end node.

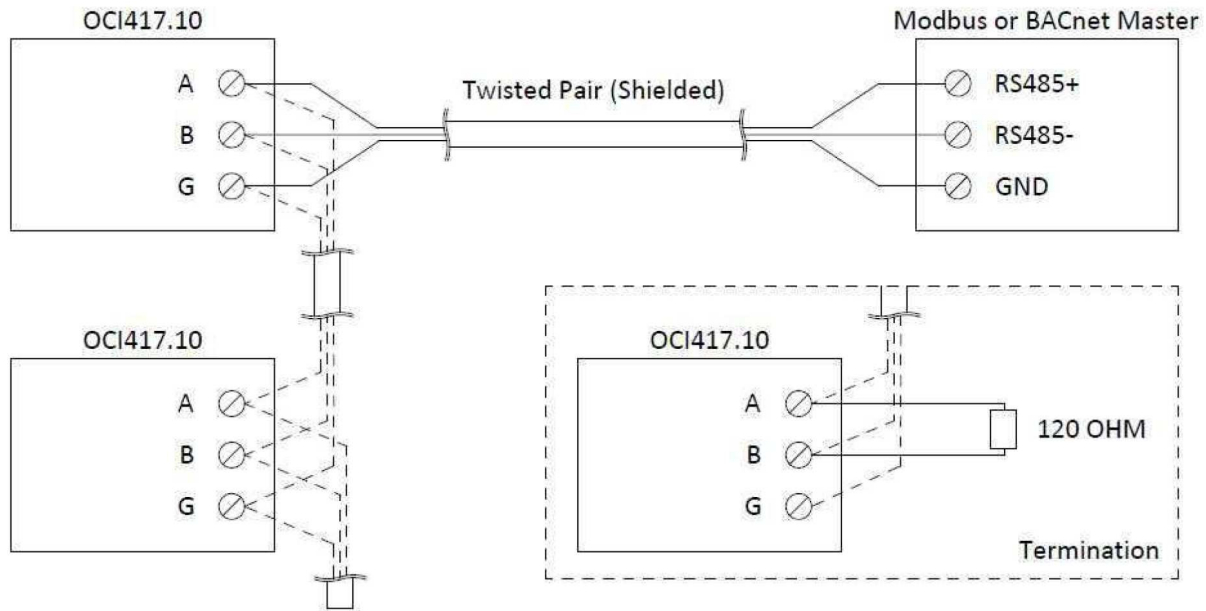

Terminal designations:

Label	Function
A	RS-485 Data (+)
B	RS-485 Data (-)
G	RS-485 Common Ground

Status LED

The status LED annunciates the status of the OCI417.10 and the connection to the LME7...

Color	Status
Green Flashing	No Connection to LME7...
Green / Red Alternating	Communicating with LME7...
Red Flashing	Internal Error OCI417.10

Tx/Rx LED

The LED will flash red to indicate incoming communication on the RS-485 connection. The LED will flash green to indicate outgoing communication. With normal communication, the LED will rapidly alternate between green and red. NOTE: If the poll rate is fast the flashes may be very brief and hard to notice.

Modbus RTU Connection Details

Modbus RTU protocol selection and addressing is done using the PC tool **OCI417 Configuration Utility** (see next section).

Supported addresses: 1-247

Supported baud rates: 2400, 4800, 9600, 19200, 38400, 57600 and 115200

Supported data bits: 8

Supported parity and stop bits: none (1 or 2 stop bits), odd (1 stop bit), and even (1 stop bit)

Supported function codes: 3 (read holding registers), 4 (read input registers)

Maximum read length: 125 (if beginning and ending registers are valid addresses)

BACnet MS/TP Connection Details

BACnet MS/TP protocol selection and addressing is done using the PC tool **OCI417 Configuration Utility** (see next section).

Supported addresses: 0-127

Supported baud rates: 9600, 19200, 38400, 57600, 76800 and 115200

Supported data bits: 8

Supported parity and stop bits: none (1 stop bit)

Supported device instances: 0-4194302

Using the OCI417 Configuration Utility


1. To download the OCI417 Configuration Utility, go to the following website and click the “OCI417.10 Modbus Utility” link to download and install the software.

<https://scccombustion.com/products/lme7-flame-safeguard/>


2. Once installed, double-click the icon to open the Configuration Utility.



3. The utility will open and show the connection status of the OCI417.10.

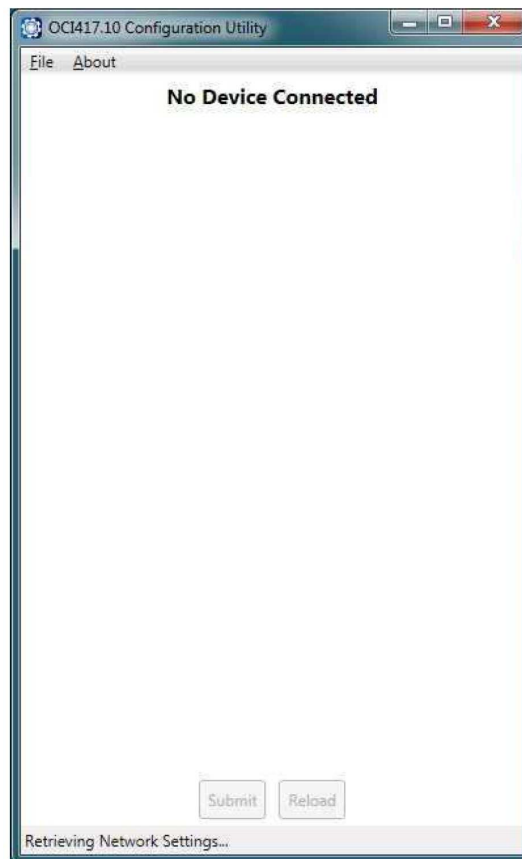

4. Use a mini-USB cable to connect the OCI417.10 to the computer, such as **SCC part number AGA5-05M**. A driver may self-install the first time a connection is made. The connected device will then be indicated on the screen.

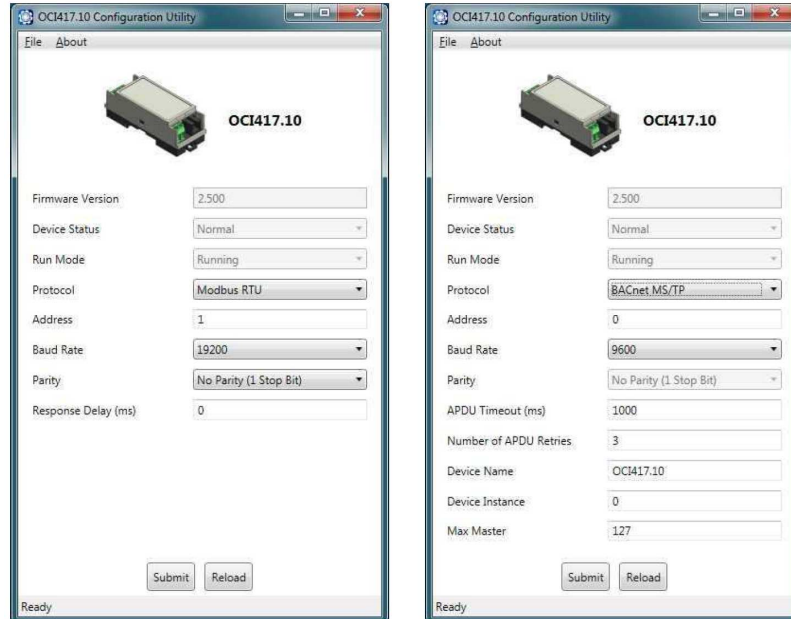

5. The protocol can be changed between Modbus RTU and BACnet MS/TP from this screen. See the previous sections for further details on the protocol-specific settings that can be changed. Once the desired settings have been entered, click **Submit** to apply. Click **Reload** to refresh the displayed settings.

Updating the OCI417.10 Firmware

1. From the OCI417.10 Configuration Utility, click **File -> Update Device...**



2. Locate the supplied update file with a **.duf** extension and click **Open**.



3. The device will automatically reboot and reconnect with the OCI417.10 Configuration Utility once the firmware update is complete. When a device is connected, the firmware version is shown as one of the read-only parameters.

Firmware Version

Modbus Mapping

ADDRESS	ACCESS	DESCRIPTION	FORMAT	NOTES
0	R	PHASE	Unsigned Int 16	
1	R	FLAME PERCENT LME71/LME73	Unsigned Int 16	x10
2	R	MAINS VOLTAGE	Unsigned Int 16	x10
3	R	STARTUPS RESETTABLE	Unsigned Int 32	
5	R	STARTUPS TOTAL	Unsigned Int 32	
7	R	RELAY K12 CYCLES	Unsigned Int 32	
9	R	RELAY K11 CYCLES	Unsigned Int 32	
11	R	RELAY K2 CYCLES	Unsigned Int 32	
13	R	RELAY K1 CYCLES	Unsigned Int 32	
15	R	MAX RELAY CYCLES	Unsigned Int 32	
17	R	CURRENT OUTPUT PERCENT	Unsigned Int 16	> 100 IS STAGES (101=S1, 102=S2)
18	R	ACTUATOR ACTUAL PERCENT	Unsigned Int 16	65535 (-1) IS NOT OPTIONED
19	R	ACTUATOR TARGET PERCENT	Unsigned Int 16	65535 (-1) IS NOT OPTIONED
20	R	EXT LOAD CONTROLLER PERCENT	Unsigned Int 16	65535 (-1) IS NOT OPTIONED
21	R	FAN SPEED RPM	Unsigned Int 16	65535 (-1) IS NOT OPTIONED
22	R	FAN SPEED PERCENT	Unsigned Int 16	65535 (-1) IS NOT OPTIONED
23	R	TARGET FAN SPEED PERCENT	Unsigned Int 16	65535 (-1) IS NOT OPTIONED
24	R	PWM SIGNAL PERCENT	Unsigned Int 16	65535 (-1) IS NOT OPTIONED
25	R	STATUS INPUT WORD LME71/LME73	Unsigned Int 16	SEE BIT BREAKDOWN
25 bit 0	R	SAFETY LIMIT (SK)	Boolean	TERMINAL X3.04.1
25 bit 1	R	PROOF OF CLOSURE (POC)	Boolean	TERMINAL X2.02.4
25 bit 4	R	PRESS SW VALVE PROVING (P LT)	Boolean	TERMINAL X9.04.2
25 bit 5	R	LOW GAS PRESSURE SWITCH (Pmin)	Boolean	TERMINAL X5.01.2
25 bit 6	R	CONTROL SWITCH (ON/OFF)	Boolean	TERMINAL X5.03.1
25 bit 7	R	COMBUSTION AIR SWITCH (LP)	Boolean	TERMINAL X3.02.1
25 bit 8	R	RESET TERMINAL (EK2)	Boolean	TERMINAL X2.03.1
25 bit 10	R	INCREASE MODULATION (LR-OPEN)	Boolean	TERMINAL X5.03.3
25 bit 11	R	DECREASE MODULATION (LR-CLOSED)	Boolean	TERMINAL X5.03.2
25 bit 12	R	ACTUATOR FEEDBACK (SA-R)	Boolean	TERMINAL X2.09.4
25 bit 14	R	RESET BUTTON LME	Boolean	
26	R	STATUS OUTPUT WORD	Unsigned Int 16	SEE BIT BREAKDOWN
26 bit 0	R	FLAME PRESENT LME71/LME73 FLAME 1 PRESENT LME75	Boolean	
26 bit 1	R	ALARM (AL)	Boolean	TERMINAL X2.03.3
26 bit 2	R	NO COMM TO LME	Boolean	STATUS FROM OCI417
26 bit 3	R	FLAME 2 PRESENT LME75	Boolean	
26 bit 7	R	SAFETY VALVE (SV)	Boolean	TERMINAL X6.03.3
26 bit 8	R	ACTUATOR LOW-FIRE (SA-KL)	Boolean	TERMINAL X2.09.2
26 bit 9	R	ACTUATOR HIGH-FIRE (SA-NL)	Boolean	TERMINAL X2.09.3
26 bit 10	R	PILOT VALVE (PV)	Boolean	TERMINAL X7.01.3
26 bit 12	R	IGNITION (Z)	Boolean	TERMINAL X4.02.3
26 bit 13	R	FAN (M)	Boolean	TERMINAL X2.01.3
26 bit 14	R	VALVE 2 (V2)	Boolean	TERMINAL X7.02.3
26 bit 15	R	VALVE 1 (V1)	Boolean	TERMINAL X7.04.4
27	R	STATUS INPUT WORD LME75	Unsigned Int 16	SEE BIT BREAKDOWN
27 bit 0	R	PRESS SW VALVE PROVING PME811/PME831: P LT PME812: PMAX	Boolean	TERMINAL X9.04.2

Modbus Mapping

ADDRESS	ACCESS	DESCRIPTION	FORMAT	NOTES
27 bit 1	R	VALVE PROVING ENABLE (LT) HIGH GAS PRESSURE SWITCH (Pmax) PROOF OF CLOSURE (POC)	Boolean	TERMINAL X2.02.4
27 bit 2	R	INCREASE MODULATION (LR-OPEN)	Boolean	TERMINAL X5.03.3
27 bit 3	R	DECREASE MODULATION (LR-CLOSED)	Boolean	TERMINAL X5.03.2
27 bit 4	R	COMBUSTION AIR SWITCH (LP)	Boolean	TERMINAL X3.02.1
27 bit 5	R	LOW GAS PRESSURE SWITCH (Pmin)	Boolean	TERMINAL X5.01.2
27 bit 6	R	RESET BUTTON LME	Boolean	
27 bit 7	R	RESET TERMINAL (EK2)	Boolean	TERMINAL X2.03.1
27 bit 8	R	ACTUATOR FEEDBACK (SA-R)	Boolean	TERMINAL X2.09.4
27 bit 9	R	SAFETY LIMIT (SK)	Boolean	TERMINAL X3.04.1
27 bit 10	R	CONTROL SWITCH (ON/OFF)	Boolean	TERMINAL X5.03.1
27 bit 11	R	INPUT CAMS (SA-ZL)	Boolean	TERMINAL X2.09.8
28	R	FLAME 1 PERCENT LME75	Unsigned Int 16	X10
29	R	FLAME 2 PERCENT LME75	Unsigned Int 16	X10
50	R	PRODUCT ID	String	
60	R	BURNER ID	String	
70	R	OEM PRODUCT ID	String	
80	R	PME PRODUCT ID	String	
90	RW	OCI PRODUCT ID	String	WRITABLE DATA AREA
100	R	CURRENT ERROR CODE	Unsigned Int 16	
101	R	CURRENT ERROR STARTUPS	Unsigned Int 32	
103	R	CURRENT ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
104	R	CURRENT ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
110	R	HISTORY 1 ERROR CODE	Unsigned Int 16	
111	R	HISTORY 1 ERROR STARTUPS	Unsigned Int 32	
113	R	HISTORY 1 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
114	R	HISTORY 1 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
120	R	HISTORY 2 ERROR CODE	Unsigned Int 16	
121	R	HISTORY 2 ERROR STARTUPS	Unsigned Int 32	
123	R	HISTORY 2 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
124	R	HISTORY 2 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
130	R	HISTORY 3 ERROR CODE	Unsigned Int 16	
131	R	HISTORY 3 ERROR STARTUPS	Unsigned Int 32	
133	R	HISTORY 3 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
134	R	HISTORY 3 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
140	R	HISTORY 4 ERROR CODE	Unsigned Int 16	
141	R	HISTORY 4 ERROR STARTUPS	Unsigned Int 32	
143	R	HISTORY 4 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
144	R	HISTORY 4 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
150	R	HISTORY 5 ERROR CODE	Unsigned Int 16	
151	R	HISTORY 5 ERROR STARTUPS	Unsigned Int 32	
153	R	HISTORY 5 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
154	R	HISTORY 5 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
160	R	HISTORY 6 ERROR CODE	Unsigned Int 16	
161	R	HISTORY 6 ERROR STARTUPS	Unsigned Int 32	
163	R	HISTORY 6 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR

Modbus Mapping

ADDRESS	ACCESS	DESCRIPTION	FORMAT	NOTES
164	R	HISTORY 6 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
170	R	HISTORY 7 ERROR CODE	Unsigned Int 16	
171	R	HISTORY 7 ERROR STARTUPS	Unsigned Int 32	
173	R	HISTORY 7 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
174	R	HISTORY 7 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
180	R	HISTORY 8 ERROR CODE	Unsigned Int 16	
181	R	HISTORY 8 ERROR STARTUPS	Unsigned Int 32	
183	R	HISTORY 8 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
184	R	HISTORY 8 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
190	R	HISTORY 9 ERROR CODE	Unsigned Int 16	
191	R	HISTORY 9 ERROR STARTUPS	Unsigned Int 32	
193	R	HISTORY 9 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
194	R	HISTORY 9 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED
200	R	HISTORY 10 ERROR CODE	Unsigned Int 16	
201	R	HISTORY 10 ERROR STARTUPS	Unsigned Int 32	
203	R	HISTORY 10 ERROR PHASE	Unsigned Int 16	PHASE IS 0 WHEN NO ERROR
204	R	HISTORY 10 ERROR LOAD	Unsigned Int 16	255 IS NO LOAD RECORDED

BACnet Mapping

ADDRESS	DESCRIPTION	UNITS	ACTIVE TEXT	INACTIVE TEXT
AV1	PHASE	NO UNITS	--	--
AV2	FLAME PERCENT LME71/LME73	PERCENT	--	--
AV3	FLAME 1 PERCENT LME75	PERCENT	--	--
AV4	FLAME 2 PERCENT LME75	PERCENT	--	--
AV5	MAINS VOLTAGE	VOLTS	--	--
AV6	STARTUPS RESETTABLE	NO UNITS	--	--
AV7	STARTUPS TOTAL	NO UNITS	--	--
AV8	RELAY K12 CYCLES	NO UNITS	--	--
AV9	RELAY K11 CYCLES	NO UNITS	--	--
AV10	RELAY K2 CYCLES	NO UNITS	--	--
AV11	RELAY K1 CYCLES	NO UNITS	--	--
AV12	MAX RELAY CYCLES	NO UNITS	--	--
AV13	CURRENT OUTPUT PERCENT	PERCENT	--	--
AV14	ACTUATOR ACTUAL PERCENT	PERCENT	--	--
AV15	ACTUATOR TARGET PERCENT	PERCENT	--	--
AV16	EXT LOAD CONTROLLER PERCENT	PERCENT	--	--
AV17	FAN SPEED RPM	RPM	--	--
AV18	FAN SPEED PERCENT	PERCENT	--	--
AV19	TARGET FAN SPEED PERCENT	PERCENT	--	--
AV20	PWM SIGNAL PERCENT	PERCENT	--	--
AV21	CURRENT ERROR CODE	NO UNITS	--	--
AV22	CURRENT ERROR STARTUPS	NO UNITS	--	--
AV23	CURRENT ERROR PHASE	NO UNITS	--	--
AV24	CURRENT ERROR LOAD	PERCENT	--	--
AV25	HISTORY 1 ERROR CODE	NO UNITS	--	--
AV26	HISTORY 1 ERROR STARTUPS	NO UNITS	--	--
AV27	HISTORY 1 ERROR PHASE	NO UNITS	--	--
AV28	HISTORY 1 ERROR LOAD	PERCENT	--	--
AV29	HISTORY 2 ERROR CODE	NO UNITS	--	--
AV30	HISTORY 2 ERROR STARTUPS	NO UNITS	--	--
AV31	HISTORY 2 ERROR PHASE	NO UNITS	--	--
AV32	HISTORY 2 ERROR LOAD	PERCENT	--	--
AV33	HISTORY 3 ERROR CODE	NO UNITS	--	--
AV34	HISTORY 3 ERROR STARTUPS	NO UNITS	--	--
AV35	HISTORY 3 ERROR PHASE	NO UNITS	--	--
AV36	HISTORY 3 ERROR LOAD	PERCENT	--	--
AV37	HISTORY 4 ERROR CODE	NO UNITS	--	--
AV38	HISTORY 4 ERROR STARTUPS	NO UNITS	--	--
AV39	HISTORY 4 ERROR PHASE	NO UNITS	--	--
AV40	HISTORY 4 ERROR LOAD	PERCENT	--	--
AV41	HISTORY 5 ERROR CODE	NO UNITS	--	--
AV42	HISTORY 5 ERROR STARTUPS	NO UNITS	--	--
AV43	HISTORY 5 ERROR PHASE	NO UNITS	--	--
AV44	HISTORY 5 ERROR LOAD	PERCENT	--	--
AV45	HISTORY 6 ERROR CODE	NO UNITS	--	--
AV46	HISTORY 6 ERROR STARTUPS	NO UNITS	--	--

BACnet Mapping

ADDRESS	DESCRIPTION	UNITS	ACTIVE TEXT	INACTIVE TEXT
AV47	HISTORY 6 ERROR PHASE	NO UNITS	--	--
AV48	HISTORY 6 ERROR LOAD	PERCENT	--	--
AV49	HISTORY 7 ERROR CODE	NO UNITS	--	--
AV50	HISTORY 7 ERROR STARTUPS	NO UNITS	--	--
AV51	HISTORY 7 ERROR PHASE	NO UNITS	--	--
AV52	HISTORY 7 ERROR LOAD	PERCENT	--	--
AV53	HISTORY 8 ERROR CODE	NO UNITS	--	--
AV54	HISTORY 8 ERROR STARTUPS	NO UNITS	--	--
AV55	HISTORY 8 ERROR PHASE	NO UNITS	--	--
AV56	HISTORY 8 ERROR LOAD	PERCENT	--	--
AV57	HISTORY 9 ERROR CODE	NO UNITS	--	--
AV58	HISTORY 9 ERROR STARTUPS	NO UNITS	--	--
AV59	HISTORY 9 ERROR PHASE	NO UNITS	--	--
AV60	HISTORY 9 ERROR LOAD	PERCENT	--	--
AV61	HISTORY 10 ERROR CODE	NO UNITS	--	--
AV62	HISTORY 10 ERROR STARTUPS	NO UNITS	--	--
AV63	HISTORY 10 ERROR PHASE	NO UNITS	--	--
AV64	HISTORY 10 ERROR LOAD	PERCENT	--	--
BV1	SAFETY LIMIT (SK) LME71/73	--	CLOSED	OPEN
BV2	SAFETY LIMIT (SK) LME75	--	CLOSED	OPEN
BV3	PROOF OF CLOSURE (POC) LME71/73	--	CLOSED	OPEN
BV4	VALVE PROVING ENABLE (LT) LME75 HIGH GAS PRESS SW (Pmax) LME75 PROOF OF CLOSURE (POC) LME75	--	CLOSED	OPEN
BV5	PRESS SW VALVE PROVING (P LT) LME71/73	--	CLOSED	OPEN
BV6	PRESS SW VALVE PROVING (P LT) LME75	--	CLOSED	OPEN
BV7	LOW GAS PRESSURE SWITCH (Pmin)	--	CLOSED	OPEN
BV8	CONTROL SWITCH (ON/OFF) LME71/73	--	CLOSED	OPEN
BV9	CONTROL SWITCH (ON/OFF) LME75	--	CLOSED	OPEN
BV10	COMBUSTION AIR SWITCH (LP) LME71/73	--	CLOSED	OPEN
BV11	COMBUSTION AIR SWITCH (LP) LME75	--	CLOSED	OPEN
BV12	RESET TERMINAL (EK2) LME71/73	--	CLOSED	OPEN
BV13	RESET TERMINAL (EK2) LME75	--	CLOSED	OPEN
BV14	INCREASE MODULATION (LR-OPEN)	--	CLOSED	OPEN
BV15	DECREASE MODULATION (LR-CLOSED)	--	CLOSED	OPEN
BV16	RESET BUTTON LME	--	CLOSED	OPEN
BV17	INPUT CAMS (SA-ZL) LME75	--	CLOSED	OPEN
BV18	FLAME PRESENT LME71/LME73 FLAME 1 PRESENT LME75	--	FLAME	NO FLAME
BV19	FLAME 2 PRESENT LME75	--	FLAME	NO FLAME
BV20	ALARM (AL)	--	ALARM	NO ALARM
BV21	NO COMM TO LME	--	OK	NO COMM
BV22	ACTUATOR FEEDBACK (SA-R)	--	CLOSED	OPEN
BV23	SAFETY VALVE (SV)	--	CMD ON	CMD OFF

BACnet Mapping

ADDRESS	DESCRIPTION	UNITS	ACTIVE TEXT	INACTIVE TEXT
BV24	ACTUATOR LOW-FIRE (SA-KL)	--	CMD ON	CMD OFF
BV25	ACTUATOR HIGH-FIRE (SA-NL)	--	CMD ON	CMD OFF
BV26	PILOT VALVE (PV)	--	CMD ON	CMD OFF
BV27	IGNITION (Z)	--	CMD ON	CMD OFF
BV28	FAN (M)	--	CMD ON	CMD OFF
BV29	VALVE 2 (V2)	--	CMD ON	CMD OFF
BV30	VALVE 1 (V1)	--	CMD ON	CMD OFF

Unused Inputs


Any inputs unused by the selected PME... will still annunciate. For example, although PME71.111A1 does not support valve proving, applying 120VAC to terminal X9-04.2 will still cause Modbus address 25, bit 4 to show this terminal as active.

OCI460.10 Instructions

Introduction

The OCI460.10 is used to communicate information from an LME7 burner control to a building automation system (BAS). Unlike similar products, the OCI460.10 is not a simple pass-through device. It has two groups of Modbus settings that must be configured properly for successful communication to occur.

1. The **Input (Master) Settings** must match the settings of the connected LME7.
2. The **Output (Slave) Settings** must match the settings of the connected BAS.

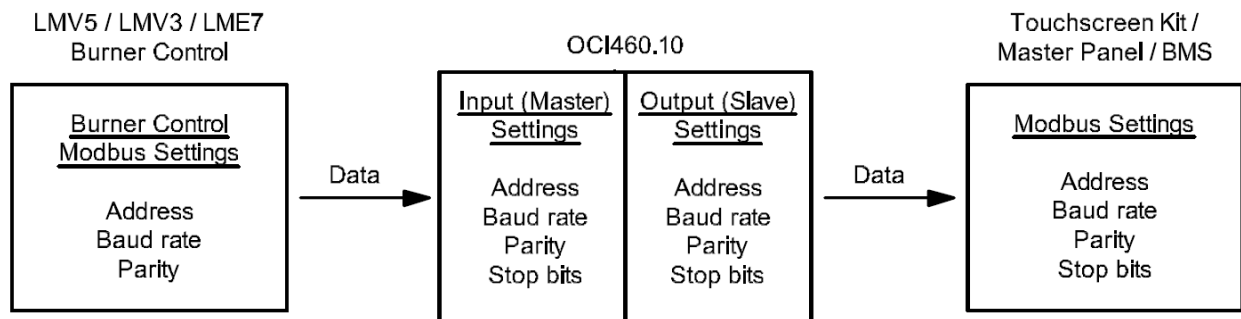

The LME7 burner controls have the following default Modbus settings:

Address = 1 (not adjustable)
Baud rate = 19,200 (not adjustable)
Parity = None (not adjustable)
Stop bits = 1 (not adjustable)


Likewise, both the input (master) and output (slave) settings on the OCI460.10 have the following default settings:

Address = 1
Baud rate = 19,200
Parity = None
Stop bits = 1

Since the Modbus settings in the LME7 match the default settings in the OCI460.10, the OCI460.10 input (master) settings should not be adjusted. Only the OCI460.10 output (slave) settings need to be adjusted to match the settings of the BAS.

Wiring Diagram

The wiring diagram for the OCI460.10 is shown below.

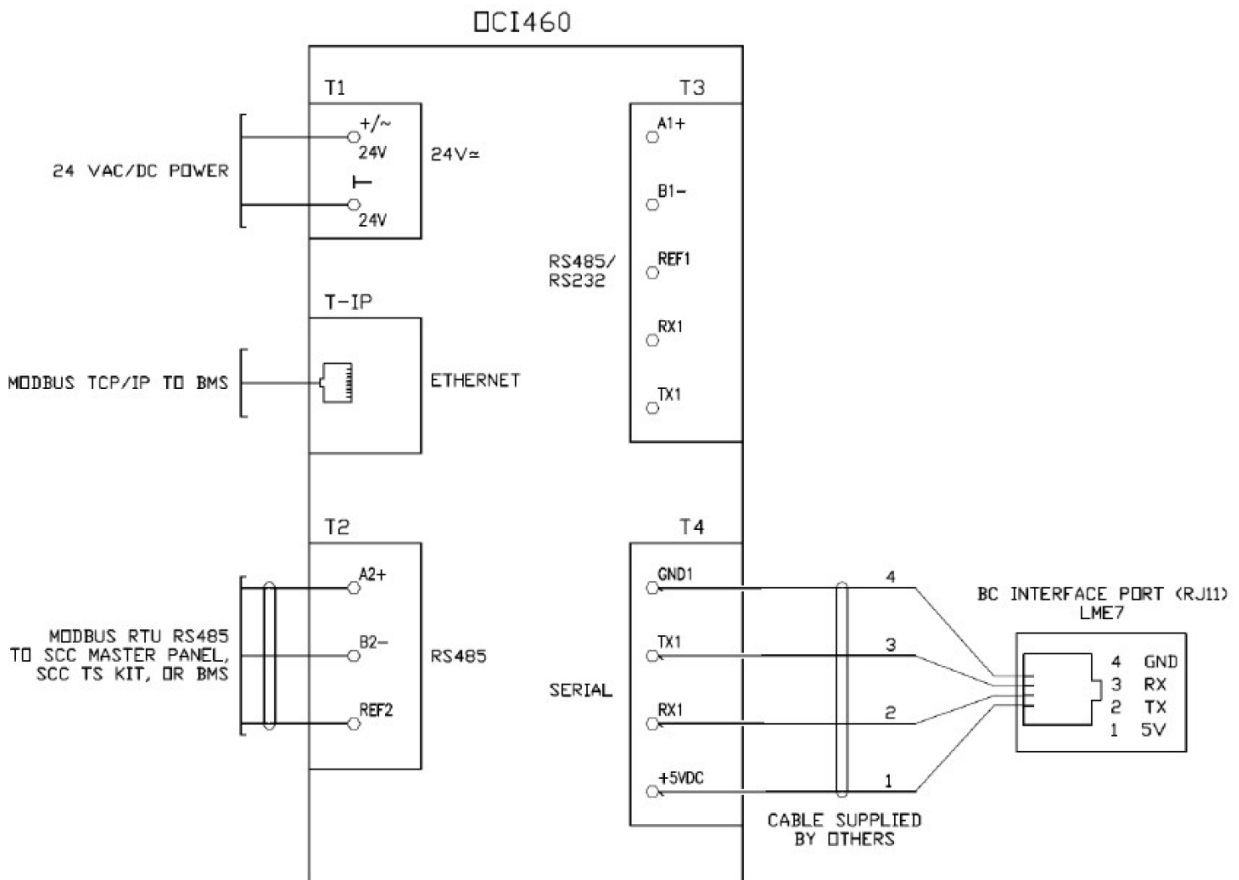

Note: Only one burner control can be connected to each OCI460.10.

LED Status Lights

Down Link LED

The down link LED annunciates the status of the connection between the OCI460.10 and the LME7.

Color	Status
Flashing green	No connection to LME7 burner control
Solid green	Communicating with LME7 burner control
Solid orange	Automatic detection of the burner control has been disabled

Up Link LED

The up link LED annunciates the status of the Ethernet connection on the OCI460.10.

Color	Status
Off	No physical connection to the Ethernet network
Flashing green	Existing physical connection to the Ethernet network
Solid orange	Automatic detection of the burner control has been disabled

Status LED

The status LED annunciates the status of the OCI460.10.

Color	Status
Solid red	Normal startup sequence or undervoltage
Solid green	Normal operation
Alternating red/green	Firmware update in progress
Solid orange	Firmware update successfully completed


Auxiliary LED

The auxiliary LED is not used on the OCI460.10.

Configuration


The Modbus communication settings, including the IP address, Modbus address, and baud rate can be changed using the web-based configuration utility integrated into the OCI460.10. This requires a PC with a physical Ethernet port (RJ45) or a USB-to-Ethernet adapter, any web browser, and a standard Ethernet cable (not a crossover cable). The network settings of the PC should be set to DHCP which is typically the default setting. To connect the PC to the OCI460.10, use the following procedure.

1. Make the necessary physical connections:
 - a. Connect the OCI460.10 to a PC using a standard Ethernet cable.
 - b. Connect the OCI460.10 to a 24VDC power supply or to 24 VAC power.
2. Using the end of a straightened paper clip, press and hold the T5 button for approximately five seconds until both the down link LED and up link LED turn orange. The OCI460.10 will reboot itself which takes approximately 30 seconds. Once complete, the status LED will be solid green, and the down link and up link LEDs will both be solid orange.

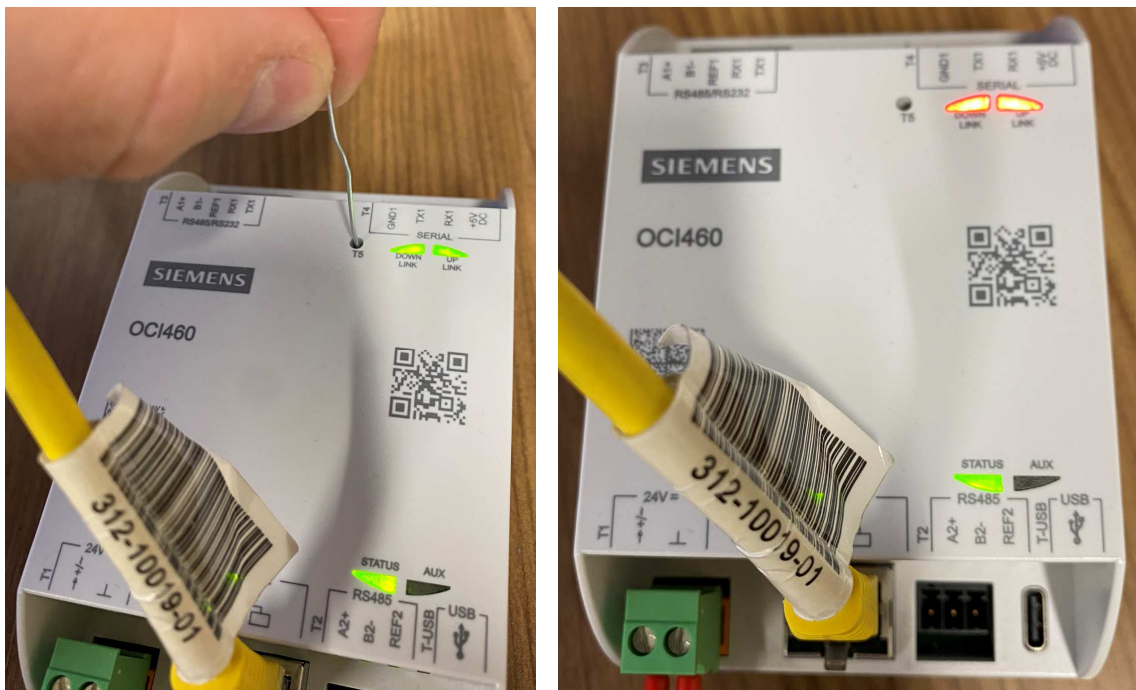


Configuration (continued)

3. Open a web browser and type `http://OCI460_XXYYZZ` into the address bar, where `XXYYZZ` are replaced by the last six characters (no dashes) in the MAC address listed on the side of the OCI460.10. In the below example, the last six characters in the MAC address are `EF307B` so you should type `http://OCI460_EF307B`.

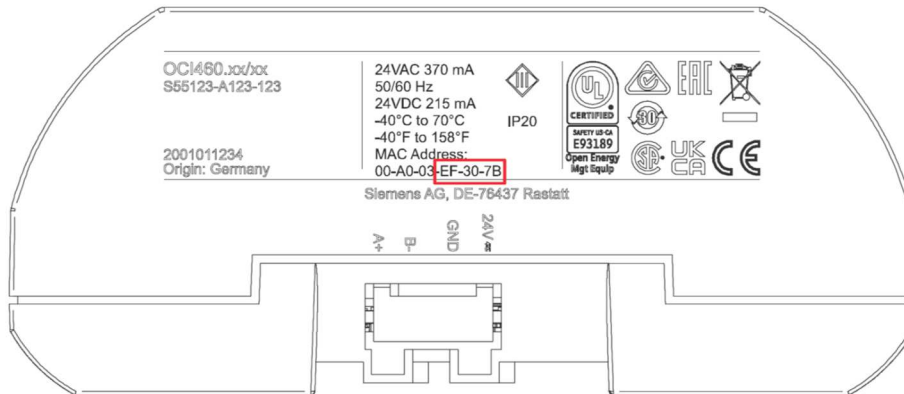


4. It takes approximately one minute for the OCI460.10 to connect to the PC once the Ethernet cable between the two devices is connected and the T5 button has been pushed. If necessary, refresh the web browser until the Login screen appears.
5. On the Login screen, enter the following values and press “Sign in”.
 - a. Username – ADMIN
 - b. Password – SBTAdmin!

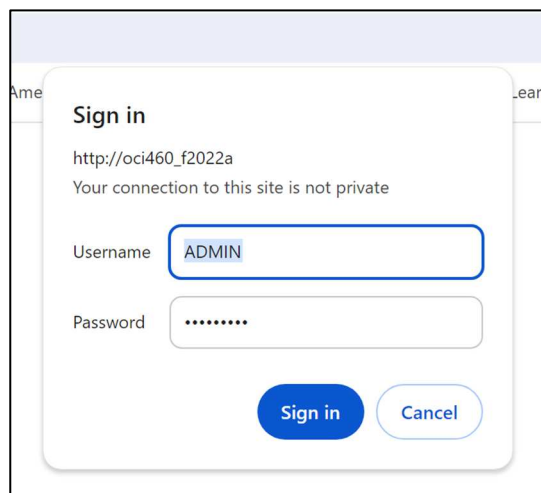

Configuration (continued)


6. You will then be prompted to enter a PIN. Enter 0000 and press “Log on.”

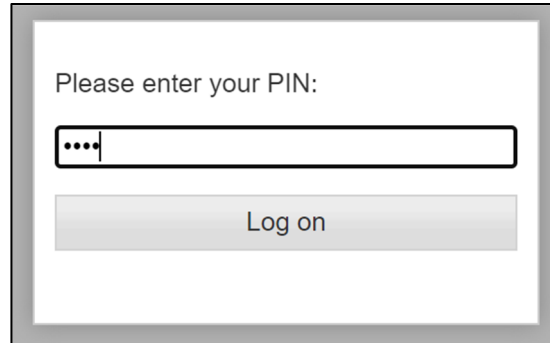

Please enter your PIN:

Log on

7. If done successfully, this will bring up the start page of the web-based configuration utility as shown below.

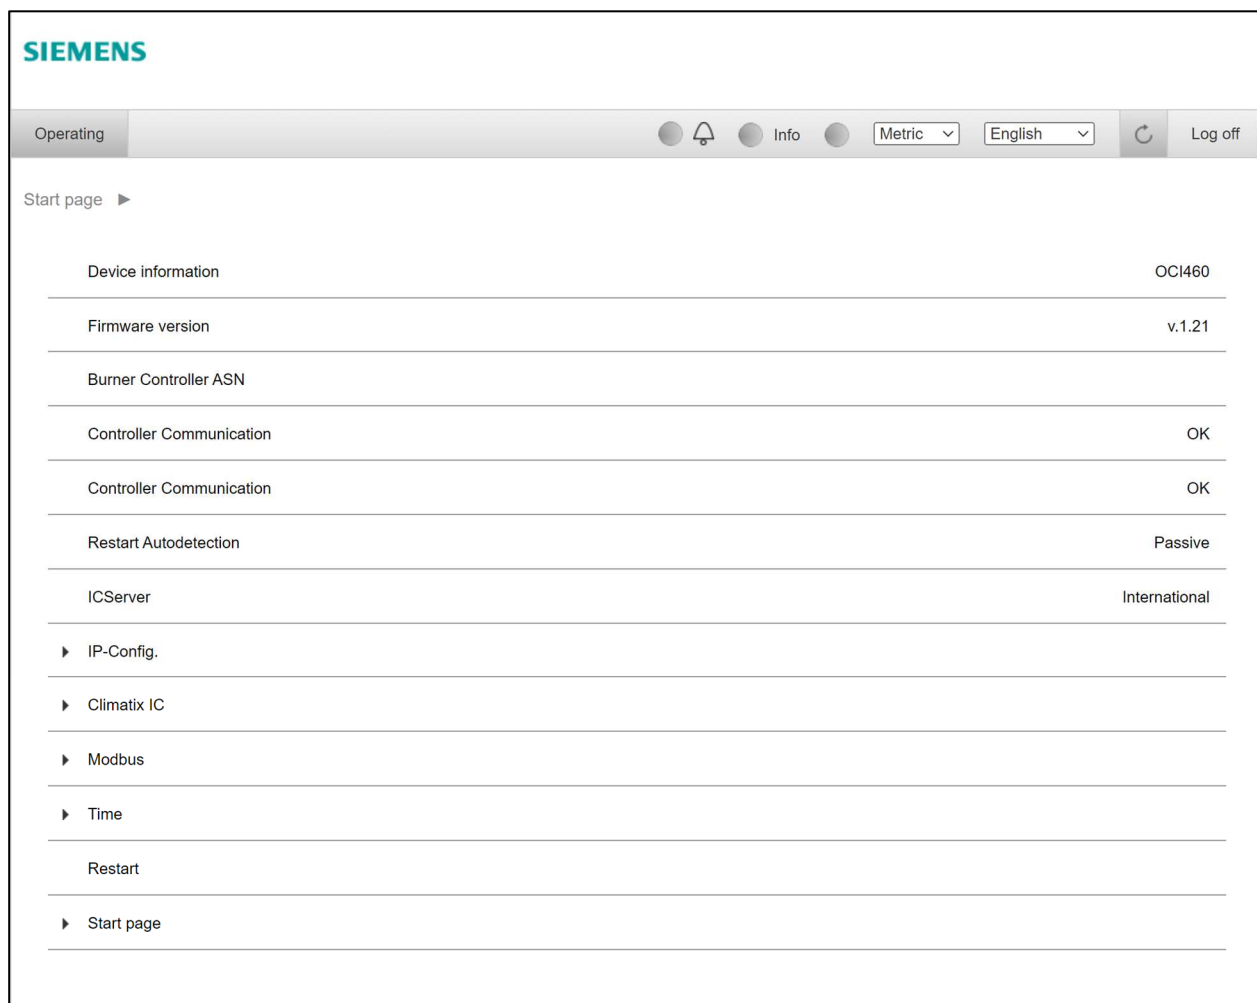

SIEMENS

Operating Info Metric English Log off


Start page ▶

Device information	OCI460
Firmware version	v.1.21
Burner Controller ASN	
Controller Communication	OK
Controller Communication	OK
Restart Autodetection	Passive
ICServer	International
▶ IP-Config.	
▶ Climatix IC	
▶ Modbus	
▶ Time	
Restart	
▶ Start page	

Configuration (continued)

Adjusting the Settings for the TCP/IP Connection to a BMS

1. From the start page of the web-based configuration utility, click on “IP-Config.”.

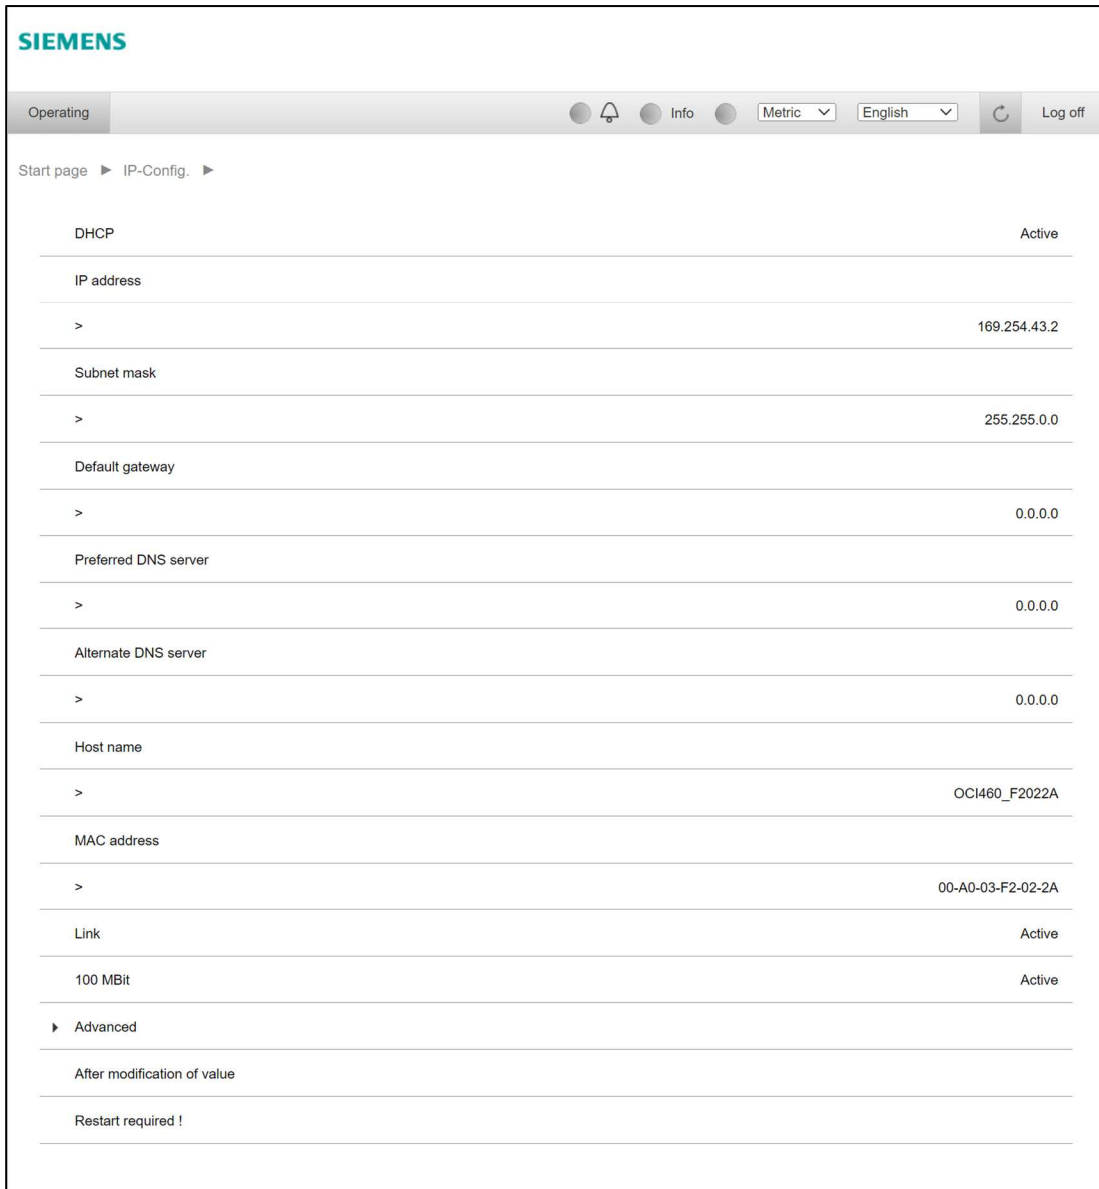

The screenshot shows the Siemens web-based configuration utility interface. At the top, there is a navigation bar with the Siemens logo, a 'Start page' link, and a breadcrumb trail 'Start page > IP-Config.'. Below the navigation bar, the main content area displays the following settings:

Parameter	Value
DHCP	Active
IP address	169.254.43.2
Subnet mask	255.255.0.0
Default gateway	0.0.0.0
Preferred DNS server	0.0.0.0
Alternate DNS server	0.0.0.0
Host name	OCI460_F2022A
MAC address	00-A0-03-F2-02-2A
Link	Active
100 MBit	Active

Below the table, there is an 'Advanced' section with a sub-section 'After modification of value' and a note 'Restart required !'.

Configuration (continued)

2. From this page, the IP address and associated settings can be set for connection to a BAS. The following settings are the ones that typically must be adjusted.

DHCP – Set to “Passive” to enable the use of a fixed IP address.

IP address – Set to the desired IP address for the BAS network.

Subnet mask – Set to the desired subnet mask for the BAS network.

Default gateway – Set to the desired default gateway for the BAS network.

After changing any of the settings listed above, press “Apply” next to that setting. The remaining settings on this page do not typically need to be adjusted.

3. If more configuration changes to the OCI460.10 are needed, continue to do so. If all parameter changes are complete, scroll down to the bottom of the IP-Config. page. Next to where it says, “Restart required!”, select “Execute” and then press “Apply” once. The OCI460.10 will reboot itself with the new TCP/IP settings. Wait until the down link LED and up link LED are both flashing green before disconnecting the PC from the OCI460.10. This takes approximately one minute.

Modbus Mapping

The Modbus mapping for the LME7 burner control is listed below.

Function	Address	Number of Words	Access	Description	Data Format	Coding	Notes
03/04	0	1	R	Phase	U16	UINT	0-255
03/04	10	1	R	Current load	U16	UINT	x10 See Note 1
03/04	35	1	R	Inputs (bits)	U16	UINT	See Table 3
03/04	37	1	R	Outputs (bits)	U16	UINT	See Table 4
03/04	74, 75	2	R	Total startups	U32	UDINT	0-999999
03/04	76, 77	2	R	Total startups	U32	UDINT	0-999999
03/04	98-105	8	R	LME7 part number (ASN)	U8[16]	String	≤ 13 characters
03/04	107	1	R	Parameter set version	U16	Hex	
03/04	108-110	3	R	Identification date	U16[3]	Date	DD.MM.YY
03/04	111	1	R	Identification number	U16	UINT	
03/04	113	1	R	LME7 software version	U16	Hex	
03/04	115-122	8	R	Burner ID	U8[16]	String	≤ 8 characters
03/04	800	1	R	Blower speed	U16	USINT	0-100%
03/04	801	1	R	PWM output signal	U16	USINT	0-100%
03/04	802	1	R	Blower speed setpoint	U16	USINT	0-100%
03/04	803	1	R	Actuator position	U16	USINT	0-100%
03/04	804	1	R	Actuator position setpoint	U16	USINT	0-100%
03/04	805	1	R	Flame signal 1 (analog)	U16	REAL	0-300
03/04	806	1	R	Flame signal 2 (analog)	U16	REAL	0-300
03/04	807	1	R	Flame signal units	U16	Boolean	0 = μ A 1 = %
03/04	808	1	R	Mains voltage	U16	UINT	0-500
03/04	809	1	R	Inputs 2 (bits)	U16	UINT	See Table 5
03/04	810	1	R	Outputs 2 (bits)	U16	UINT	See Table 6
03/04	811	1	R	PWM blower speed	S16	REAL	0-9999
03/04	819-823	5	R	Current fault	U16, U32, U16, U16	UINT	See Note 2
03/04	824-828	5	R	Fault history 1	U16, U32, U16, U16	UINT	
03/04	829-833	5	R	Fault history 2	U16, U32, U16, U16	UINT	
03/04	834-838	5	R	Fault history 3	U16, U32, U16, U16	UINT	
03/04	839-843	5	R	Fault history 4	U16, U32, U16, U16	UINT	
03/04	844-848	5	R	Fault history 5	U16, U32, U16, U16	UINT	
03/04	849-853	5	R	Fault history 6	U16, U32, U16, U16	UINT	
03/04	854-858	5	R	Fault history 7	U16, U32, U16, U16	UINT	
03/04	859-863	5	R	Fault history 8	U16, U32, U16, U16	UINT	
03/04	864-868	5	R	Fault history 9	U16, U32, U16, U16	UINT	
03/04	869-873	5	R	Fault history 10	U16, U32, U16, U16	UINT	

Modbus Mapping (continued)

Function	Address	Number of Words	Access	Description	Data Format	Coding	Notes
03/04	874, 875	2	R	K11/K7 relay counter	U32	UDINT	0-999999
03/04	876, 877	2	R	K12/K8 relay counter	U32	UDINT	0-999999
03/04	878, 879	2	R	K2 relay counter	U32	UDINT	0-999999
03/04	880, 881	2	R	K1 relay counter	U32	UDINT	0-999999
03/04	887	1	R	Burner control communication	U16	Boolean	0 = on 1 = off

Notes:

1. The current load is multiplied by a factor of 10. For example, a value of 842 equates to a load of 84.2%. For staged oil, the current load values are the following:

Stage 1 = 1001

Stage 2 = 1002

Stage 3 = 1003

2. The fault history (addresses 819-873) uses the following structure:

Address 819 = Current fault – code (U16)

Address 820 and 821 = Current fault – startup number (U32)

Address 822 = Current fault – phase (U16)

Address 823 = Current fault – load (U16)

Address 824 = Fault history 1 – code (U16)

Address 825 and 826 = Fault history 1 – startup number (U32)

Address 827 = Fault history 1 – phase (U16)

Address 828 = Fault history 1 – load (U16)

The same structure is used for fault history 2 through 10.

Modbus Mapping (continued)

Digital Input Bits – Modbus Address 35

Bit	Description	PME71.111AX	PME71.112AX	PME71.401AX	PME71.402AX	PME71.901AX	PME73.231AX	PME73.810AX	PME73.811AX	PME73.812AX	PME73.820AX	PME73.830AX	PME73.831AX	PME73.840AX	PME75.231AX	PME75.811AX	PME75.812AX	PME75.831AX
B0	Call for heat	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
B2	Fuel selection																	X
B4	Load controller open						X								X	X	X	X
B5	High oil pressure switch						X								X			
B6	Low oil pressure switch						X								X			
B7	Valve proving pressure switch															X		X
B8	Safety loop						X								X			
B9	Load controller closed						X								X	X	X	X
B10	Gas pressure switches	X	X	X	X	X		X	X	X	X	X	X	X		X	X	X
B11	POC						X								X	X	X	
B13	Air pressure switch	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

Digital Output Bits – Modbus Address 37

Bit	Description	PME71.111AX	PME71.112AX	PME71.401AX	PME71.402AX	PME71.901AX	PME73.231AX	PME73.810AX	PME73.811AX	PME73.812AX	PME73.820AX	PME73.830AX	PME73.831AX	PME73.840AX	PME75.231AX	PME75.811AX	PME75.812AX	PME75.831AX
B0	Alarm	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
B4	Ignition	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
B6	Blower	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
B12	Safety valve	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
B13	Main valve V1	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
B14	Main valve V2			X		X	X	X	X		X	X	X	X	X	X		X
B15	Pilot valve	X	X		X		X	X	X	X	X	X	X	X	X	X	X	X

Digital Input Bits – Modbus Address 809

Bit	Description	PME71.111AX	PME71.112AX	PME71.401AX	PME71.402AX	PME71.901AX	PME73.231AX	PME73.810AX	PME73.811AX	PME73.812AX	PME73.820AX	PME73.830AX	PME73.831AX	PME73.840AX	PME75.231AX	PME75.811AX	PME75.812AX	PME75.831AX
B0	Flame signal 1 (boolean)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
B1	Flame signal 2 (boolean)	X	X				X		X	X				X	X	X	X	
B2	Oil preheater						X							X				
B5	LME7 reset button	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
B6	Remote reset	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
B14	High gas pressure switch																X	X

Modbus Mapping (continued)**Digital Output Bits – Modbus Address 810**

Bit	Description	PME71.111AX	PME71.112AX	PME71.401AX	PME71.402AX	PME71.901AX	PME73.231AX	PME73.810AX	PME73.811AX	PME73.812AX	PME73.820AX	PME73.830AX	PME73.831AX	PME73.840AX	PME75.231AX	PME75.811AX	PME75.812AX	PME75.831AX
B3	Actuator drive open						X								X	X	X	X
B4	Actuator drive closed						X								X	X	X	X

Intentionally Left Blank

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410

Appendix A

Application Guide

Section 1	Overview
Section 2	LME71 Wiring, Parameters, and Phase Diagrams
Section 3	LME73 Wiring, Parameters, and Phase Diagrams
Section 4	LME75 Wiring, Parameters, and Phase Diagrams
Section 5	Commissioning
Section 6	PWM Blowers
Section 7	Troubleshooting
Section 8	Modbus
Section 9	ACS410

Appendix A

Application Guide

Appendix A: LME7 Application Guide



Description

The LME7 Application Guide includes programming, wiring, and operation examples of the control system for the most common applications.

Table of Contents

Honeywell Modutrol IV Motor with the LME75

Introduction.....	3
Setup Procedure without Valve Proving	3
Sequence of Operation without Valve Proving	5
Setup Procedure with Valve Proving.....	7
Sequence of Operation with Valve Proving.....	9
PME75.811A1 Program Sequence with Relays	12

Multi-burner Application – One Down, One Out

Introduction.....	13
Example Wiring Diagram	14
Sequence of Operations.....	15

Multi-burner Application with Two LME71s – One Down, All Out

Introduction.....	16
Example Wiring Diagram	17
Sequence of Operations.....	18

Multi-burner Application with LFS1 – One Down, All Out

Introduction.....	19
Example Wiring Diagram	20
Sequence of Operations.....	21
Important Notes	22

NFPA 86-2023 Compliance with Air Pressure Switch and Motor Starter Auxiliary Contact

Introduction.....	23
Wiring Diagram Option 1.....	24
Sequence of Operation for Option 1.....	24
Wiring Diagram Option 2.....	25
Sequence of Operation for Option 2.....	25
Wiring Diagram Option 3.....	26
Sequence of Operation for Option 3.....	26

Two Flame Detectors

Introduction.....	27
Procedure and Notes.....	27
Wiring Diagrams	28

Honeywell Modutrol IV with the LME75

Introduction

The Siemens LME75 burner control is designed specifically for use with a Siemens SQM4... or SQM5... series actuator. However, with some simple programming changes and the addition of only a few relays, the LME75 can be set up to safely and effectively control a Honeywell Modutrol IV motor.

An LME75.000A1 burner control with the PME75.811A1 program module must be used. No other LME7... burner control or PME7... program module will successfully work in this application. The Honeywell Modutrol IV motor must have high fire and low fire limit switches and can be either a 0-135 Ohm or 4-20 mA motor.

There are two separate procedures outlined below. The first procedure summarizes how to properly connect the LME75 to the Honeywell Modutrol IV motor when valve proving is not being used. This procedure only requires two relays (one DPST relay and one SPDT relay). The second procedure explains how to connect the LME75 to the Honeywell Modutrol IV motor when valve proving is being used. This procedure requires four relays (one 3PST relay, one SPDT relay, and two SPST relays).

Setup Procedure without Valve Proving

1. The following procedure should be used when valve proving is not being utilized.
2. Set the following parameters in the LME75 as described below:

Parameter 241 = 0

Parameter 259 = Greater than or equal to the running time of the Honeywell Modutrol IV motor being used


Parameter 260 = Greater than or equal to the running time of the Honeywell Modutrol IV motor being used

Parameter 515.01 = 1


Parameter 560 = 0

3. Wire the LME75.000A1 burner control, Honeywell Modutrol IV motor, and two relays as shown in Figure A-1. See Section 4 for more details on how to wire in other devices to the LME75.

Honeywell Modutrol IV with the LME75 (continued)

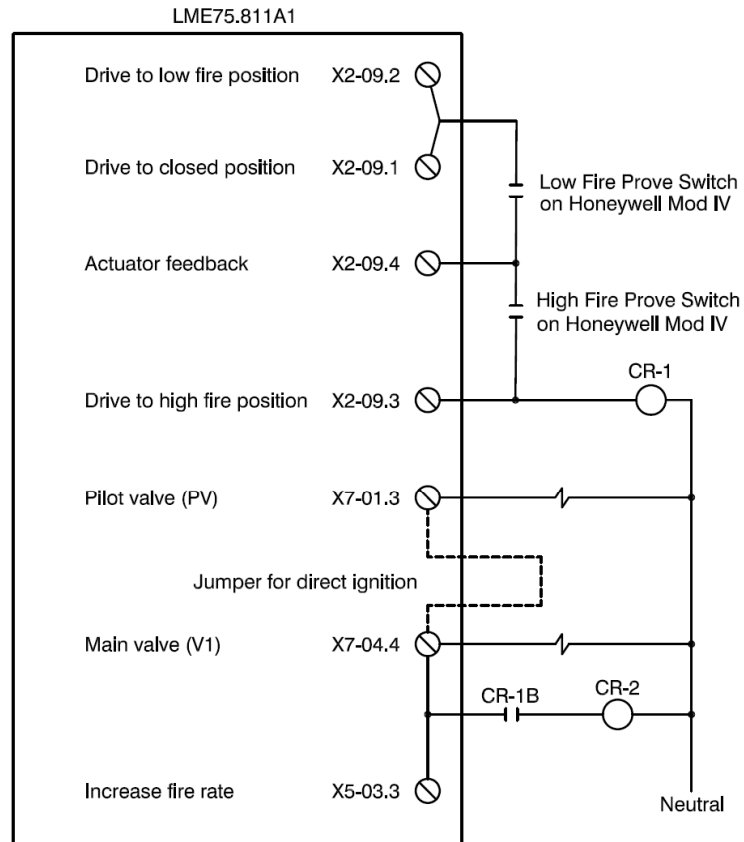

0-135 Ohm Honeywell Modutrol IV

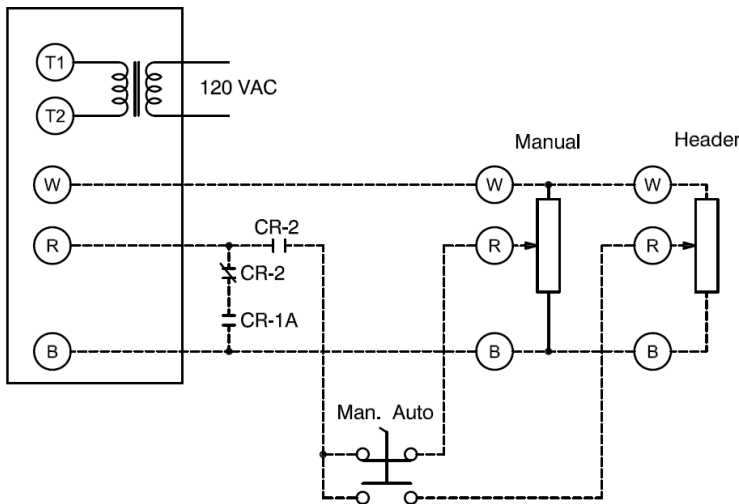

4-20 mA Honeywell Modutrol IV

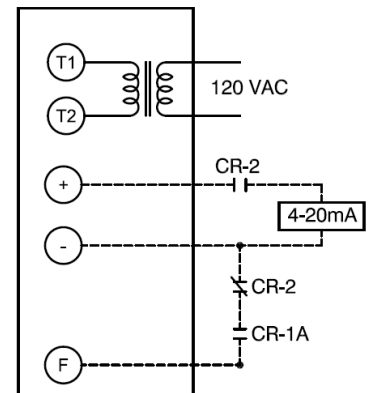


Figure A-1: Wiring a Honeywell Mod IV Motor to the LME75 (no Valve Proving)

Honeywell Modutrol IV with the LME75 (continued)

Sequence of Operation without Valve Proving

1. The LME75 is in standby. All valves are closed and all relays are de-energized. All relay contacts are as shown in the electrical schematic. The Honeywell Modutrol IV motor (hereafter referred to as mod motor) is at the low fire position.
2. The LME75 receives a call for heat. Output X2-09.1 is energized in phase 21 to drive the mod motor to low fire. Since the mod motor is already at the low fire position, the low fire proving switch is closed, and actuator feedback input X2-09.4 is energized.
3. Output X2-09.3 is energized in phase 24 to drive the mod motor to high fire. Relay CR-1 is energized. Normally open contact CR-1A closes, connecting terminals R and B on 0-135 Ohm mod motors or terminals F and - on 4-20 mA mod motors. This drives the mod motor to the high fire position. Once the mod motor reaches the high fire position, the high fire proving switch closes, and actuator feedback input X2-09.4 is energized. Normally open contact CR-1B also closes, but this has no effect since main valve output terminal X7-04.4 is de-energized during this phase.
4. The LME75 progresses to phase 22 and phase 30 (prepurge). During this time, output X2-09.3 remains energized, keeping the mod motor at the high fire position. Actuator feedback input X2-09.4 is required to remain energized during these phases, proving that the mod motor is at the high fire position for the full length of the prepurge.
5. Output X2-09.3 de-energizes in phase 36, de-energizing relay CR-1. Contact CR-1A opens, removing the connection that was keeping the mod motor to high fire. Since normally open contact CR-2 remains open, the mod motor drives to the low fire position. Output X2-09.2 is energized in phase 36. Once the mod motor reaches the low fire position, the low fire proving switch closes, and actuator feedback input X2-09.4 is energized.
6. If the jumper for direct ignition is not installed, the LME75 progresses through phases 40, 42, and 44 without any change to the mod motor. During these phases, the LME75 lights off the pilot and establishes a flame signal. The mod motor remains at the low fire position, and actuator feedback input X2-09.4 is required to remain energized during these phases, proving that the mod motor is at the low fire position through the light-off sequence.

Honeywell Modutrol IV with the LME75 (continued)


7. Main valve output X7-04.4 is energized in phase 50 (for piloted burners) or phase 40 (for non-piloted burners). Input X5-03.3 is energized, which has no effect. Output X2-09.3 is de-energized, so normally open contact CR-1B remains open, and relay CR-2 remains de-energized. The mod motor remains at the low fire position. The LME75 lights off the main burner and progresses through the end of phase 52 like this.
8. The LME75 transitions to operation phase oP. During phase oP, power on input X5-03.3 is directly transmitted to output X2-09.3, causing relay CR-1 to energize. Normally open contact CR-1B closes, energizing relay CR-2. Normally open contact CR-2 closes, allowing the modulation signal (0-135 Ohm or 4-20 mA) to control the mod motor. Normally closed contact CR-2 opens, preventing the connection of terminals R and B on 0-135 Ohm mod motors or terminals F and - on 4-20 mA mod motors. During phase oP, the mod motor is controlled by an external control signal, and the LME75 does not require any type of position feedback.
9. The LME75 loses the call for heat and transitions to phase oP1. Output X2-09.2 is energized to drive the mod motor to low fire before shutting the fuel valves. Once the mod motor reaches the low fire position, the low fire proving switch closes, and actuator feedback input X2-09.4 is energized.
10. Postpurge (phase 74) occurs at low fire. No actuator position feedback is required during postpurge.
11. Output X2-09.1 is energized in phase 10 to drive the mod motor to low fire. Since the mod motor is already at the low fire position, the low fire proving switch is closed, and actuator feedback input X2-09.4 is energized.
12. The LME75 transitions to standby, displayed as "OFF" on the LME75 and AZL23.

Honeywell Modutrol IV with the LME75 (continued)


Setup Procedure with Valve Proving

1. The following procedure should be used when valve proving is being utilized.
2. Set the following parameters in the LME75 as described below:
 - Parameter 241 = 1
 - Parameter 259 = Greater than or equal to the running time of the Honeywell Modutrol IV motor being used
 - Parameter 260 = Greater than or equal to the running time of the Honeywell Modutrol IV motor being used
 - Parameter 515.01 = 1
 - Parameter 560 = 0
3. Wire the LME75.000A1 burner control, Honeywell Modutrol IV motor, and four relays as shown in Figure A-2. See Section 4 for more details on how to wire in other devices to the LME75.

Honeywell Modutrol IV with the LME75 (continued)

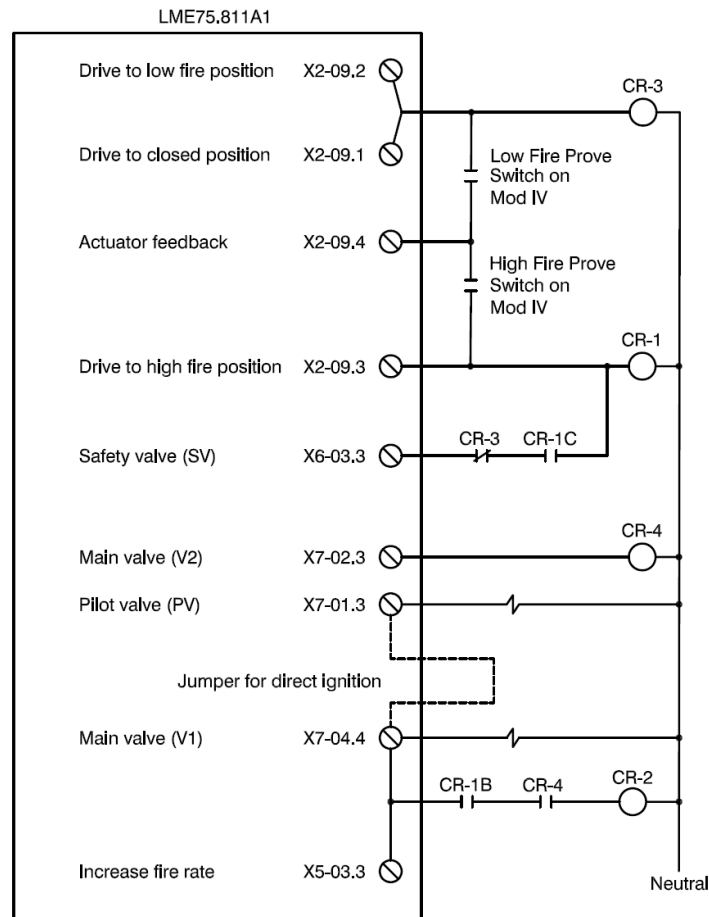

0-135 Ohm Honeywell Modutrol IV

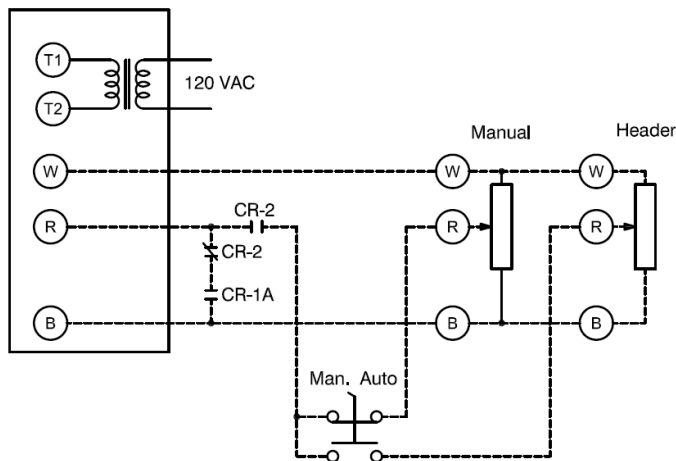

4-20 mA Honeywell Modutrol IV

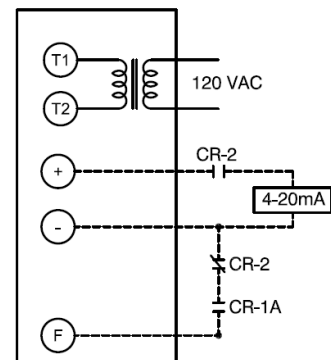


Figure A-2: Wiring a Honeywell Mod IV Motor to the LME75 (with Valve Proving)

Honeywell Modutrol IV with the LME75 (continued)

Sequence of Operation with Valve Proving

1. The LME75 is in standby. All valves are closed and all relays are de-energized. All relay contacts are as shown in the electrical schematic. The Honeywell Modutrol IV motor (hereafter referred to as mod motor) is at the low fire position.
2. The LME75 receives a call for heat. Output X2-09.1 is energized in phase 21 to drive the mod motor to low fire. Relay CR-3 is energized. Output X6-03.3 energizes as well, but this has no effect since normally closed contact CR-3 is open. Since the mod motor is already at the low fire position, the low fire proving switch is closed, and actuator feedback input X2-09.4 is energized.
3. Output X2-09.3 is energized in phase 24 to drive the mod motor to high fire. Relay CR-1 is energized. Normally open contact CR-1A closes, connecting terminals R and B on 0-135 Ohm mod motors or terminals F and - on 4-20 mA mod motors. This drives the mod motor to the high fire position. Once the mod motor reaches the high fire position, the high fire proving switch closes, and actuator feedback input X2-09.4 is energized. Normally open contact CR-1B also closes, but this has no effect since main valve output terminal X7-04.4 is de-energized during this phase.
4. The LME75 progresses to phase 22 and phase 30 (prepurge). During this time, output X2-09.3 remains energized*, keeping the mod motor at the high fire position. Actuator feedback input X2-09.4 is required to remain energized during these phases, proving that the mod motor is at the high fire position for the full length of the prepurge.

* When valve proving is activated, the valve proving sequence typically takes place during shutdown. However, after a lockout or a power cycle of the LME75, valve proving takes place during prepurge as well as postpurge on the next startup. During the valve proving sequence, output X2-09.3 de-energizes. To ensure the mod motor remains at the high fire position during prepurge, power to relay CR-1 is latched in through relay contact CR-1C. The latching circuit is broken when relay CR-3 is energized in phase 36, thus opening normally closed contact CR-3. Also during valve proving, main valve outputs X7-04.4 and X7-02.3 are briefly energized, but not at the same time. This ensures relay CR-2 is never energized during valve proving, which would drive the actuator off of the high fire position.

Honeywell Modutrol IV with the LME75 (continued)

5. Output X2-09.3 de-energizes and output X2-09.2 energizes in phase 36. These actions de-energize relay CR-1 and energize relay CR-3. Normally open contact CR-1A opens, removing the connection that was keeping the mod motor to high fire. Since normally open contact CR-2 remains open, the mod motor drives to the low fire position. Once the mod motor reaches the low fire position, the low fire proving switch closes, and actuator feedback input X2-09.4 is energized.
6. If the jumper for direct ignition is not installed, the LME75 progresses through phases 40, 42, and 44 without any change to the mod motor. During these phases, the LME75 lights off the pilot and establishes a flame signal. The mod motor remains at the low fire position, and actuator feedback input X2-09.4 is required to remain energized during these phases, proving that the mod motor is at the low fire position through the light-off sequence.
7. Main valve outputs X7-04.4 and X7-02.3 are energized in phase 50 (for piloted burners) or phase 40 (for non-piloted burners). Input X5-03.3 is energized, which has no effect. Output X2-09.3 is de-energized, so normally open contact CR-1B remains open, and relay CR-2 remains de-energized. The mod motor remains at the low fire position. The LME75 lights off the main burner and progresses through the end of phase 52 like this.
8. The LME75 transitions to operation phase oP. During phase oP, power on input X5-03.3 is directly transmitted to output X2-09.3, causing relay CR-1 to energize. Normally open contact CR-1B closes, energizing relay CR-2. Normally open contact CR-2 closes, allowing the modulation signal (0-135 Ohm or 4-20 mA) to control the mod motor. Normally closed contact CR-2 opens, preventing the connection of terminals R and B on 0-135 Ohm mod motors or terminals F and - on 4-20 mA mod motors. During phase oP, the mod motor is controlled by an external control signal, and the LME75 does not require any type of position feedback.
9. The LME75 loses the call for heat and transitions to phase oP1. Output X2-09.2 is energized to drive the mod motor to low fire before shutting the fuel valves. Once the mod motor reaches the low fire position, the low fire proving switch closes, and actuator feedback input X2-09.4 is energized.
10. Postpurge (phase 74) occurs at low fire. No outputs are energized that would allow the mod motor to move off of low fire. No actuator position feedback is required during postpurge.

Honeywell Modutrol IV with the LME75 (continued)

11. Output X2-09.1 is energized in phase 10 to drive the mod motor to low fire. Since the mod motor is already at the low fire position, the low fire proving switch is closed, and actuator feedback input X2-09.4 is energized.

12. The LME75 transitions to standby, displayed as “OFF” on the LME75 and AZL23.

PME75.811A1 Phase Diagram with Relays

	Terminal	Description	Notes	Phase	LOC	OFF	21	22	24	22	30	36	40	42	44	50	52	oP	oP1	70	72	74	10	80	81	82	83		
				Param.							259		225	260	257		230	231	232	240	212			234		242	243	244	245
				STARTUP													OPERATION			SHUTDOWN			VALVE PROVING						
				SAFETY TIME 1																									
INPUTS	X3-04.5	Main Voltage																											
	X3-04.1	Safety Loop			X																								
	X5-03.1	Burner On			M																								
	X3-02.1	Air Pressure Switch	Note 3			X			M																				
	X5-01.2	Gas Pressure Switch(es)	Note 4																										
	X9-04.2	Valve Proving Pressure Switch																											
	X10-05.1 X10-06.2	Flame Signal			X						X	X																	
X2-02.4	POC (P237.00 = 1, P237.01 = 0)																												
	POC (P237.00 = 2, P237.01 = 0)															X													
	High Gas Press. Sw. (P237.01 = 1)																												
OUTPUTS	X2-02.3	POC Source		X	X																								
	X6-03.3	Safety Valve		X	X																								
	X2-01.3	Blower		X	X	X																							
	X4-02.3	Ignition Transformer		X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	
	X7-01.3	Pilot Valve	Note 1	X	X	X	X	X	X	X	X							X	X	X	X	X	X	X	X	X	X	X	
	X7-04.3	Main Valve V1	Note 1	X	X	X	X	X	X	X	X	X	X	X	X								X	X	X	X	X	X	
	X7-04.4	Main Valve Indication Light		X	X	X	X	X	X	X	X	X	X	X	X								X	X	X	X	X	X	
	X7-02.3	Main Valve V2		X	X	X	X	X	X	X	X	X	X	X	X								X	X	X	X	X	X	
X2-03.3	Alarm			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	
ACTUATOR	X2-09.3	Drive to High Fire		X	X	X	X				X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	
	X2-09.2	Drive to Ignition / Low Fire		X	X	X	X	X	X	X							X			X	X	X	X	X	X	X	X	X	
	X2-09.1	Drive Closed		X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X						
	X2-09.4	Position Feedback				M													M					M					
RELAYS	CR-1	Drive to High Fire		X	X	X	X				X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	
	CR-2	Release to Modulate		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	
	CR-3	Drive to Low Fire		X	X		X	X	X	X							X	X			X	X	X	X	X	X	X	X	
	CR-4	Main Valve V2	Note 1	X	X	X	X	X	X	X	X	X	X	X	X								X	X	X	X	X	X	

Legend : Energized De-energized Must be de-energized at beginning of phase and energized by end of phase

Energized or de-energized Must be energized by end of phase

Multi-burner Application – One Down, One Out

Introduction

Many applications utilize multiple burners firing into a common chamber, where each individual burner needs to have its own dedicated flame safeguard. In these applications, it is often desired to use a “one down, one out” control scheme. A “one down, one out” control scheme can be summarized as follows:

- Each individual burner has its own dedicated flame safeguard
- If an individual burner is down for any reason (no call for heat, in lockout, etc.), the rest of the burners can continue to operate normally.
- If all burners are down at the same time, the entire system must shut down, including the main upstream shutoff valve that feeds every single burner.


The following equipment is required to install a “one down, one out” control scheme using the LME7 burner controls:

- (1) safety shutoff valve at each burner with proof-of-closure (POC)
- (1) safety shutoff valve on the main gas train with POC
- (2) control relays per burner
- (1) external purge timer
- (1) alarm time delay relay (*Set this timer for the burner shutoff valve to close - suggest 2 seconds*)
- (1) main valve time delay relay (*Set this timer long enough for the burner to be lit*)

The following pages show an example of a “one down, one out” control scheme in an application with 10 burners firing into a common chamber.

Multi-burner Application – One Down, One Out (continued)

Example Wiring Diagram

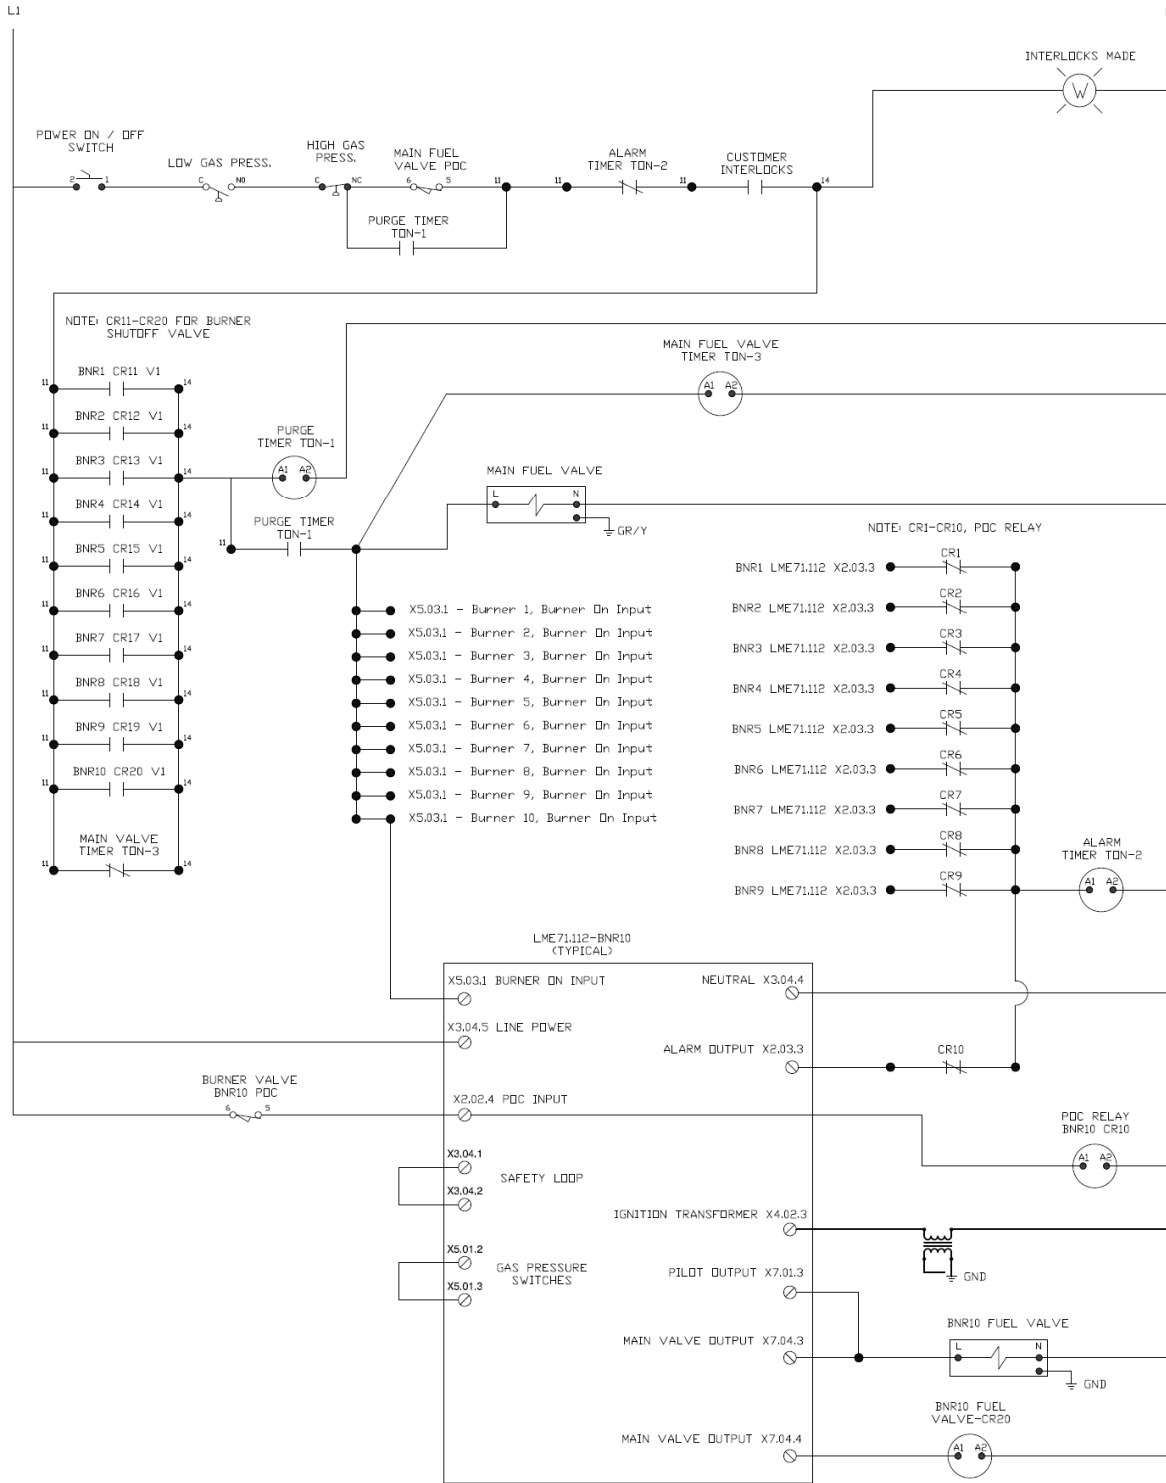

Multi-burner Application – One Down, One Out (continued)

Sequence of Operations

Sequence of operation to start system:

1. Power the system through the Power On/Off switch.
2. Power passes through the safety system interlocks.
 - a. Low gas pressure switch
 - b. High gas pressure switch
 - c. Main fuel valve proof of closure (POC)
 - d. Alarm timer TON-2
 - e. Any other customer interlocks
3. Power continues through main valve timer TON-3 to coil for purge timer relay TON-1.
4. Once purge is completed, purge timer contacts TON-1 close. The following happens simultaneously:
 - a. Main fuel valve opens
 - b. Each burner call for heat is energized, beginning the ignition sequence
 - c. Main fuel valve timer TON-3 is energized
 - d. Latch around main fuel valve POC (TON-1 NO contacts)
5. All burners energize the shutoff valve at each burner and flame is detected. Burner shutoff valve relays (CR11-CR20) are energized. The relay contacts keep the purge timer energized and the system running.
6. Main fuel valve timer contacts TON-3 open.

Sequence of operation for a burner(s) going into alarm, and POC closing as expected:

1. LME7 alarm output from any burner is energized (X2-03.3) and shutoff valve specific to that burner is de-energized (X7-04.3 & X7-04.4)
2. Burner shutoff valve closes
3. POC at burner shutoff valve closes
4. POC relay is energized (CR1-CR10)
5. Contacts at POC relay (CR1-CR10) open. This stops the alarm output from energizing the alarm timer TON-2. If alarm timer TON-2 is energized, all burners will shut down.
6. The other LME7s not in alarm continue to run

Sequence of operation for a burner(s) going into alarm and the POC at the burner not closing:

1. LME7 alarm output from any burner is energized (X2-03.3) and shutoff valve specific to that burner is de-energized (X7-04.3 & X7-04.4).
 2. Burner shutoff valve closes
 3. POC at burner shutoff valve does not close
 4. Alarm output (X2-03.3) energizes alarm timer TON-2 through normally closed POC relay (CR1-CR10)
 5. Alarm timer TON-2 opens in safety limit string and all burners shut down.
-

Multi-burner Application with Two LME71s – One Down, All Out

Introduction

Some applications utilize multiple burners firing into a common chamber with one fuel train. Each individual burner needs to have its own dedicated flame safeguard but share the same fuel train. In these applications, it is often desired to use a “one down, all out” control scheme. A “one down, all out” control scheme can be summarized as follows:

- Each individual burner has its own dedicated flame safeguard
- If an individual burner is down for any reason (no call for heat, in lockout, etc.), the rest of the burners will shut down.
- A single fuel train is manifolded to each burner


The following equipment is required to install a “one down, all out” control scheme using the LME7 burner controls for a two-burner system:

- (1) LME71 burner control per burner
- (1) safety shutoff valve on the main gas train with POC
- (1) ignition transformer per burner
- (5) control relays
- (1) flame scanner or flame rod per LME71

The following pages show an example of a “one down, all out” control scheme in an application with two burners, two LME71 burner controls, and one manifolded fuel train.

Multi-burner Application with Two LME71s – One Down, All Out (cont.)

Example Wiring Diagram

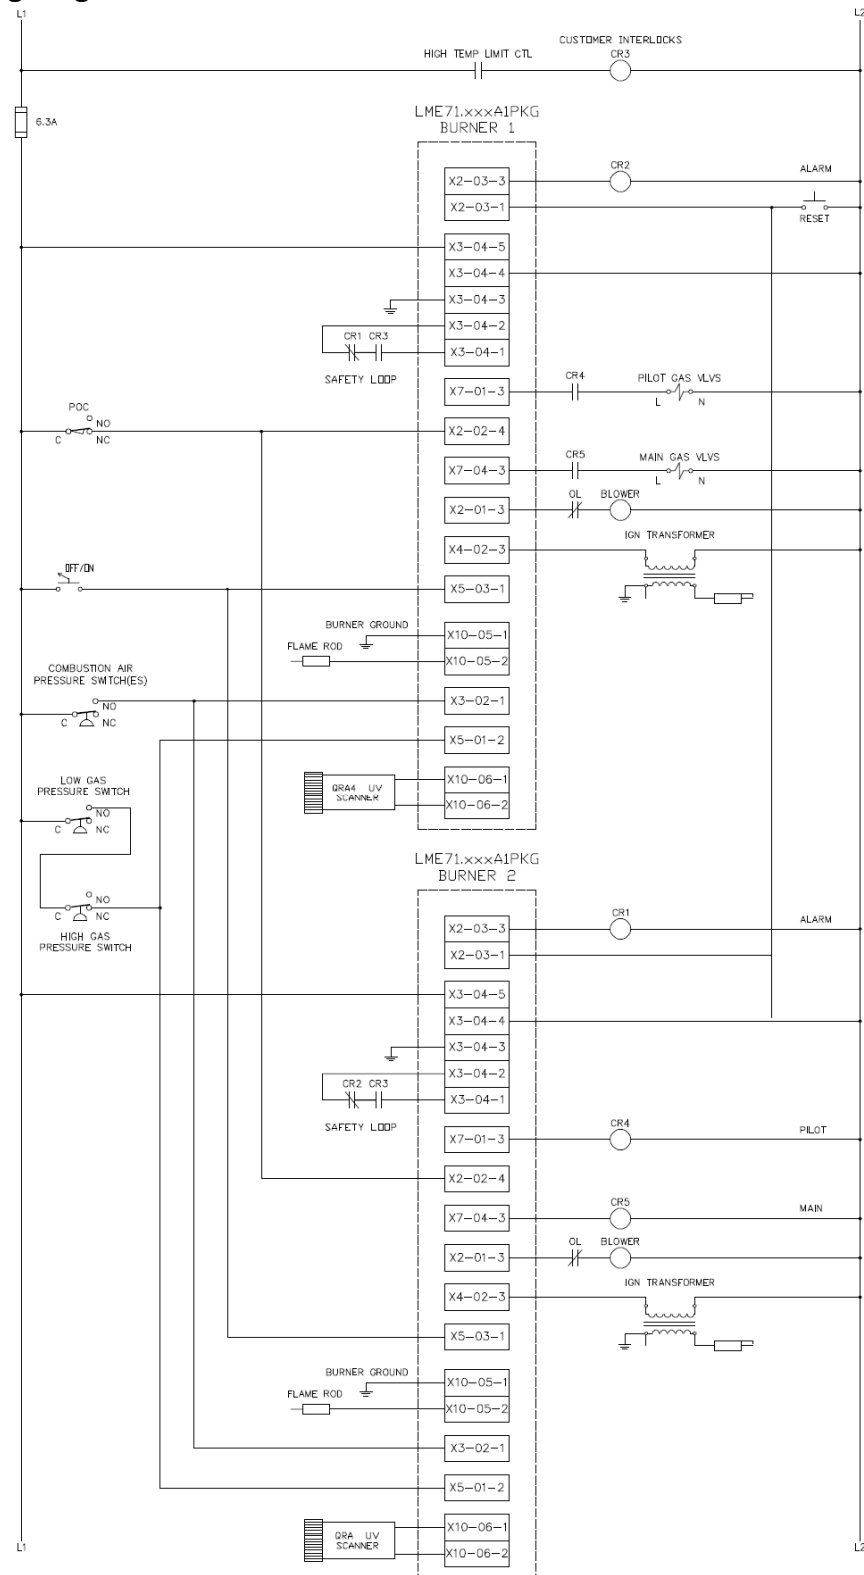

Multi-burner Application with Two LME71s – One Down, All Out (cont.)

Sequence of Operations

Sequence of operations to start system:

1. The LME71's are alarm free. The CR1 and CR2 relays are de-energized, allowing power to the safety loop through the CR1 and CR2 relay contacts.
2. Customer interlocks (CR3) must be made. With CR3 energized, the CR3 relay contacts will be closed, thus the safety loop on each LME71 will be satisfied.
3. Safety inputs are split between both LME71's. The POC and gas pressure switches must be satisfied.
4. The call for heat circuit must be made, which will start the sequencing for each LME71.
5. Burner 2 has a relay (CR4) tied to the pilot output. During the pilot phase, X7-01.3 gets energized, closing the CR4 relay contact on Burner 1. This allows the LME71 for Burner 1 to energize the pilot. Each LME71 has its own ignition transformer.
6. Burner 2 has a relay (CR5) tied to the main valve output. During main light off, X7-04.3 gets energized, and closes the CR5 relay contact on Burner 1. This allows the LME71 for Burner 1 to energize the main valve.

Sequence of operation for a burner(s) going into alarm:

1. If either LME71 controller goes into alarm, both burners will shut down.
 - a. The customer interlocks, relay CR3, are tied into both safety loops. If an interlock opens, both burners shutdown on safety loop open lockouts.
 - b. The alarm output terminal from each burner is tied to a relay (CR1 and CR2). The relay contacts are wired to the opposing burner control's safety loop. If a control goes into alarm, it shuts all burners off.

Notes:

1. When fault codes match, they will annunciate the fault properly.
2. When the fault codes do not match, the Loc 22 should be ignored, and the other lockout code should be used to troubleshoot the burner.
3. Connect either a flame rod or a flame scanner to each LME71, not both.

Multi-burner Application with LFS1 – One Down, All Out

Introduction

Many applications utilize multiple burners firing into a common chamber, where one gas train supplies the entire series of burners. In these applications, a “one down, all out” control scheme is used. A “one down, all out” control scheme can be summarized as follows:

- One flame safeguard monitors all burners and controls the gas train
- Each individual burner requires its own flame switch tied into the flame safeguard
- If the flame signal of an individual burner is in an incorrect state (no flame when running, extraneous light when not running), the rest of the burners will shut down.


The following equipment is required to install a “one down, all out” control scheme using the LME7 burner control:

- (1) LME7 flame safeguard with a diode on the flame rod input
- LFS1 flame switches and flame sensors (UV scanner or flame rod) to monitor the flame on each individual burner
- Ignition transformers at each burner
- (1) main safety shutoff valve upstream of all burners with proof-of-closure (POC)

The following pages show an example of a “one down, all out” control scheme in an application with five direct spark burners firing into a common chamber.

Multi-burner Application with LFS1 – One Down, All Out (continued)

Example Wiring Diagram

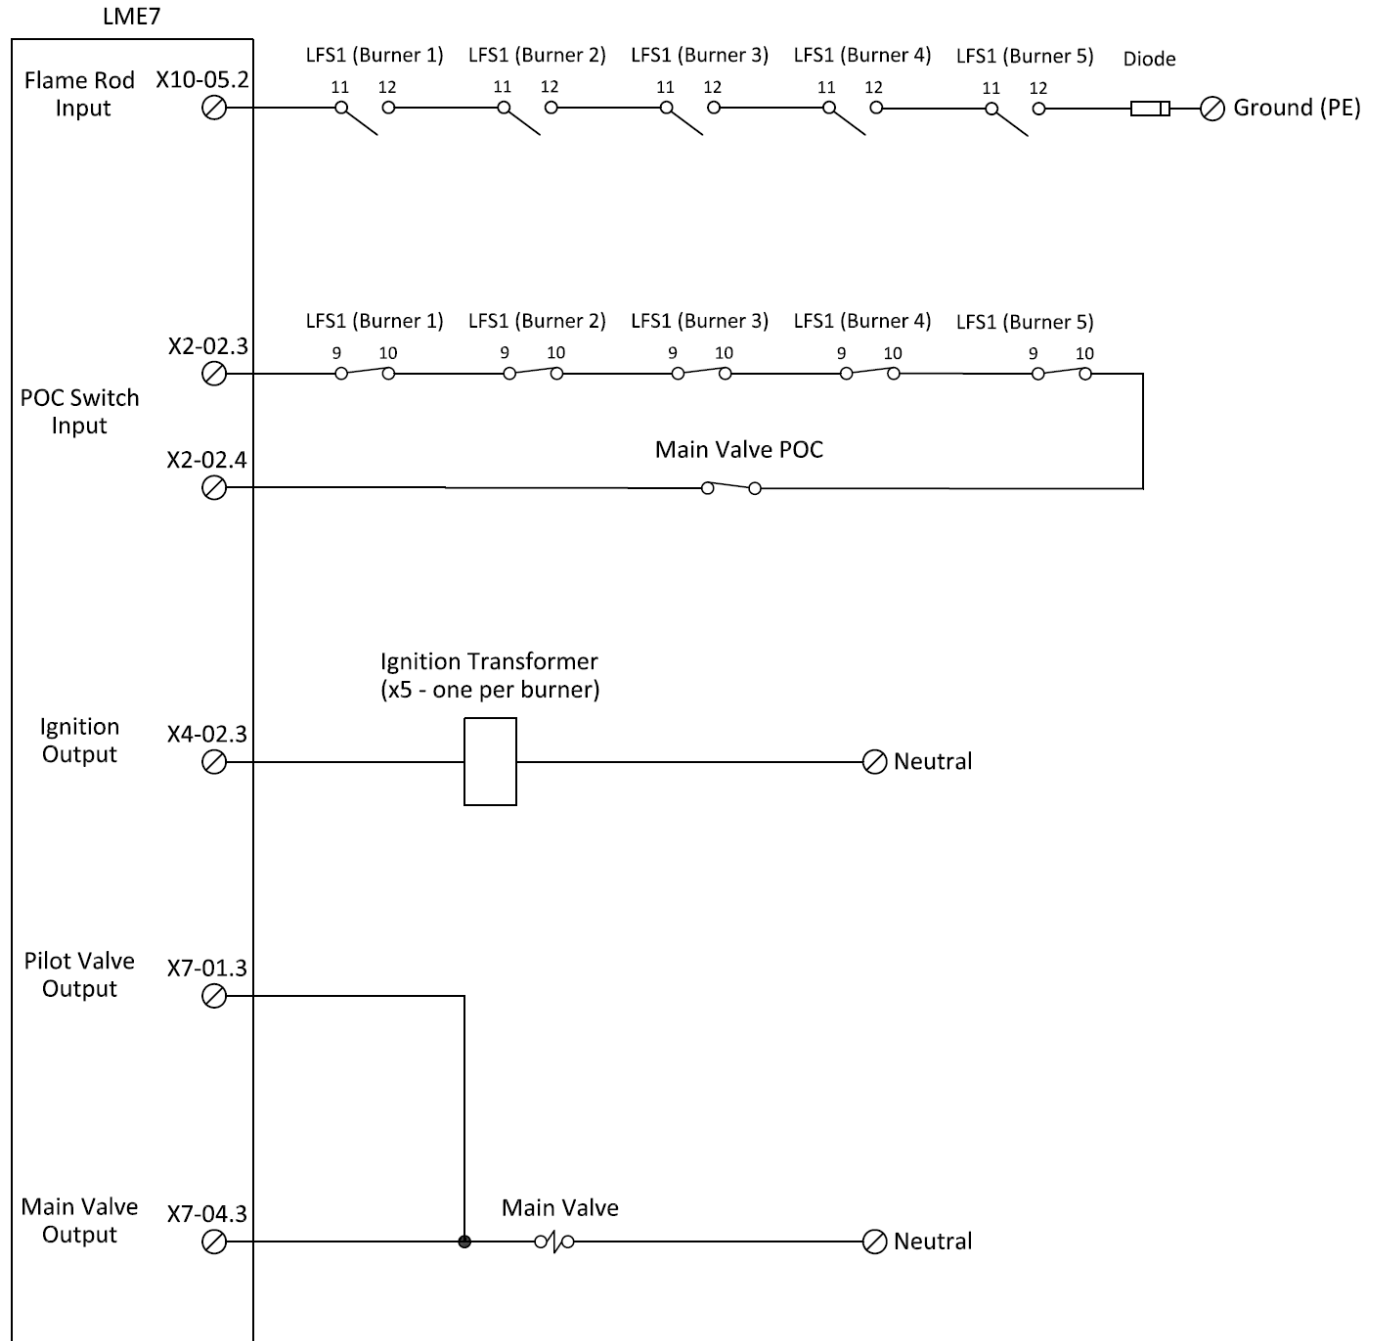

Multi-burner Application with LFS1 – One Down, All Out (continued)

Sequence of Operations

1. The LME7 is powered and receives a call for heat.
2. All safety interlocks are made.
3. POC input X2-02.4 must be energized in phase 21. During this phase, the main valve should be closed, and the normally closed relay contact on each LFS1 should be closed. This verifies that the main gas valve is closed and that each flame sensor connected to the LFS1 flame switches is not detecting a flame. A Loc 14 will occur if X2-02.4 is not energized in phase 21.
4. The LME7 continues to light off the burners, progressing through prepurge.
5. The LME7 energizes the ignition transformer at each burner in either phase 38 or 40 (depending on the PME7 program module being used).
6. The LME7 energizes pilot valve output X7-01.3 in either phase 38 or 40 (depending on the PME7 program module being used). With direct spark, the main valves are jumped to the pilot valve output. The main valves will open during this phase.
7. A flame is established on all five burners, closing the normally open relay contacts on the LFS1 flame switches. A flame signal is required on flame rod input X10-05.2 by the end of phase 42. The signal from the diode will only reach terminal X10-05.2 if all five burners have a valid flame. A Loc 2 will occur if any of the five burners does not register a valid flame signal.
8. The LME7 energizes main valve output X7-04.3 in either phase 40 or 50 (depending on the PME7 program module being used). Nothing happens since the main valve is already open. The LME7 continues to monitor flame rod input X10-05.2. A loss of flame at any burner results in a Loc 2.
9. The LME7 moves to main operation (phase oP or oP1). The LME7 continues to monitor flame rod input X10-05.2. A loss of flame at any burner results in a Loc 7.

Multi-burner Application with LFS1 – One Down, All Out (continued)

Important Notes

1. The equipment needed to implement this type of application only requires a small footprint inside an electrical enclosure.
2. The electrical wiring is very simple for a multi-burner application. The number of burners is equal to the number of LFS1 flame switches.
3. When a flame failure or extraneous light lockout occurs, a few different methods can be used to determine which burner caused the lockout. The LFS1 flame switch has a 0-10 VDC output for flame signal strength. This output signal can be used to determine which LFS1 caused a lockout. The LFS1 also has an indicator light. When the light is yellow, the LFS1 is not sensing flame. When the LFS1 light is green, it is sensing flame.
4. Parameter 237 must be set to 1 so that the POC input is checked during startup and shutdown.
5. On the LFS1 flame switch, terminals 9 and 10 are the normally closed relay contact. This contact is closed when no flame is present, and open when a flame is present.
6. On the LFS1 flame switch, terminals 11 and 12 are the normally open relay contact. This contact is open when no flame is present, and closed when a flame is present.
7. This application can be used on as few as two burners, and up to any number of burners.
8. While the example provided is for a direct spark burner, this application will also work on piloted burners. For a piloted burner, the jumper between terminals X7-01.3 and X7-04.3 should be removed, and the pilot valve(s) should be wired to terminal X7-01.3. The pilot valve is energized in phase 38 or 40 depending on the PME7 program module being used.

Air Pressure Switch and Motor Starter Auxiliary Contact Wiring for NFPA 86-2023 Compliance

Introduction

New provisions in the 2023 version of NFPA 86 have affected the way that the air pressure switch and motor starter auxiliary contact are wired into the burner management system.

1. According to 8.6.6, both states of the air pressure switch must now be checked. The switch must be proven closed when the blower is running and must be proven open when the blower is not running. This requires that the air pressure switch is wired by itself to a dedicated input on the burner control. On all LME7 models, this input is X3-02.1.
2. According to 8.6.3, all motor controlling devices required for combustion of the fuel, including motor starters, must be interlocked into the burner management system. This requires that if a motor starter is used to start and stop the blower motor, an auxiliary contact on the motor starter must be tied into the burner management system. If the motor starter fails to pull in when energized, the burner must shut down. This motor starter auxiliary contact must be wired in series with the gas pressure switches on terminal X5-01.2.

Three wiring diagrams are shown on the following pages. The proper diagram to use depends on the PME7 program module being used.

Option 1 - On most PME7 program modules, gas pressure switch input X5-01.2 is not checked until phase 30, so the motor starter auxiliary contact can be wired in series with the gas pressure switches with no additional logic. This pertains to the following PME7 program modules: PME71.111A1, PME73.811A1, PME73.812A1, PME73.831A1, PME75.811A1, PME75.812A1, PME75.831A1, and PME75.901A1.


Option 2 - A few PME7 program modules check gas pressure switch input X5-01.2 in phase 21, before the motor starter gets pulled in at the beginning of phase 22. This requires an additional relay to bypass the motor starter auxiliary contact until phase 22. This pertains to the following PME7 program modules: PME71.401A1, PME71.402A1, and PME73.840A1.

Option 3 – Some processes require the blower motor to stay on in all phases including when the burner is shutdown. This process is called continuous purge, and it's typically used to prevent return heat from coming back into the burner. This requires a 3-way solenoid valve to bypass the air switch when the burner is off. This pertains to all PME7 program modules.

Air Pressure Switch and Motor Starter Auxiliary Contact Wiring for NFPA 86-2023 Compliance (continued)

Wiring Diagram Option 1

(PME71.111A1, PME73.811A1, PME73.812A1, PME73.831A1, PME75.811A1, PME75.812A1, PME75.831A1, and PME75.901A1)

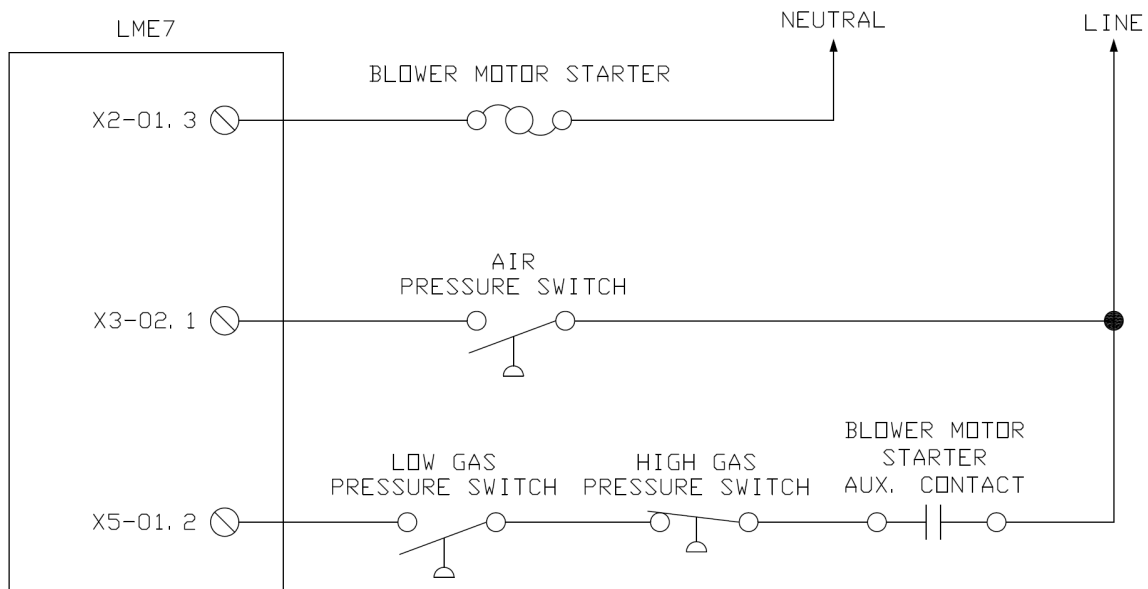


Sequence of Operation for Option 1

1. With the blower motor off, input X3-02.1 is checked in phase 21. The input must be deenergized, proving that the air pressure switch is open when the blower is off. If the input is energized during phase 21, a Loc 5 results.
2. Blower motor output X2-01.3 is energized in phase 22. The air pressure switch should close, energizing input X3-02.1. If X3-02.1 is not energized by the end of phase 22, a Loc 3 results.
3. When the blower motor is energized in phase 22, the blower motor auxiliary contact should also close. Input X5-01.2 must be energized in phase 30. If the input is not energized in phase 30, a Loc 20 results.

Air Pressure Switch and Motor Starter Auxiliary Contact Wiring for NFPA 86-2023 Compliance (continued)

Wiring Diagram Option 2 (PME71.401A1, PME71.402A1, and PME73.840A1)

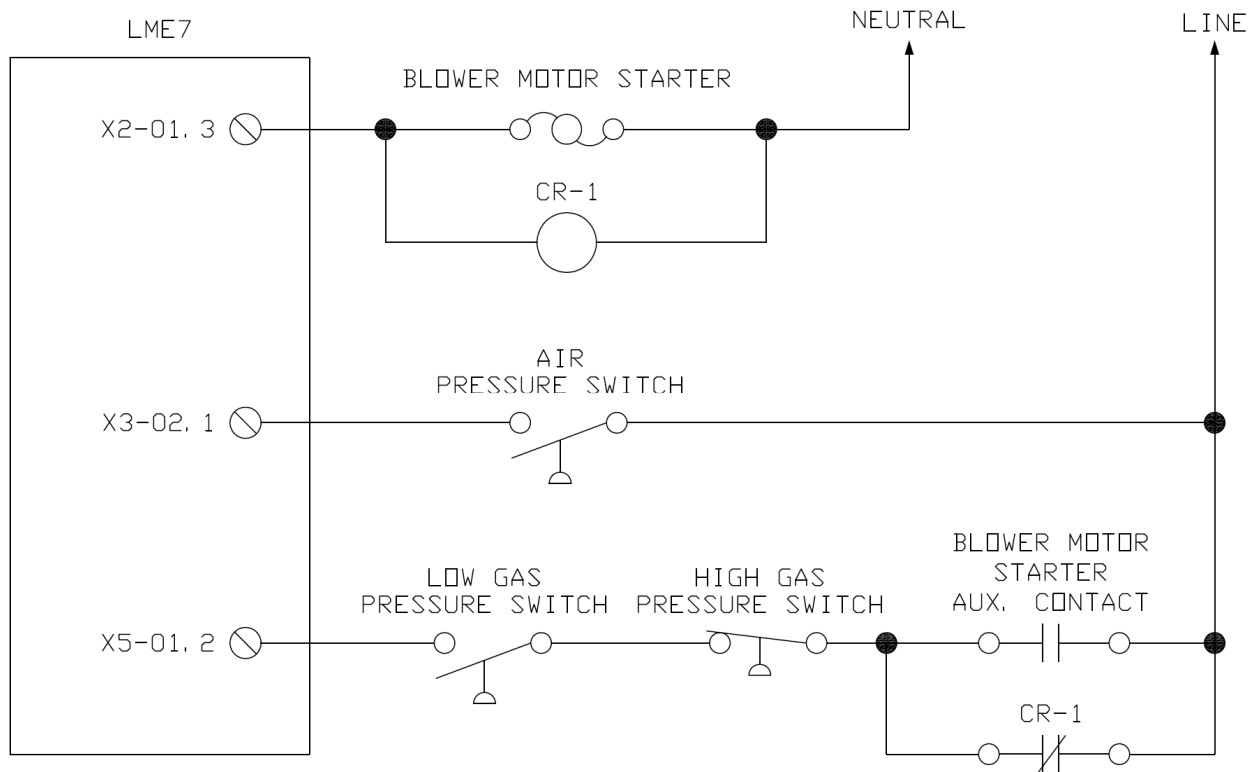


Sequence of Operation for Option 2

1. With the blower motor off, input X3-02.1 is checked in phase 21. The input must be deenergized, proving that the air pressure switch is open when the blower is off. If the input is energized during phase 21, a Loc 5 results.
2. Input X5-01.2 must be energized in phase 21. With the blower motor off, relay CR-1 is deenergized, and normally closed contact CR-1 is closed. As long as both gas pressure switches are in their normal state, input X5-01.2 will be energized. If the input is not energized in phase 21, a Loc 20 results.
3. Blower motor output X2-01.3 is energized in phase 22. The air pressure switch should close, energizing input X3-02.1. If X3-02.1 is not energized by the end of phase 22, a Loc 3 results.
4. When the blower motor is energized in phase 22, relay CR-1 is energized, and the normally closed contact CR-1 opens. The motor starter auxiliary contact must close, otherwise a Loc 20 results.

Air Pressure Switch and Motor Starter Auxiliary Contact Wiring for NFPA 86-2023 Compliance (continued)

Wiring Diagram Option 3

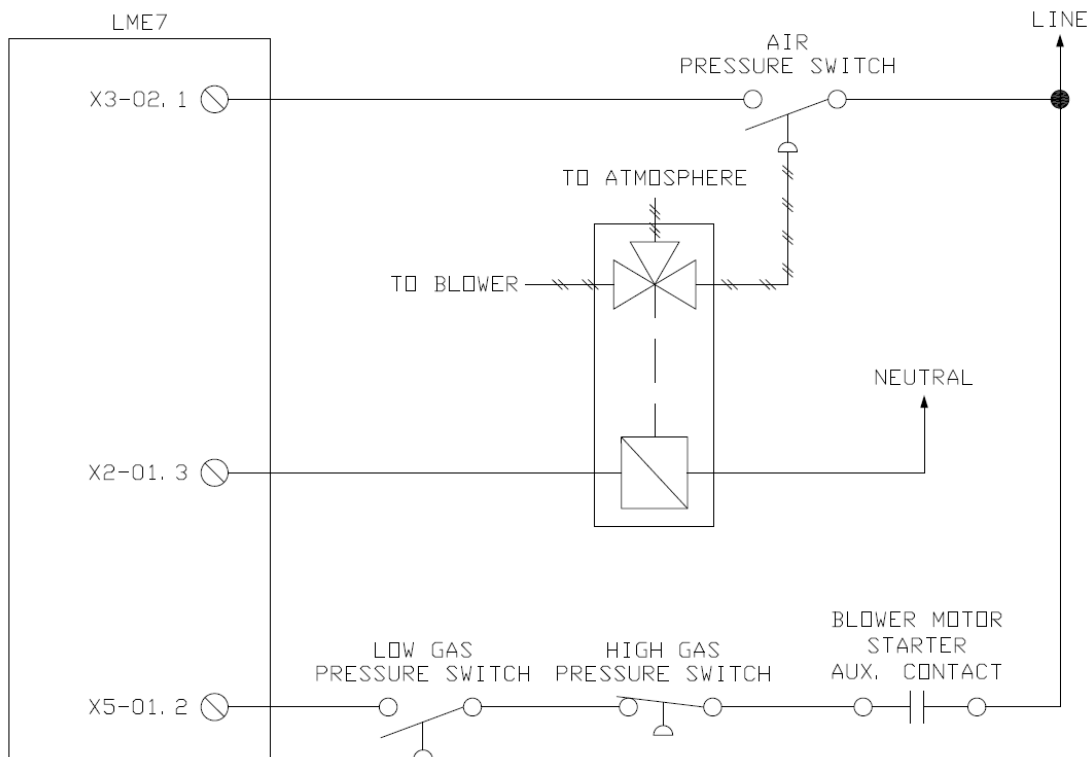

Sequence of Operation for Option 3

1. When the burner is off, the blower motor continuously runs. The blower motor output X2-01.3 is off, which diverts air pressure to atmosphere allowing the air pressure switch to be de-energized.
2. In phase 22 output X2-01.3 gets energized, powering the 3-way solenoid valve, and allows the air pressure switch to be made.
3. The blower motor starter auxiliary contact, wired to X5-01.2, will be made all the time.

Two Flame Detectors

Introduction

When using a piloted line burner with a flame propagating in excess of three feet, two flame detectors are required by both NFPA 86 and CSA B149.3. These flame detectors are:

1. Ignition flame detector – used to sense the pilot burner flame at the source of ignition
2. Propagation flame detector – used to sense the main burner flame at the farthest point from the source of ignition

The following procedure and wiring diagrams describe how to connect two flame detectors to a single LME7 burner control and how to use a timer relay to switch between the two flame detectors.


Procedure and Notes

1. An on-delay timer relay is required for this application. Set the timer relay for a time that is shorter than parameter 231 (pilot and main overlap time), but longer than the time it takes to light the main burner.
2. Wire the timer relay and flame detectors according to the appropriate wiring diagram on the following pages.
3. When main valve terminal X7-04.4 is energized in phase 50, the timer relay will energize. Once the preset time has elapsed, the normally open relay contact(s) will close and the normally closed relay contact(s) will open. This will cause the switchover from the ignition flame detector to the propagation flame detector.
4. On the following wiring diagrams, the ignition flame detector and propagation flame detector can be switched if desired. For example, if the diagram shows a flame rod as the ignition flame detector and a flame scanner as the propagation flame detector, it is also okay to use the flame rod as the propagation flame detector and a flame scanner as the ignition flame detector. To do so, simply wire the normally closed and normally open timer relay contacts reverse of what the wiring diagram shows.


Two Flame Detectors (continued)

Wiring Diagrams

Two Flame Rods (Any LME7)

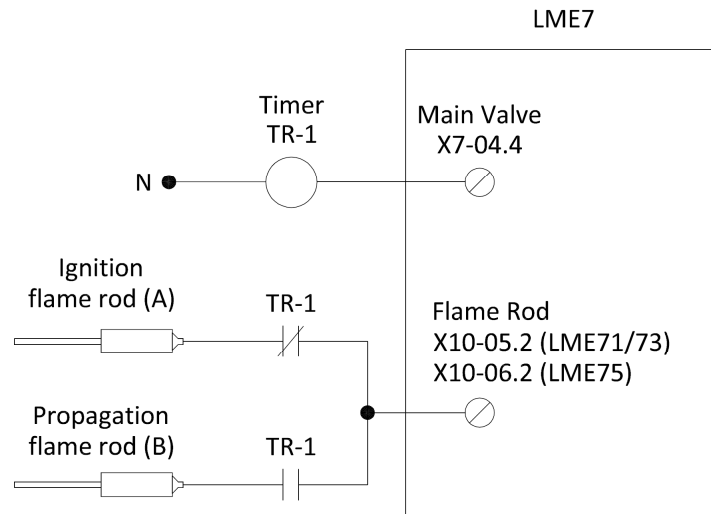


Two Flame Scanners (LME71/73)

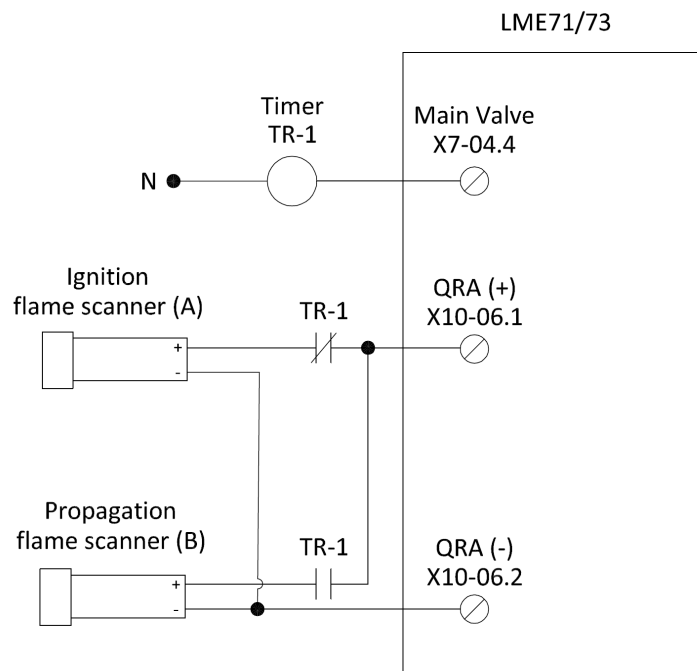


Two Flame Detectors (continued)

Two QRA75 Flame Scanners (LME75)

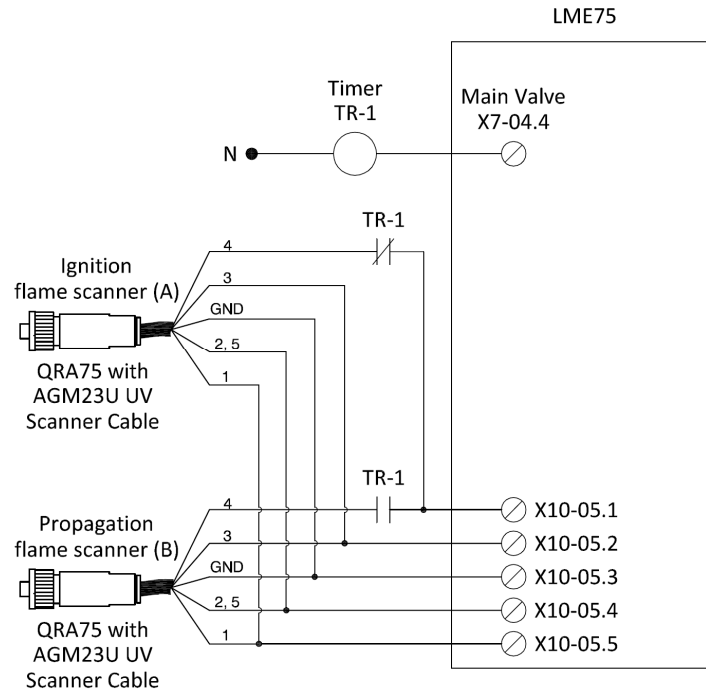


Two Flame Scanners (LME75)

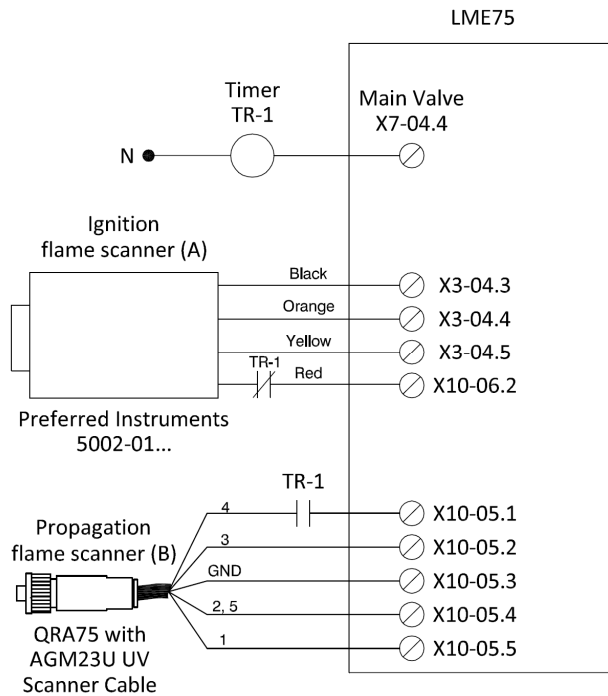


Two Flame Detectors (continued)

One Flame Rod and One Flame Scanner (LME71/73)

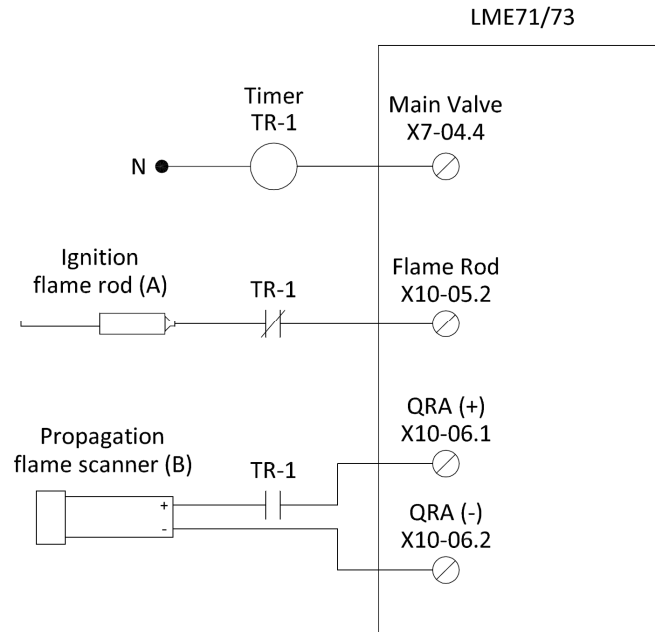

One Flame Rod and One Flame Scanner (LME75)

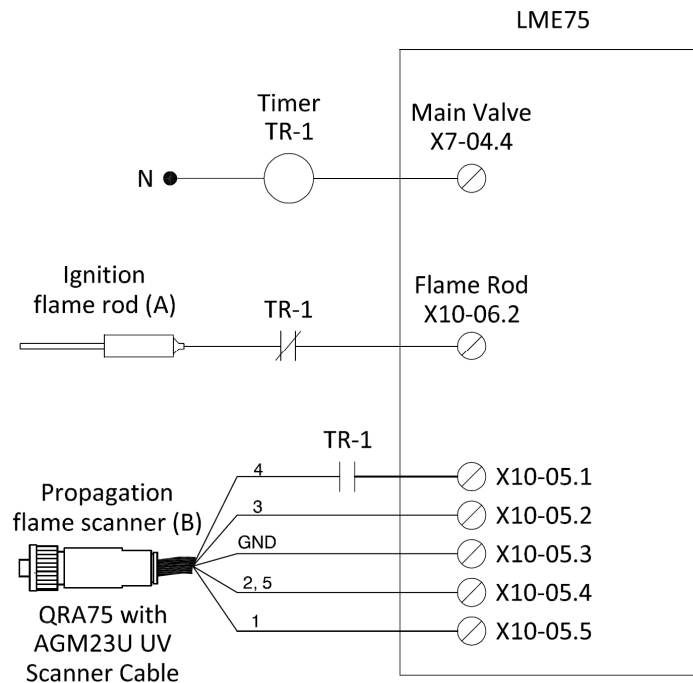

Intentionally Left Blank

SCC, Inc.

1250 Lunt Ave.

Elk Grove Village, IL 60007

USA

Telephone: (224) 366-8445

www.scccombustion.com



LME7 BOOK

LME-1000

April 29, 2026